


# 2013 Chevrolet Colorado

Submodel: | Engine Type: | Liters:  
Fuel Delivery: | Fuel:

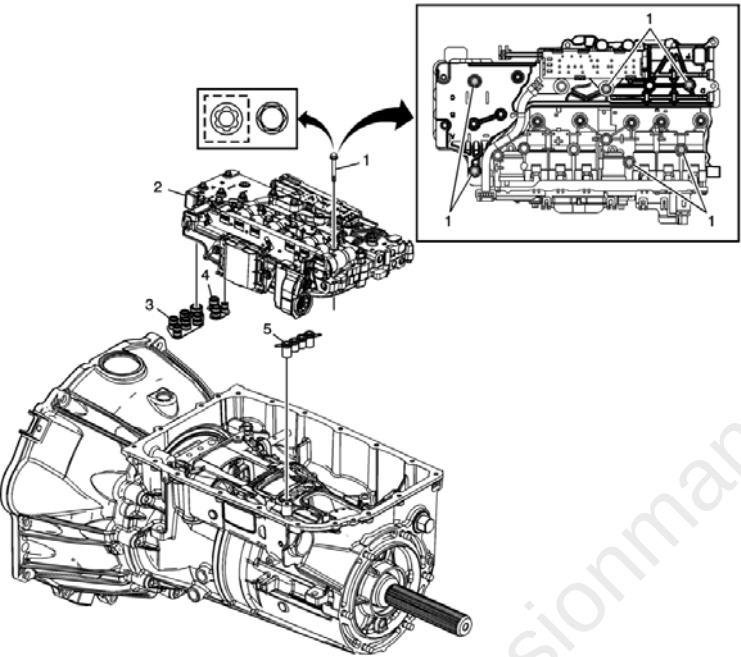

Control Valve Body Assembly Removal

| Callout | Component Name                                                                                                                                                                                                             |
|---------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         | Bolt M5 x 73 (Qty: 6)                                                                                                                                                                                                      |
|         | <b>Note:</b> Do not remove all the bolts in the control valve body assembly. Remove only the bolts indicated.                                                                                                              |
| 1       | <b>Special Tool</b><br>DT-48285 Valve Body Torx Plus Socket (if applicable)<br>For equivalent regional tools, refer to Special Tools.                                                                                      |
|         | Control Valve Body Assembly                                                                                                                                                                                                |
| 2       | <b>Caution:</b> Use care when handling the control valve body assembly. If dropped, damage to the internal components of the control solenoid valve assembly, including the transmission control module (TCM), may result. |
|         | Fluid Pump Seal Assembly                                                                                                                                                                                                   |
| 3       | <b>Caution:</b> Use care when removing the seal assemblies to avoid damaging the valve body seal bores.<br><b>Caution:</b> Refer to Seal Reuse Caution.                                                                    |
|         | Fluid Pump Seal Assembly                                                                                                                                                                                                   |
| 4       | <b>Caution:</b> Use care when removing the seal assemblies to avoid damaging the valve body seal bores.<br><b>Caution:</b> Refer to Seal Reuse Caution.                                                                    |
|         | Center Support Fluid Passage Seal Assembly                                                                                                                                                                                 |
| 5       | <b>Caution:</b> Use care when removing the seal assemblies to avoid damaging the case seal bores.<br><b>Caution:</b> Refer to Seal Reuse Caution.                                                                          |