

AUTOMATIC TRANSMISSION (G2391363)

SPECIFICATIONS

Lubricants

ⓘ CAUTION:

Make sure the correct Automatic Transmission Fluid (ATF) is used as specified. Use of any other fluids may result in a malfunction or failure.

RECOMMENDED LUBRICANT	SPECIFICATION	CAPACITY (LITRES)	CAPACITY (US QUARTS)
Automatic transmission fluid	Shell L12108 (ZF Lifeguard 8)	8.5	8.98

Maintenance

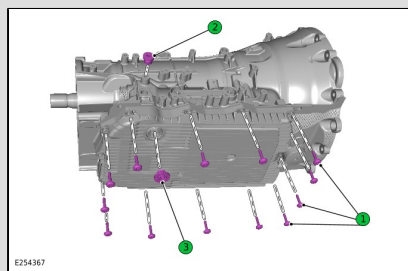
DESCRIPTION	INTERVALS
Normal maintenance	Filled for life.
Severe duty maintenance	Change the fluid at 48,000 km (30,000 miles) intervals

Torque Specifications

⚠ NOTE:

Numbers with a green background are a single use component.

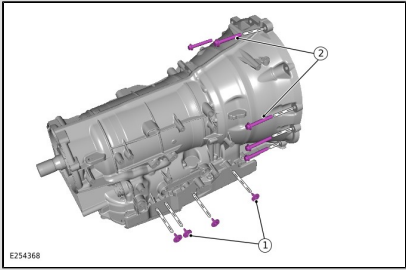
COMPONENT TORQUE LOCATION



Item	Description	Nm	lb-ft
1	Transmission fluid pan bolts	10	7.3

COMPONENT TORQUE LOCATION			
2	Transmission filler plug	*See procedure*	-
3	Transmission drain plug	8	5.9

Torque Specifications

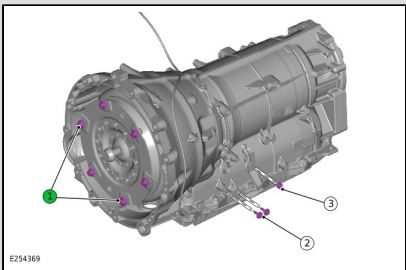
COMPONENT TORQUE LOCATION			
			
Item	Description	Nm	lb-ft
1	Transmission bolts	40	29.5
2	Transmission heatshield bolts	10	7.3

Torque Specifications



NOTE:

Numbers with a green background are a single use component.

COMPONENT TORQUE LOCATION			
			
Item	Description	Nm	lb-ft
1	Torque converter bolts	70	51.6
2	Transmission Emergency Park Release (EPR) cable bolts	10	7.3
3	Transmission Emergency Park Release (EPR) lever nut	12	8.8

mcx30.com