

PUBLISHED: 31-JUL-2019
2020.0 DEFENDER (LE), 311-01


AUTOMATIC TRANSMISSION

TORQUE CONVERTER (G2391373)

mcx30.com

SPECIAL TOOL(S)

307-613

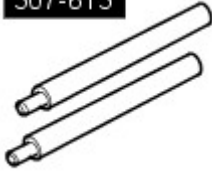

E84067

307-613

Holding Pins, Torque Converter

REMOVAL



NOTE:

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.


1. Raise and support the vehicle on a suitable 2 post lift.
Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).

2. Remove the transmission.
Refer to: [Transmission - INGENIUM I4 2.0L Diesel](#) (311-01 Automatic Transmission, Removal).
Refer to: [Transmission - INGENIUM I4 2.0L Petrol](#) (311-01 Automatic Transmission, Removal).
Refer to: [Transmission - INGENIUM I6 3.0L Petrol](#) (311-01 Automatic Transmission, Removal).

3.

ⓘ CAUTION:


Be prepared to collect escaping fluids.

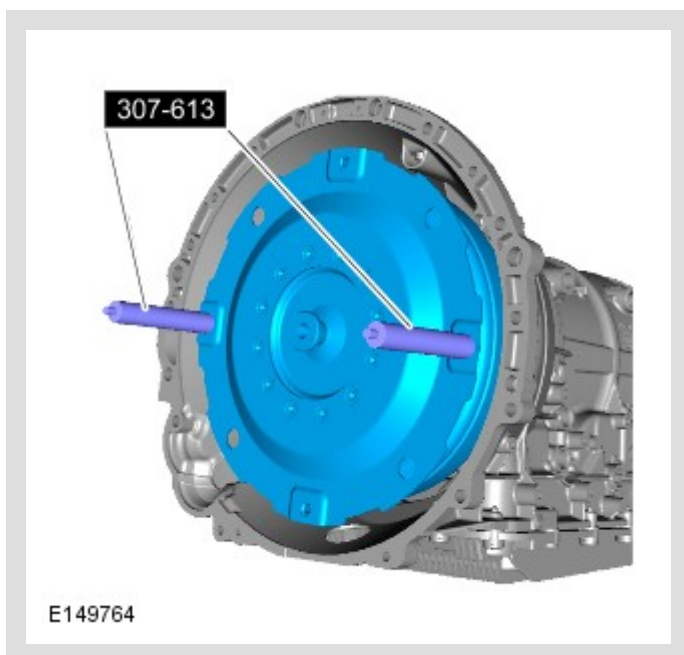

Use the special tools to remove the torque converter.

Special Tool(s): [307-613](#)

1.

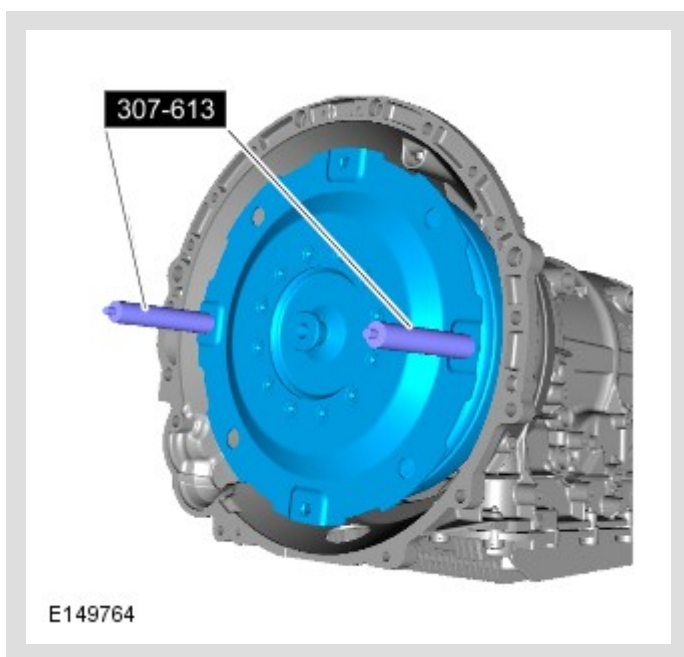


Use the special tools to install the torque converter.

Special Tool(s): [307-613](#)

2.

NOTE:

Make sure that the torque converter is fully engaged to the transmission.

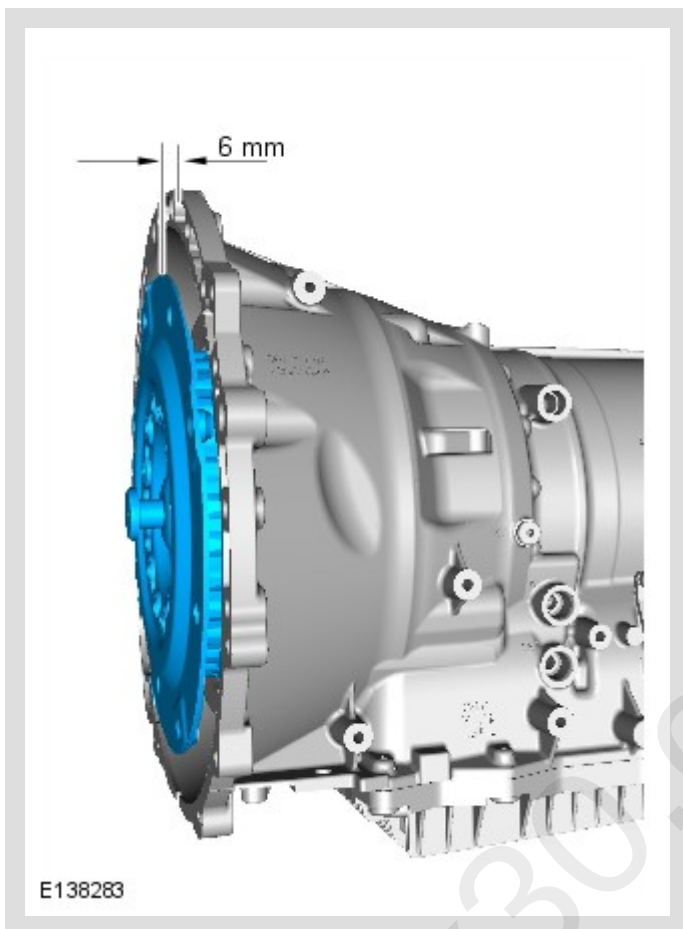

Make sure the torque converter is fitting as illustrated.

3.

Install the transmission.

Refer to: [Transmission - INGENIUM I4 2.0L Diesel](#) (311-01 Automatic Transmission, Installation).

Refer to: [Transmission - INGENIUM I4 2.0L Petrol](#) (311-01 Automatic Transmission, Installation).

Refer to: [Transmission - INGENIUM I6 3.0L Petrol](#) (311-01 Automatic Transmission, Installation).