

PUBLISHED: 01-AUG-2019
2020.0 DEFENDER (LE), 311-01

AUTOMATIC TRANSMISSION

SELECTOR SHAFT SEAL (G2391374)

mcx30.com

mcx30.com

SPECIAL TOOL(S)

mcx30.com

307-509-1



E50766

307-509-1

Extractor, Seal

307-509-2



E50767

307-509-2

Extractor, Seal

307-509-3



E50768

307-509-3

Installer, Seal

REMOVAL

⚠ CAUTION:

Before disconnecting any components, make sure the area is clean and free from foreign material. When disconnected all openings must be sealed.

△ NOTE:


- This procedure contains illustrations showing certain components removed to provide extra clarity.
- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.

1. Raise and support the vehicle on a suitable 2 post lift.
Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).

2. Remove the front driveshaft.
Refer to: [Front Driveshaft](#) (205-01 Driveshaft, Removal and Installation).




- Remove the nut(S).
- Remove the Emergency Park Release (EPR) lever.

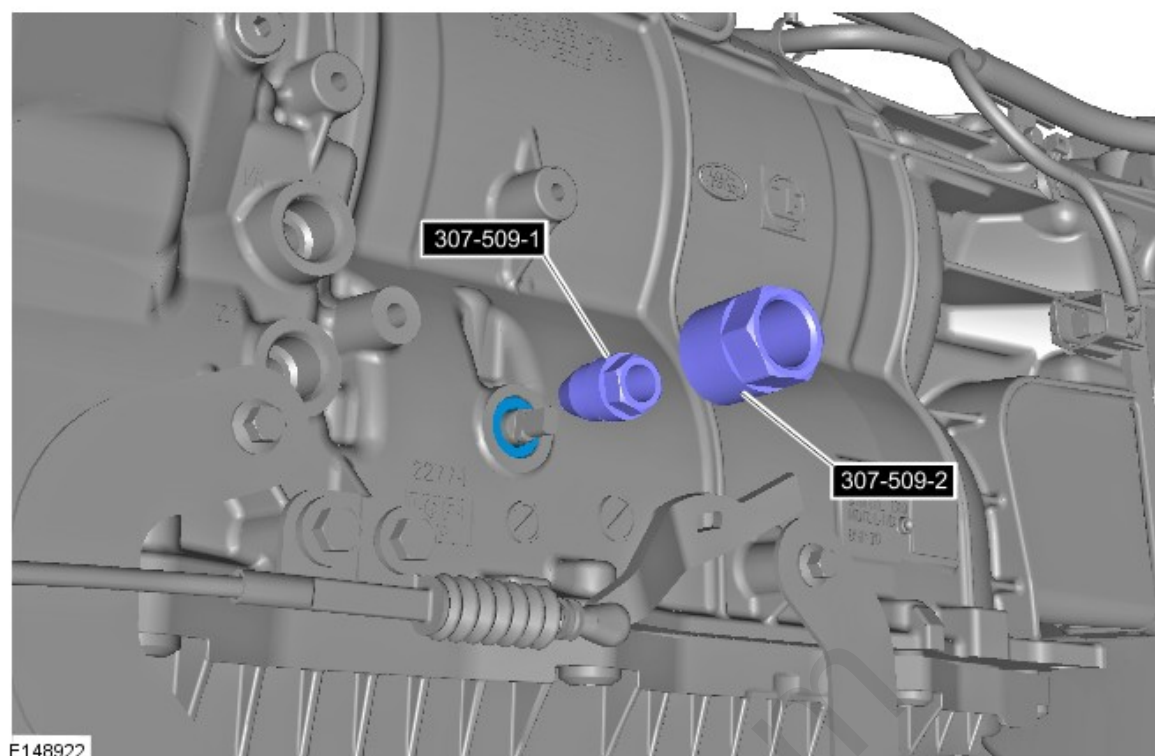

- Use the special tools to remove the seal.
Special Tool(s): [307-509-1](#), [307-509-2](#)
- Discard the seal.

INSTALLATION

1.

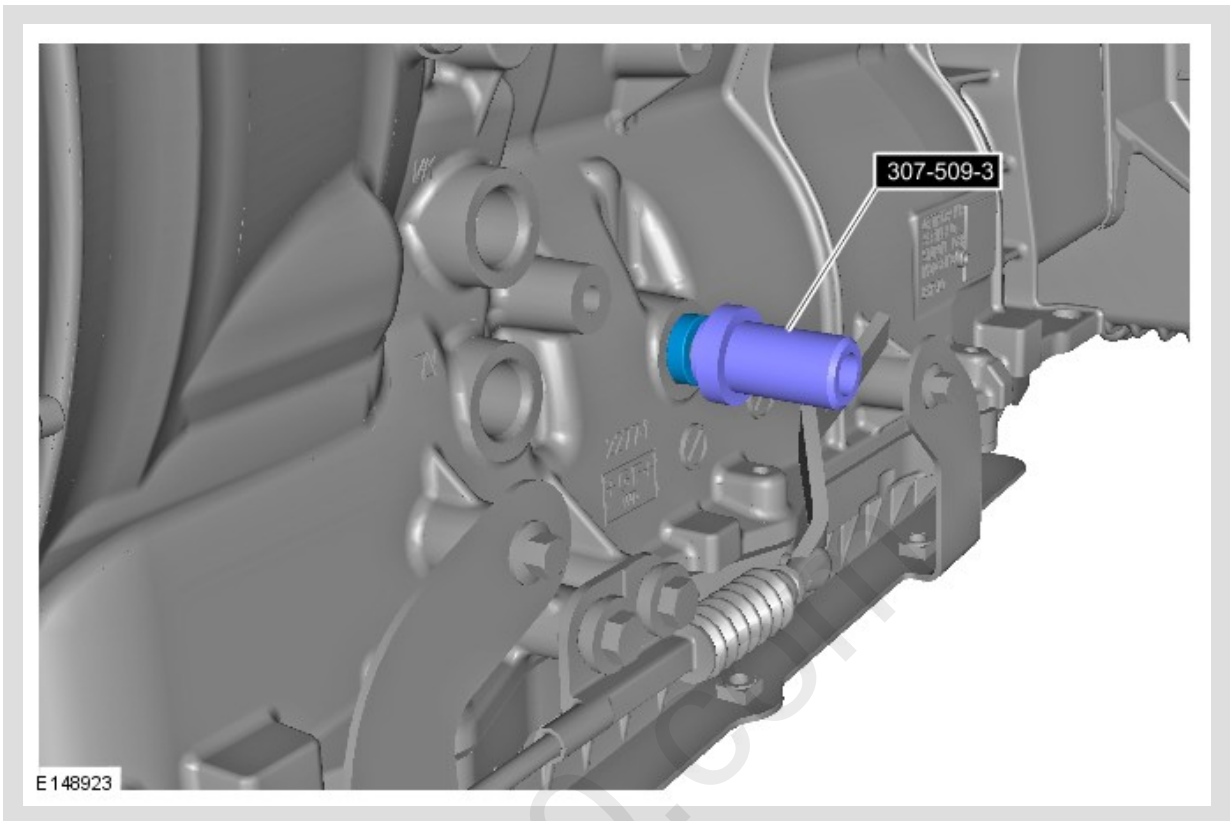

Use the special tool to install a new seal.

Special Tool(s): [307-509-3](#)

2.

- Install the Emergency Park Release (EPR) lever.
- Install and tighten the nut(S).

Torque: 12Nm

3.

Install the front driveshaft.

Refer to: [Front Driveshaft](#) (205-01 Driveshaft, Removal and Installation).