

PUBLISHED: 25-SEP-2019
2020.0 DEFENDER (LE), 311-02

AUTOMATIC TRANSMISSION EXTERNAL CONTROLS

EMERGENCY PARK RELEASE CABLE (G2416671)

mcx30.com

REMOVAL


 NOTE:

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.

1. Raise and support the vehicle on a suitable 2 post lift.
Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).


2. Remove the engine cover.
Refer to: [Engine Cover - INGENIUM I4 2.0L Diesel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
Refer to: [Engine Cover - INGENIUM I4 2.0L Petrol](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
Refer to: [Engine Cover - INGENIUM I6 3.0L Petrol](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

3.

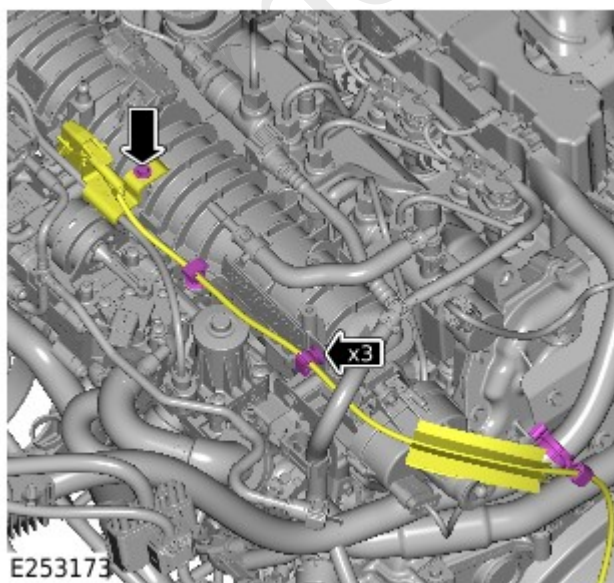


- Remove the bolt.
- Release Emergency Park Release (EPR) cable from the 3 clips.

4.

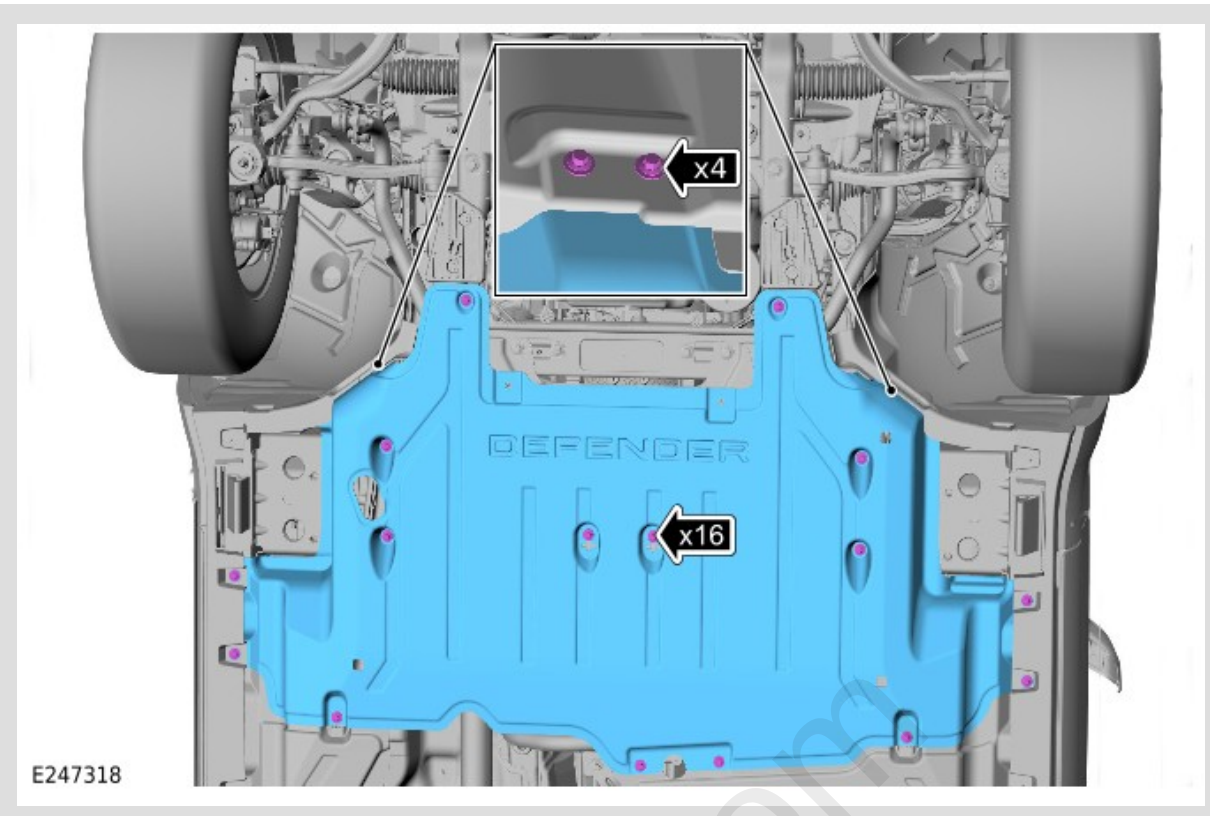


- Remove the 20 bolts.
- Remove the transmission undershield.

5.

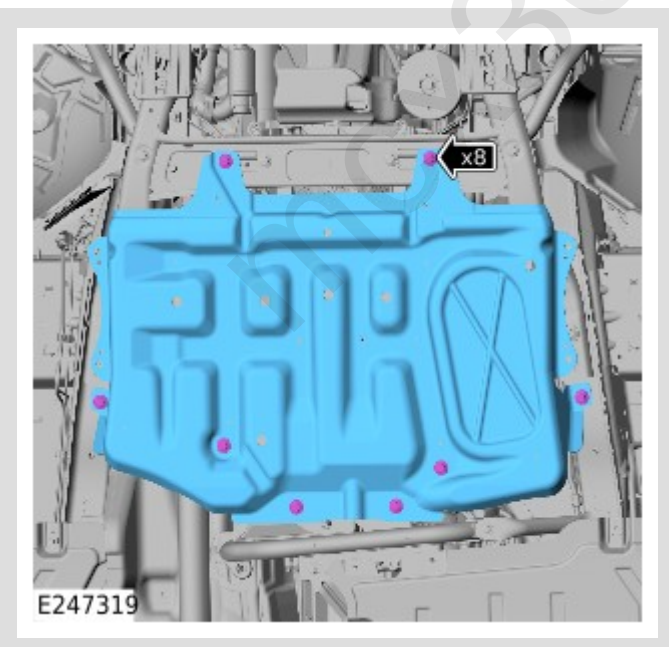

- Remove the 8 bolts.
- Remove the transmission undershield.

6.

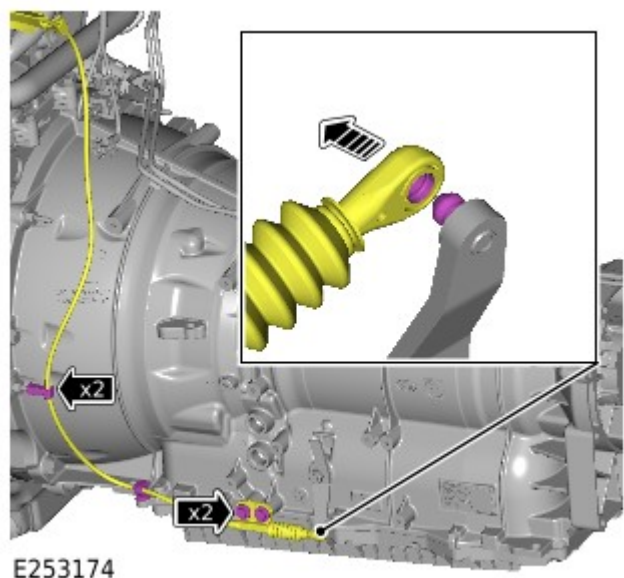


- Remove the 2 bolts.
- Release the clip.
- Release the EPR lever.

7.

NOTE:

This step is only required for 3.0L petrol vehicles.

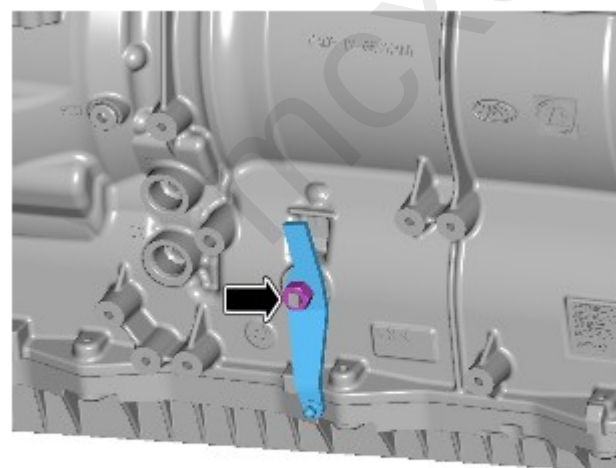

- Remove the nut.
- Remove the EPR lever from the transmission.

8.

 NOTE:

Note the orientation of the component prior to removal.



Remove the EPR cable assembly.

mcx30.com

INSTALLATION

1. Install the Emergency Park Release (EPR) cable assembly.

2.

NOTE:

This step is only required for 3.0L petrol vehicles.

- Install the EPR lever to the transmission.
- Install and tighten the nut.

Torque: 11Nm

3.

- Install the EPR cable to the transmission.
- Install the cable clip.
- Install and tighten the 2 bolts.

Torque: 10Nm

4.

- Install the transmission undershield.
- Install and tighten the 8 bolts.

Torque: 20Nm

5.

- Install the transmission undershield.
- Install and tighten the 20 bolts.

Torque: 10Nm

6.

- Install the EPR cable to the 3 clips.
- Install and tighten the bolt.

Torque: 10Nm

7.

- Install the engine cover.

Refer to: [Engine Cover - INGENIUM I4 2.0L Diesel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

Refer to: [Engine Cover - INGENIUM I4 2.0L Petrol](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

Refer to: [Engine Cover - INGENIUM I6 3.0L Petrol](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

mcx30.com