

FOUR-WHEEL DRIVE SYSTEMS (G2413534)

DIAGNOSIS AND TESTING

PRINCIPLES OF OPERATION

For a detailed description of the all wheel drive system and operation, refer to the relevant Description and Operation section in the workshop manual. REFER to: [Transfer Case](#) (315-00 Transfer Case, Description and Operation).

DTC INDEX

For a list of Diagnostic Trouble Codes (DTCs) that could be set on this vehicle, please refer to Section 100-00. REFER to: [Diagnostic Trouble Code Index - DTC: Transfer Case Control Module \(TCCM\)](#) (100-00 General Information, Description and Operation).

cmj|aGFyZG1vbnRvbjsyMDIwLTASLTE3VDlyOjAxOjUyLjc4MVo7OTAuMTk5LjEyMS4xMTc7