

Last Modified: 12-21-2017	6.8:8.0.48	Doc ID: RM100000000T2WO
Model Year Start: 2016	Model: LX570	Prod Date Range: [09/2015 -]
Title: AE80F AUTOMATIC TRANSMISSION / TRANSAXLE: ATF TEMPERATURE SENSOR: INSTALLATION; 2016 - 2018 MY LX570 [09/2015 -]		

INSTALLATION

PROCEDURE

1. INSTALL TEMPERATURE SENSOR

- (a) Coat the O-ring of the temperature sensor with ATF.


- (b) Using a 19 mm deep socket wrench, install the temperature sensor.

Torque:

15 N·m {153 kgf·cm, 11 ft·lbf}

NOTICE:

- When reusing the temperature sensor, inspect the O-ring.
- Make sure that the O-ring is not cracked or jammed when installing the temperature sensor.

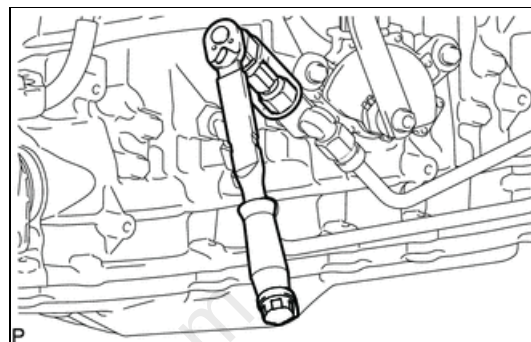

- (c) Connect the temperature sensor connector.

2. ADD AUTOMATIC TRANSMISSION FLUID

(See page [INFO](#))