


Last Modified: 12-21-2017	6.8:8.0.48	Doc ID: RM100000000T2WR
Model Year Start: 2016	Model: LX570	Prod Date Range: [09/2015 -]
Title: AE80F AUTOMATIC TRANSMISSION / TRANSAXLE: ATF TEMPERATURE SENSOR: REMOVAL; 2016 - 2018 MY LX570 [09/2015 -]		

REMOVAL

PROCEDURE

1. REMOVE TEMPERATURE SENSOR

(a) Disconnect the temperature sensor connector.

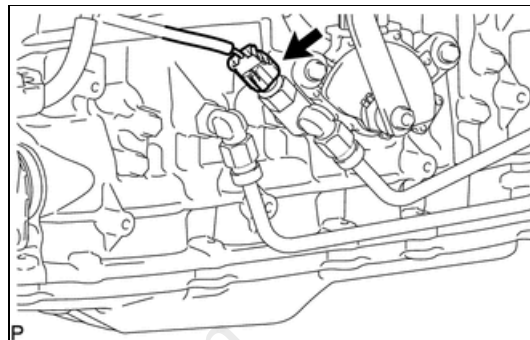

(b) Using a 19 mm deep socket wrench, remove the temperature sensor.

transmissionmanuals.com