

Last Modified: 12-21-2017	6.8:8.0.48	Doc ID: RM100000000T2X4
Model Year Start: 2016	Model: LX570	Prod Date Range: [09/2015 -]
Title: AE80F AUTOMATIC TRANSMISSION / TRANSAXLE: PARK / NEUTRAL POSITION SWITCH: INSPECTION; 2016 - 2018 MY LX570 [09/2015 -]		

INSPECTION

PROCEDURE

1. INSPECT PARK/NEUTRAL POSITION SWITCH ASSEMBLY


(a) Measure the resistance according to the value(s) in the table below.

Text in Illustration

*a	Component without harness connected (Park/Neutral Position Switch Assembly)
----	--

Standard Resistance:

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION
6 (IG) - 4 (C)	Shift lever in D and S	Below 1 Ω
6 (IG) - 5 (A)	Shift lever in P and R	Below 1 Ω
6 (IG) - 7 (PA)	Shift lever in P and N	Below 1 Ω
6 (IG) - 9 (B)	Shift lever in R, N, D and S	Below 1 Ω
1 (RB) - 2 (RL)	Shift lever in R	Below 1 Ω
3 (B) - 4 (C)	Shift lever in P and N	Below 1 Ω
6 (IG) - 4 (C)	Shift lever not in D and S	10 k Ω or higher
6 (IG) - 5 (A)	Shift lever not in P and R	10 k Ω or higher
6 (IG) - 7 (PA)	Shift lever not in P and N	10 k Ω or higher
6 (IG) - 9 (B)	Shift lever not in R, N, D and S	10 k Ω or higher
1 (RB) - 2 (RL)	Shift lever not in R	10 k Ω or higher
3 (B) - 4 (C)	Shift lever not in P and N	10 k Ω or higher

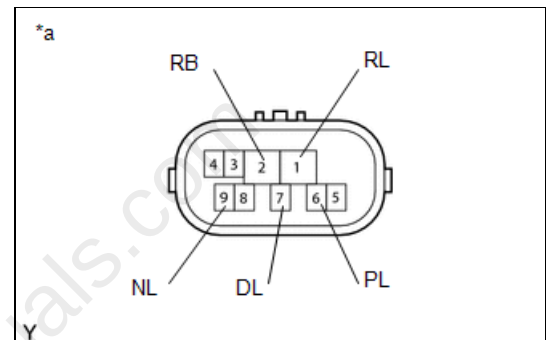

If the result is not as specified, replace the park/neutral position switch assembly.