

Last Modified: 12-21-2017	6.8:8.0.48	Doc ID: RM100000000T2X6
Model Year Start: 2016	Model: LX570	Prod Date Range: [09/2015 -]
Title: AE80F AUTOMATIC TRANSMISSION / TRANSAXLE: PARK / NEUTRAL POSITION SWITCH: REMOVAL; 2016 - 2018 MY LX570 [09/2015 -]		

REMOVAL


PROCEDURE

1. REMOVE FRONT EXHAUST PIPE ASSEMBLY

(See page [INFO](#))

2. REMOVE NO. 3 FRONT FLOOR HEAT INSULATOR

(a) Remove the 4 nuts and No. 3 front floor heat insulator.

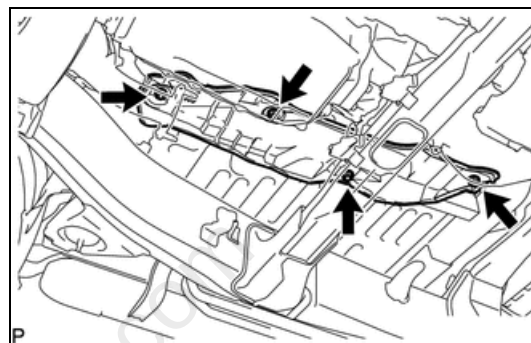


3. DISCONNECT FLOOR SHIFT GEAR SHIFTING ROD SUB-ASSEMBLY




(a) Remove the clip and pin, and disconnect the floor shift gear shifting rod sub-assembly from the transmission control shaft lever.

4. REMOVE PARK/NEUTRAL POSITION SWITCH ASSEMBLY

(a) Disconnect the switch connector.

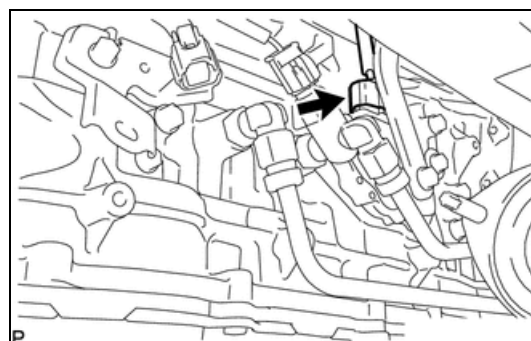


(b) Remove the nut, spring washer and transmission control shaft lever.

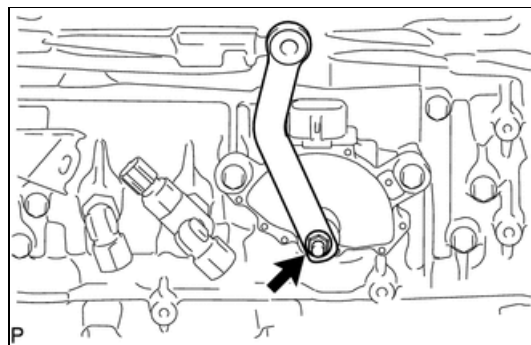

(c) Remove the bush from the transmission control shaft lever.



(d) Remove the No. 1 floor shift bush from the transmission control shaft lever.

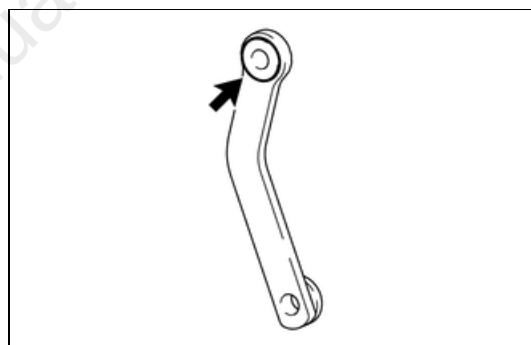


(e) Using a screwdriver, bend the tabs of the lock washer.

HINT:

Tape the screwdriver tip before use.

Text in Illustration

*1	Lock Washer
*2	Lock Nut
*a	Protective Tape

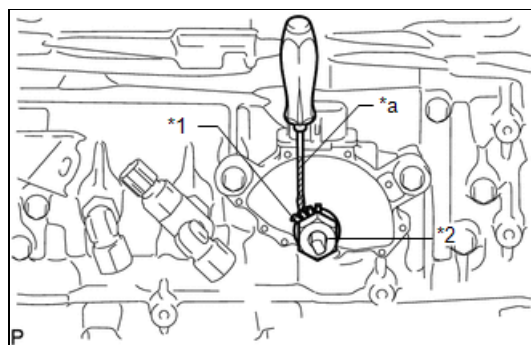

(f) Remove the lock nut and lock washer.

(g) Remove the 2 bolts and park/neutral position switch assembly.

HINT:

Make sure that the manual valve lever shaft has not been rotated prior to installing the park/neutral position switch assembly as the detent spring may become detached from the manual valve lever shaft.

