


Last Modified: 12-21-2017	6.8:8.0.48	Doc ID: RM100000000T2XP
Model Year Start: 2016	Model: LX570	Prod Date Range: [09/2015 -]
Title: AE80F AUTOMATIC TRANSMISSION / TRANSAXLE: SHIFT LEVER: ADJUSTMENT; 2016 - 2018 MY LX570 [09/2015 -]		

ADJUSTMENT


PROCEDURE

1. ADJUST SHIFT LEVER POSITION


- (a) While pushing the shift lock release button, move the shift lever to N.
- (b) Remove the nut and disconnect the floor shift gear shifting rod sub-assembly.

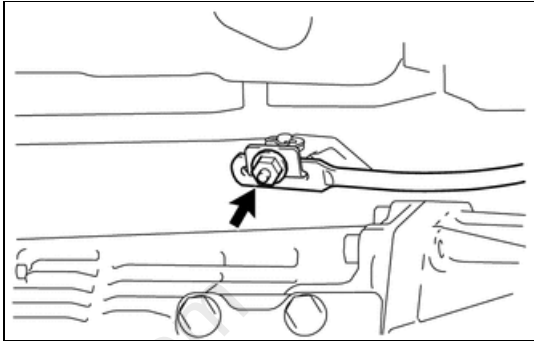

- (c) Turn the transmission control shaft lever RH of the park/neutral position switch assembly counterclockwise until it stops, and turn it clockwise 2 notches to set it to the N position.

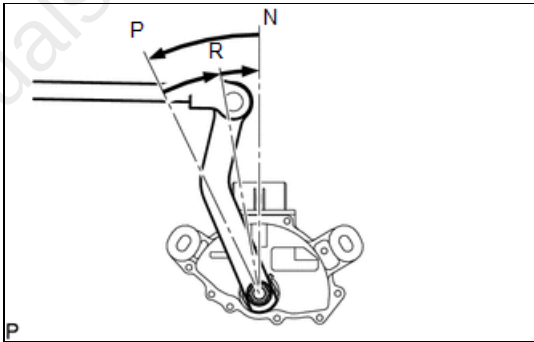

- (d) Temporarily install the floor shift gear shifting rod sub-assembly with the nut.

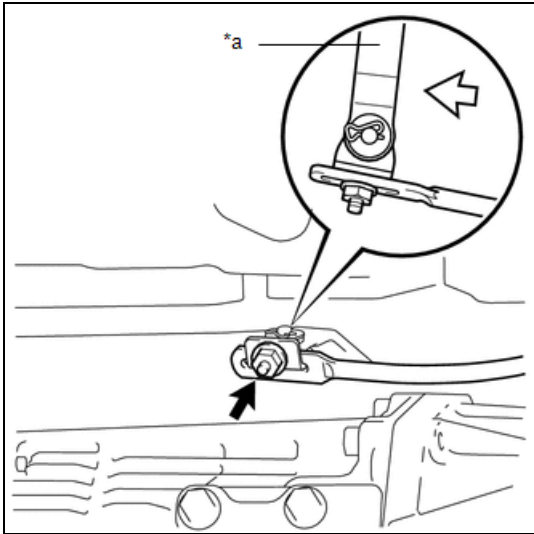

- (e) Tighten the nut while lightly pushing the lever rearward.

Torque:
 13 N·m {130 kgf·cm, 9 ft·lbf}
 Text in Illustration

*a	Lever
----	-------

	Nut
	Push

2. INSPECT SHIFT LEVER POSITION

INFO



transmissionmanuals.com