

Last Modified: 12-21-2017	6.8:8.0.48	Doc ID: RM100000000T2XU
Model Year Start: 2016	Model: LX570	Prod Date Range: [09/2015 -]
Title: AE80F AUTOMATIC TRANSMISSION / TRANSAXLE: SHIFT LEVER: DISASSEMBLY; 2016 - 2018 MY LX570 [09/2015 -]		

DISASSEMBLY


PROCEDURE

1. REMOVE NO. 2 INDOOR ELECTRICAL KEY ANTENNA ASSEMBLY

- (a) Disconnect the clamp and remove the No. 2 indoor electrical antenna assembly.


2. REMOVE LOWER POSITION INDICATOR HOUSING

- (a) Detach the 4 claws and remove the lower position indicator housing.

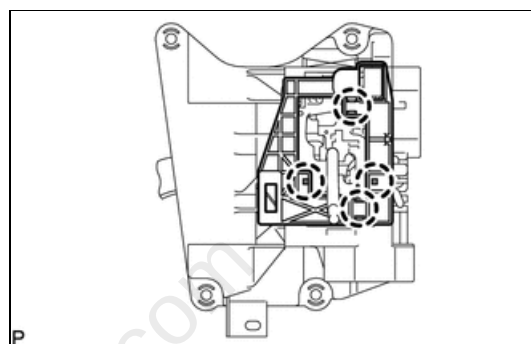

3. REMOVE SHIFT LOCK CONTROL ECU SUB-ASSEMBLY

- (a) Disconnect the shift lock solenoid connector.

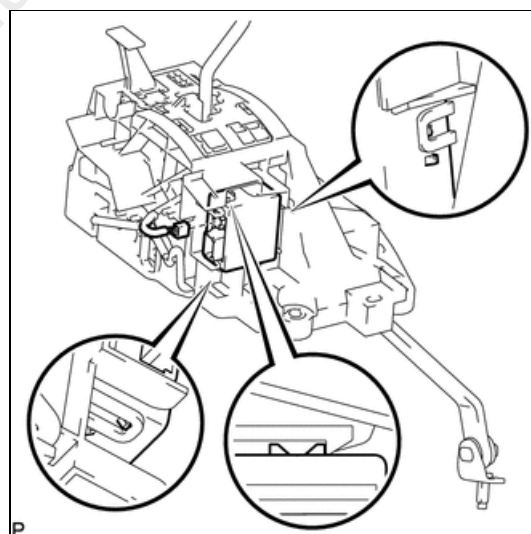

- (b) Detach the 3 claws and remove the shift lock control ECU sub-assembly from the lower shift lever assembly.