


Last Modified: 12-21-2017	6.8:8.0.48	Doc ID: RM100000000T2XQ
Model Year Start: 2016	Model: LX570	Prod Date Range: [09/2015 -]
Title: AE80F AUTOMATIC TRANSMISSION / TRANSAXLE: SHIFT LEVER: INSTALLATION; 2016 - 2018 MY LX570 [09/2015 -]		

INSTALLATION

PROCEDURE

1. INSTALL TRANSMISSION FLOOR SHIFT ASSEMBLY

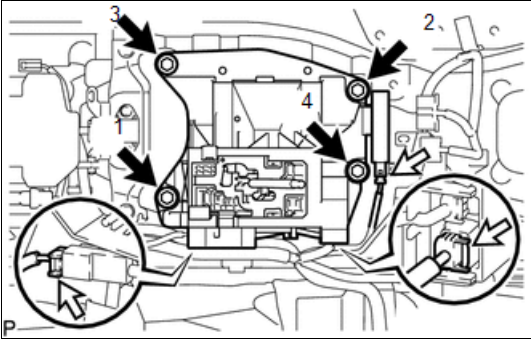

(a) Install the transmission floor shift assembly with the 4 bolts. Tighten the bolts in the order shown in the illustration.

Torque:
14 N·m {143 kgf·cm, 10 ft·lbf}


Text in Illustration

	Bolt
	Connector

(b) Connect the 3 connectors.


2. CONNECT FLOOR SHIFT GEAR SHIFTING ROD SUB-ASSEMBLY

(a) Turn the transmission control shaft lever RH of the park/neutral position switch counterclockwise until it stops, and then turn it clockwise 2 notches to set it to the N position.

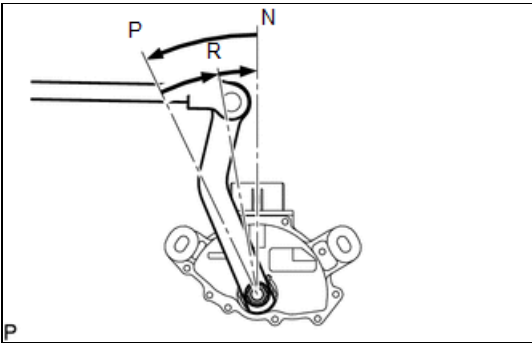

(b) Move the shift lever to N.

(c) Temporarily install the floor shift gear shifting rod sub-assembly to the transmission floor shift assembly with the nut.

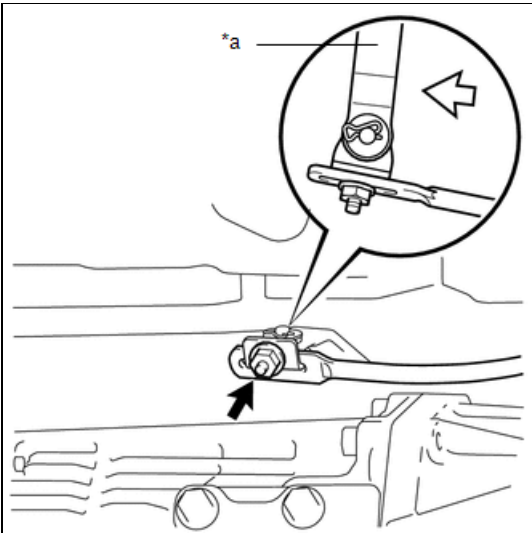

(d) Tighten the nut while lightly pushing the lever rearward.

Torque:
13 N·m {130 kgf·cm, 9 ft·lbf}

Text in Illustration

*a	Lever
	Nut
	Push

3. INSTALL FRONT CONSOLE BOX (w/o Cool Box)

(See page [INFO](#))

4. INSTALL FRONT CONSOLE BOX (w/ Cool Box)

(See page [INFO](#))

