

Last Modified: 12-21-2017	6.8:8.0.48	Doc ID: RM100000000T2XT
Model Year Start: 2016	Model: LX570	Prod Date Range: [09/2015 -]
Title: AE80F AUTOMATIC TRANSMISSION / TRANSAXLE: SHIFT LEVER: REMOVAL; 2016 - 2018 MY LX570 [09/2015 -]		

REMOVAL

PROCEDURE

1. REMOVE FRONT CONSOLE BOX (w/ Cool Box)


(See page [INFO](#))

2. REMOVE FRONT CONSOLE BOX (w/o Cool Box)

(See page [INFO](#))


3. DISCONNECT FLOOR SHIFT GEAR SHIFTING ROD SUB-ASSEMBLY

- (a) Move the shift lever to N.
- (b) Remove the nut and disconnect the floor shift gear shifting rod sub-assembly from the transmission floor shift assembly.

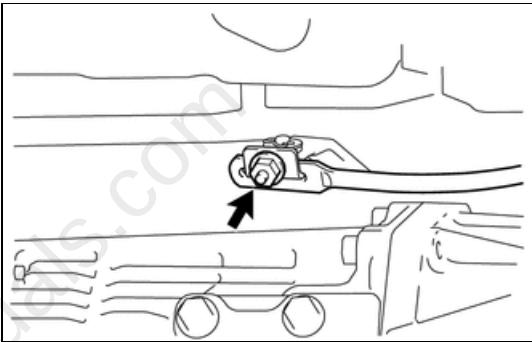

4. REMOVE TRANSMISSION FLOOR SHIFT ASSEMBLY

- (a) Disconnect the 3 connectors.

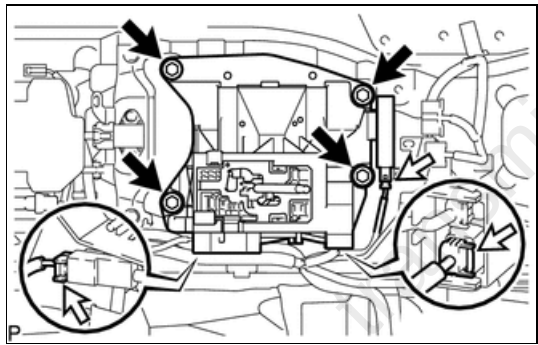

Text in Illustration

	Bolt
	Connector

- (b) Remove the 4 bolts and transmission floor shift assembly.