

Last Modified: 12-21-2017	6.8:8.0.48	Doc ID: RM100000000T2XE
Model Year Start: 2016	Model: LX570	Prod Date Range: [09/2015 -]
Title: AE80F AUTOMATIC TRANSMISSION / TRANSAXLE: SHIFT PADDLE SWITCH: REMOVAL; 2016 - 2018 MY LX570 [09/2015 -]		

REMOVAL

PROCEDURE

1. REMOVE STEERING WHEEL ASSEMBLY


(See page [INFO](#))

2. REMOVE STEERING PAD SWITCH ASSEMBLY

(See page [INFO](#))

3. REMOVE NO. 1 STEERING WHEEL BOSS COVER LOWER


(a) Remove the 2 screws.

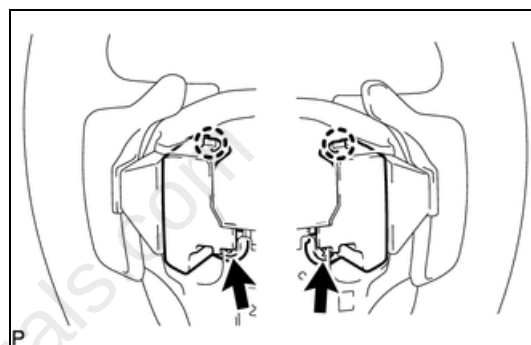


(b) Detach the 2 claws and remove the 2 No. 1 steering wheel boss cover lower.

4. REMOVE TRANSMISSION SHIFT SWITCH ASSEMBLY


(a) Disconnect the connector and 4 clamps.

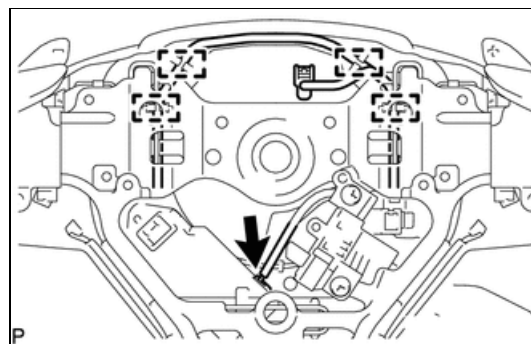

(b) Disconnect the 2 guides and remove the 2 screws.

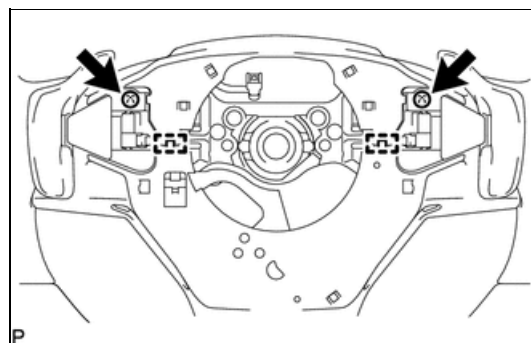

- (c) Detach the 4 claws and remove the 2 transmission shift switch assemblies with No. 1 switch wire from the steering wheel assembly.

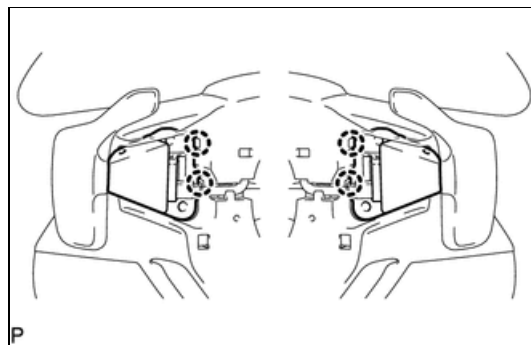

- (d) Disconnect the 2 transmission shift switch assembly connectors to remove the No. 1 switch wire from the 2 transmission shift switch assemblies.

transmissionmanuals.com