

Last Modified: 12-21-2017	6.8:8.0.48	Doc ID: RM100000000T2WN
Model Year Start: 2016	Model: LX570	Prod Date Range: [09/2015 -]
Title: AE80F AUTOMATIC TRANSMISSION / TRANSAXLE: SPEED SENSOR(for Output Revolution Sensor): REMOVAL; 2016 - 2018 MY LX570 [09/2015 -]		

REMOVAL


PROCEDURE

1. REMOVE TRANSMISSION VALVE BODY ASSEMBLY

(See page [INFO](#))

2. REMOVE TRANSMISSION REVOLUTION SENSOR (SP2)

(a) Remove the bolt and wire harness clamp.

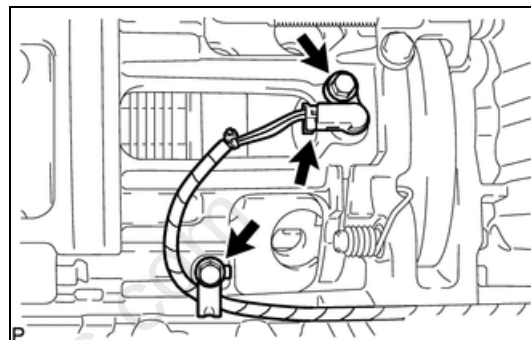

(b) Disconnect the connector from the transmission revolution sensor (SP2).

(c) Remove the bolt and transmission revolution sensor (SP2) from the automatic transmission case sub-assembly.