

|                                                                                                                            |                     |                                      |
|----------------------------------------------------------------------------------------------------------------------------|---------------------|--------------------------------------|
| <b>Last Modified:</b> 12-21-2017                                                                                           | 6.8:8.0.48          | <b>Doc ID:</b> RM100000000T2WS       |
| <b>Model Year Start:</b> 2016                                                                                              | <b>Model:</b> LX570 | <b>Prod Date Range:</b> [09/2015 - ] |
| <b>Title:</b> AE80F AUTOMATIC TRANSMISSION / TRANSAXLE: TRANSMISSION WIRE: INSTALLATION; 2016 - 2018 MY LX570 [09/2015 - ] |                     |                                      |

## INSTALLATION

### PROCEDURE

#### 1. INSTALL TRANSMISSION WIRE

- (a) Coat the O-ring with ATF.
- (b) Install the transmission wire with the bolt.


**Torque:**

**5.5 N·m {56 kgf·cm, 49 in·lbf}**

- (c) Connect the transmission wire connector.

**HINT:**

Push up the lever until the claw of the transmission wire connector makes a connection sound.

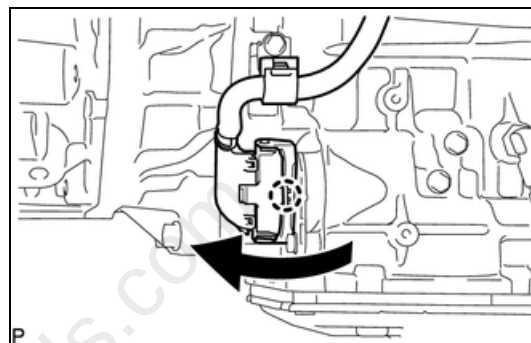

- (d) Install the wire harness clamp with the bolt.

**Torque:**

**5.5 N·m {56 kgf·cm, 49 in·lbf}**

- (e) Connect the connector to the transmission revolution sensor (SP2).

#### 2. INSTALL TRANSMISSION VALVE BODY ASSEMBLY

(See page [INFO](#) )