

Last Modified: 12-21-2017	6.8:8.0.48	Doc ID: RM100000000T2WV
Model Year Start: 2016	Model: LX570	Prod Date Range: [09/2015 -]
Title: AE80F AUTOMATIC TRANSMISSION / TRANSAXLE: TRANSMISSION WIRE: REMOVAL; 2016 - 2018 MY LX570 [09/2015 -]		

REMOVAL


PROCEDURE

1. REMOVE TRANSMISSION VALVE BODY ASSEMBLY

(See page [INFO](#))

2. REMOVE TRANSMISSION WIRE

- (a) Disconnect the connector from the transmission revolution sensor (SP2).

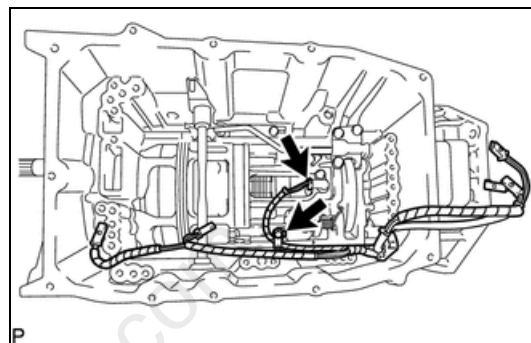


- (b) Remove the bolt and wire harness clamp.

- (c) Disconnect the transmission wire connector.

HINT:

Detach the claw, pull the lever, and then disconnect the transmission wire connector.

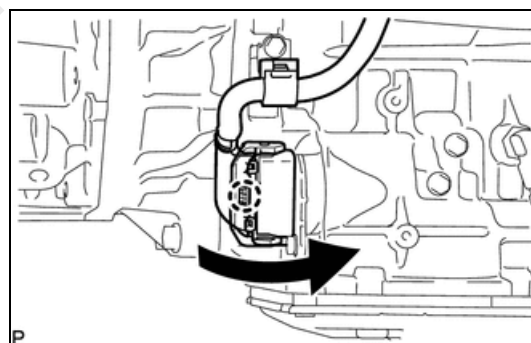

- (d) Remove the bolt and pull out the transmission wire.

