

|                                                                                                     |                     |                                      |
|-----------------------------------------------------------------------------------------------------|---------------------|--------------------------------------|
| <b>Last Modified:</b> 12-21-2017                                                                    | 6.8:8.0.48          | <b>Doc ID:</b> RM100000000T31S       |
| <b>Model Year Start:</b> 2016                                                                       | <b>Model:</b> LX570 | <b>Prod Date Range:</b> [09/2015 - ] |
| <b>Title:</b> AXLE AND DIFFERENTIAL: FRONT AXLE HUB: DISASSEMBLY; 2016 - 2018 MY LX570 [09/2015 - ] |                     |                                      |

## DISASSEMBLY

### CAUTION / NOTICE / HINT

#### NOTICE:

Do not allow foreign matter, etc. to contact the ABS rotor bearing.

## PROCEDURE

### 1. REMOVE FRONT AXLE WITH ABS ROTOR BEARING ASSEMBLY

(a) Gently fix the front axle hub in a vise.

#### NOTICE:

Do not damage the threads of the hub bolts.

(b) Using SST, remove the bearing.

**SST: 09950-40011**

09951-04020

09952-04010

09953-04020

09954-04010


09955-04061

09957-04010

09958-04011

**SST: 09950-60010**


09951-00550

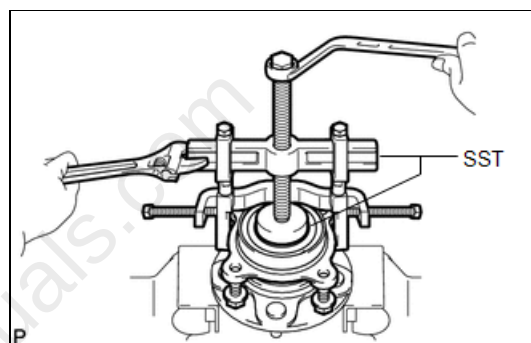

(c) If part of the bearing remains in the front axle hub, use SST to remove it.


**SST: 09950-00020**

**SST: 09950-00030**

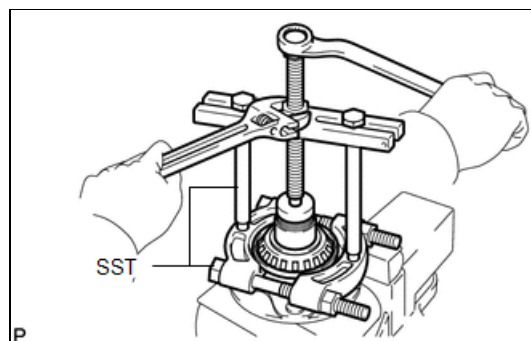

### 2. REMOVE FRONT AXLE HUB OIL SEAL

(a) Using a screwdriver, pry off the oil seal.

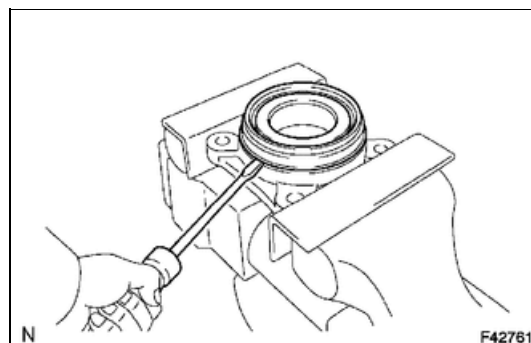

F42761