

Last Modified: 12-21-2017	6.8:8.0.48	Doc ID: RM100000000T31T
Model Year Start: 2016	Model: LX570	Prod Date Range: [09/2015 -]
Title: AXLE AND DIFFERENTIAL: FRONT AXLE HUB: REASSEMBLY; 2016 - 2018 MY LX570 [09/2015 -]		

REASSEMBLY

CAUTION / NOTICE / HINT

NOTICE:

Do not allow foreign matter, etc. to contact the ABS rotor bearing.

PROCEDURE

1. INSTALL FRONT AXLE HUB OIL SEAL

(a) Using SST and a press, press in a new oil seal.


SST: 09608-36010

SST: 09950-70010

09951-07100

NOTICE:

Do not damage the oil seal.

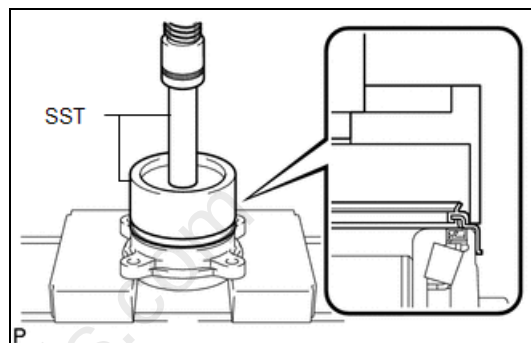

2. INSTALL FRONT AXLE WITH ABS ROTOR BEARING ASSEMBLY

(a) Using SST and a press, press in a new bearing.

SST: 09608-32010

NOTICE:

- Insert 4 bolts into the bearing before installing the axle hub.
- Make sure to securely fit the bearing to the axle hub.

