

Last Modified: 12-21-2017	6.8:8.0.48	Doc ID: RM100000000T316
Model Year Start: 2016	Model: LX570	Prod Date Range: [09/2015 -]
Title: DRIVE SHAFT / PROPELLER SHAFT: FRONT DRIVE SHAFT ASSEMBLY: REMOVAL; 2016 - 2018 MY LX570 [09/2015 -]		

REMOVAL

CAUTION / NOTICE / HINT

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

PROCEDURE

1. REMOVE FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY LH

INFO

2. REMOVE FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY RH

INFO

3. REMOVE NO. 1 ENGINE UNDER COVER SUB-ASSEMBLY

INFO

4. REMOVE NO. 2 ENGINE UNDER COVER

INFO

5. DRAIN DIFFERENTIAL OIL

INFO

6. REMOVE FRONT AXLE ASSEMBLY LH

- (a) Remove the front axle assembly (See page [INFO](#)).

7. REMOVE FRONT DRIVE SHAFT ASSEMBLY LH

- (a) Using SST, remove the drive shaft.

SST: 09520-01010

SST: 09520-24010

09520-32040

NOTICE:

- Be careful not to damage the dust cover and oil seal.
- Move the drive shaft while keeping it level.

