

Last Modified: 12-21-2017	6.8:8.0.48	Doc ID: RM100000000T31A
Model Year Start: 2016	Model: LX570	Prod Date Range: [09/2015 -]
Title: DRIVE SHAFT / PROPELLER SHAFT: FRONT PROPELLER SHAFT ASSEMBLY: INSTALLATION; 2016 - 2018 MY LX570 [09/2015 -]		


INSTALLATION

PROCEDURE

1. INSTALL FRONT PROPELLER SHAFT ASSEMBLY

(a) for Differential Side:

(1) Align the matchmarks on the yoke and differential flange.

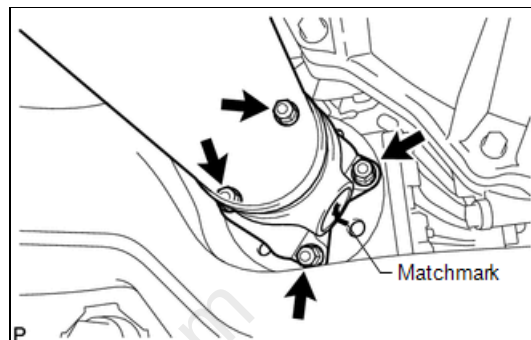


(2) Connect the propeller shaft with the 4 washers and 4 nuts.

Torque:

88 N·m {900 kgf·cm, 65 ft·lbf}

(b) for Transfer Side:

(1) Align the matchmarks on the yoke and transfer flange.

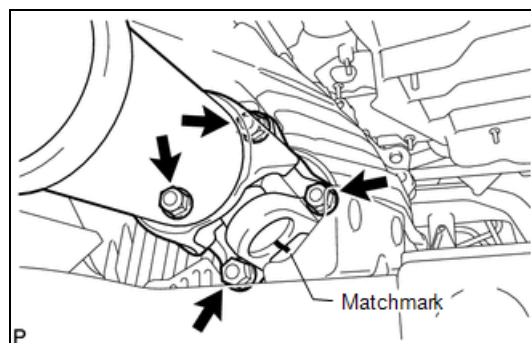

(2) Install the propeller shaft with the 4 washers and 4 nuts.

Torque:


88 N·m {900 kgf·cm, 65 ft·lbf}

2. INSTALL PROPELLER SHAFT HEAT INSULATOR

(a) Install the insulator with the 2 bolts.

Torque:

16 N·m {163 kgf·cm, 12 ft·lbf}

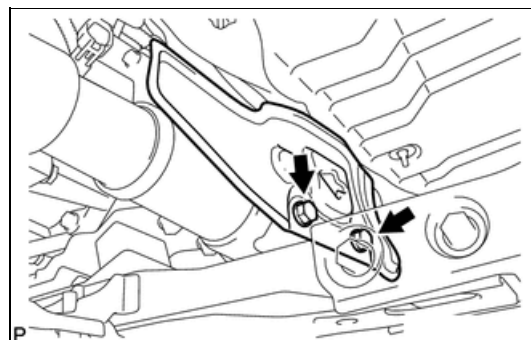

3. INSTALL NO. 2 ENGINE UNDER COVER

INFO

4. INSTALL NO. 1 ENGINE UNDER COVER SUB-ASSEMBLY

INFO

5. INSTALL FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY LH

INFO

6. INSTALL FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY RH

INFO

transmissionmanuals.com