

Last Modified: 12-21-2017	6.8:8.0.48	Doc ID: RM100000000T31D
Model Year Start: 2016	Model: LX570	Prod Date Range: [09/2015 -]
Title: DRIVE SHAFT / PROPELLER SHAFT: FRONT PROPELLER SHAFT ASSEMBLY: REMOVAL; 2016 - 2018 MY LX570 [09/2015 -]		

REMOVAL

PROCEDURE

1. REMOVE FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY LH

INFO

2. REMOVE FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY RH

INFO

3. REMOVE NO. 1 ENGINE UNDER COVER SUB-ASSEMBLY


INFO

4. REMOVE NO. 2 ENGINE UNDER COVER

INFO

5. REMOVE PROPELLER SHAFT HEAT INSULATOR


- (a) Remove the 2 bolts and insulator.

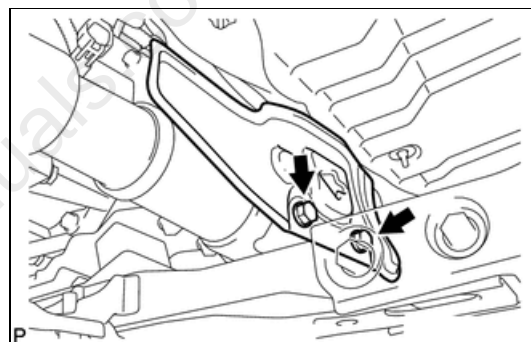

6. REMOVE FRONT PROPELLER SHAFT ASSEMBLY


- (a) for Transfer Side:

- (1) Place matchmarks on the propeller shaft flange and transfer flange.
- (2) Remove the 4 nuts and 4 washers.

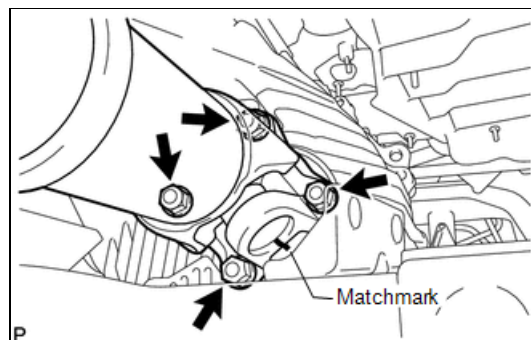

- (b) for Differential Side:

- (1) Place matchmarks on the propeller shaft flange and differential flange.
- (2) Remove the 4 nuts and 4 washers.

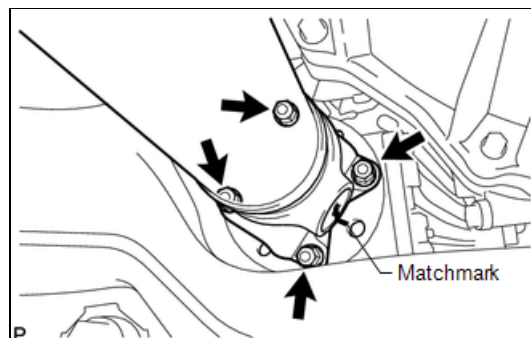

(c) Remove the front propeller shaft.

transmissionmanuals.com