


Last Modified: 12-21-2017	6.8:8.0.48	Doc ID: RM100000000T31G
Model Year Start: 2016	Model: LX570	Prod Date Range: [09/2015 -]
Title: DRIVE SHAFT / PROPELLER SHAFT: PROPELLER SHAFT ASSEMBLY: INSTALLATION; 2016 - 2018 MY LX570 [09/2015 -]		

INSTALLATION

PROCEDURE

1. INSTALL REAR PROPELLER SHAFT

- (a) Align the matchmarks on the propeller shaft flange and transfer flange.

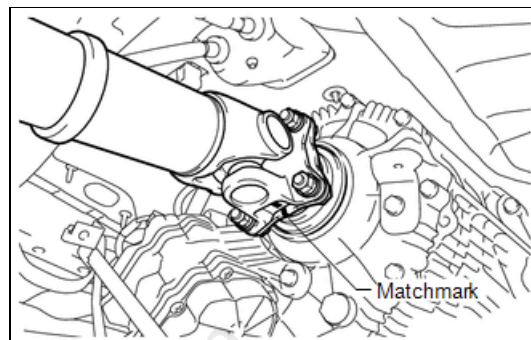


- (b) Connect the propeller shaft with the 4 washers and 4 nuts.

Torque:

88 N·m {900 kgf·cm, 65 ft·lbf}

- (c) Align the matchmarks on the propeller shaft flange and differential flange.

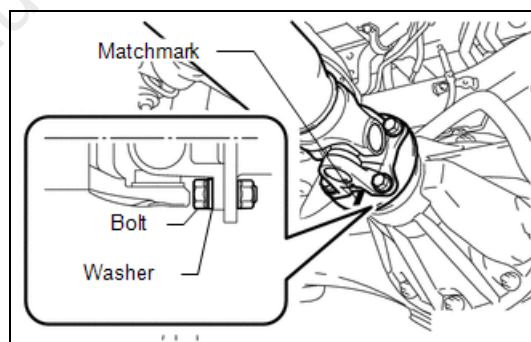

- (d) Install the propeller shaft with the 4 bolts, 4 washers and 4 nuts.

Torque:

88 N·m {900 kgf·cm, 65 ft·lbf}

2. INSTALL TRANSFER HEAT INSULATOR

- (a) Install the insulator with the 4 bolts.

Torque:

30 N·m {306 kgf·cm, 22 ft·lbf}

