


Last Modified: 12-21-2017	6.8:8.0.48	Doc ID: RM100000000T31J
Model Year Start: 2016	Model: LX570	Prod Date Range: [09/2015 -]
Title: DRIVE SHAFT / PROPELLER SHAFT: PROPELLER SHAFT ASSEMBLY: REMOVAL; 2016 - 2018 MY LX570 [09/2015 -]		

REMOVAL

PROCEDURE

1. REMOVE TRANSFER HEAT INSULATOR


- (a) Remove the 4 bolts and insulator.

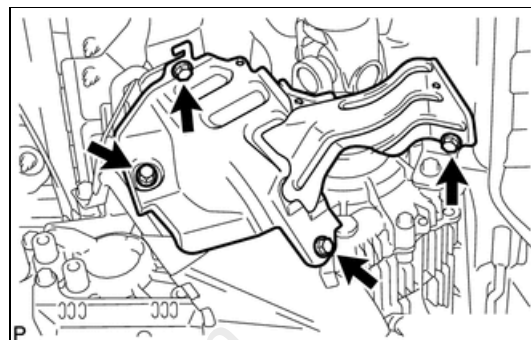

2. REMOVE REAR PROPELLER SHAFT ASSEMBLY

- (a) for Transfer Side:


- (1) Place matchmarks on the propeller shaft flange and transfer flange.

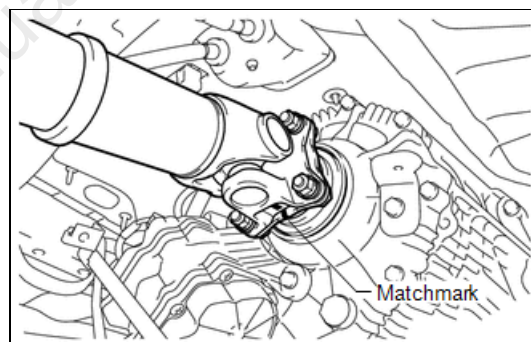

- (2) Remove the 4 nuts and 4 washers.

- (b) for Differential Side:

- (1) Place matchmarks on the propeller shaft flange and rear differential flange.

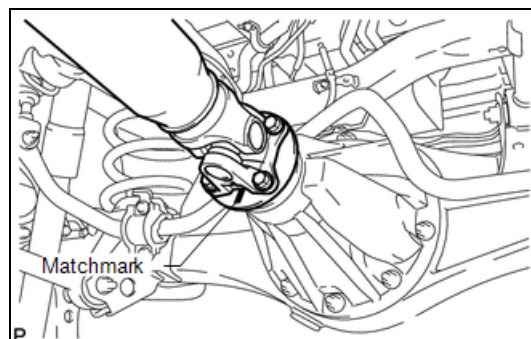

- (2) Remove the 4 nuts, 4 bolts and 4 washers.

- (c) Remove the rear propeller shaft.