

|                                                                                                           |                     |                                      |
|-----------------------------------------------------------------------------------------------------------|---------------------|--------------------------------------|
| <b>Last Modified:</b> 12-21-2017                                                                          | 6.8:8.0.48          | <b>Doc ID:</b> RM100000000T30Z       |
| <b>Model Year Start:</b> 2016                                                                             | <b>Model:</b> LX570 | <b>Prod Date Range:</b> [09/2015 - ] |
| <b>Title:</b> JF2A TRANSFER / 4WD / AWD: 4WD CONTROL ECU: INSTALLATION; 2016 - 2018 MY LX570 [09/2015 - ] |                     |                                      |

## INSTALLATION

### PROCEDURE

#### 1. INSTALL 4 WHEEL DRIVE CONTROL ECU

- (a) Connect the 2 connectors to the 4 wheel drive control ECU.
- (b) Attach the 2 guides.
- (c) Install the 4 wheel drive control ECU with the bolt.

##### Torque:

13 N·m {127 kgf·cm, 9 ft·lbf}

#### 2. INSTALL COWL SIDE JUNCTION BLOCK RH

INFO

#### 3. INSTALL LOWER NO. 2 INSTRUMENT PANEL FINISH PANEL

INFO

#### 4. INSTALL INSTRUMENT PANEL BOX DOOR KNOB

INFO

#### 5. INSTALL LOWER NO. 2 INSTRUMENT PANEL AIRBAG ASSEMBLY

INFO

#### 6. INSTALL INNER NO. 1 INSTRUMENT PANEL BRACKET COVER RH

INFO

#### 7. INSTALL LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY RH

INFO

#### 8. INSTALL NO. 2 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY

INFO

#### 9. INSTALL COWL SIDE TRIM BOARD RH

INFO

#### 10. INSTALL FRONT DOOR SCUFF PLATE RH

INFO

#### 11. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

##### NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (See page [INFO](#) ).

#### 12. CHECK SRS WARNING LIGHT

(See page [INFO](#) )