

Last Modified: 12-21-2017	6.8:8.0.48	Doc ID: RM100000000T311
Model Year Start: 2016	Model: LX570	Prod Date Range: [09/2015 -]
Title: JF2A TRANSFER / 4WD / AWD: 4WD CONTROL ECU: REMOVAL; 2016 - 2018 MY LX570 [09/2015 -]		

REMOVAL

PROCEDURE

1. PRECAUTION

NOTICE:

After turning the engine switch off, waiting time may be required before disconnecting the cable from the negative (-) battery terminal. Therefore, make sure to read the disconnecting the cable from the negative (-) battery terminal notice before proceeding with work (See page [INFO](#)).

2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (See page [INFO](#)).

3. REMOVE FRONT DOOR SCUFF PLATE RH

[INFO](#)

4. REMOVE COWL SIDE TRIM BOARD RH

[INFO](#)

5. REMOVE NO. 2 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY

[INFO](#)

6. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY RH

[INFO](#)

7. REMOVE INNER NO. 1 INSTRUMENT PANEL BRACKET COVER RH

[INFO](#)

8. REMOVE LOWER NO. 2 INSTRUMENT PANEL AIRBAG ASSEMBLY

[INFO](#)

9. REMOVE INSTRUMENT PANEL BOX DOOR KNOB

[INFO](#)

10. REMOVE LOWER NO. 2 INSTRUMENT PANEL FINISH PANEL


[INFO](#)

11. REMOVE COWL SIDE JUNCTION BLOCK RH

[INFO](#)

12. REMOVE 4 WHEEL DRIVE CONTROL ECU

(a) Remove the bolt.

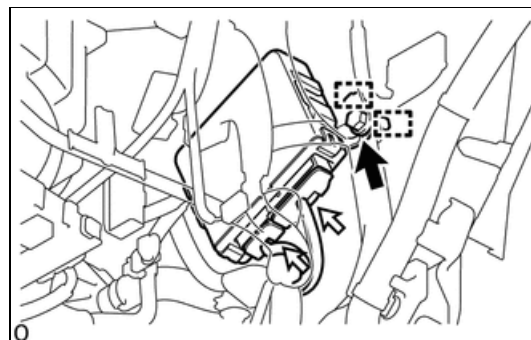

(b) Detach the 2 guides and disconnect the 4 wheel drive control ECU.

(c) Disconnect the 2 connectors from the 4 wheel drive control ECU.

transmissionmanuals.com