

Last Modified: 12-21-2017	6.8:8.0.48	Doc ID: RM100000000T30Y
Model Year Start: 2016	Model: LX570	Prod Date Range: [09/2015 -]
Title: JF2A TRANSFER / 4WD / AWD: 4WD CONTROL SWITCH: INSPECTION; 2016 - 2018 MY LX570 [09/2015 -]		

INSPECTION

PROCEDURE

1. REMOVE INTEGRATION CONTROL AND PANEL ASSEMBLY

(See page [INFO](#))

2. INSPECT INTEGRATION CONTROL AND PANEL ASSEMBLY (4WD CONTROL SWITCH)

(a) Measure the resistance according to the value(s) in the table below.

Standard Resistance:

TESTER CONNECTION	SWITCH CONDITION	SPECIFIED CONDITION
1 (E) - 21 (2ND)	H4 Position	10 kΩ or higher
	L4 Position	Below 1 Ω

Text in Illustration

*a	Component without harness connected (Integration Control and Panel Assembly)
----	---

If the result is not as specified, replace the integration control and panel assembly.

3. INSTALL INTEGRATION CONTROL AND PANEL ASSEMBLY

(See page [INFO](#))

