

Last Modified: 12-21-2017	6.8:8.0.48	Doc ID: RM100000000T30X
Model Year Start: 2016	Model: LX570	Prod Date Range: [09/2015 -]
Title: JF2A TRANSFER / 4WD / AWD: CENTER DIFFERENTIAL LOCK SWITCH: INSPECTION; 2016 - 2018 MY LX570 [09/2015 -]		

INSPECTION

PROCEDURE

1. REMOVE INTEGRATION CONTROL AND PANEL ASSEMBLY


(See page [INFO](#))

2. INSPECT INTEGRATION CONTROL AND PANEL ASSEMBLY (CENTER DIFFERENTIAL LOCK SWITCH)

(a) Measure the resistance according to the value(s) in the table below.

Standard Resistance:

TESTER CONNECTION	SWITCH CONDITION	SPECIFIED CONDITION
1 (E) - 18 (CPU)	Mode switch being pushed and held (CTR DIFF)	Below 1 Ω
	Mode switch not pushed (CTR DIFF)	10 kΩ or higher

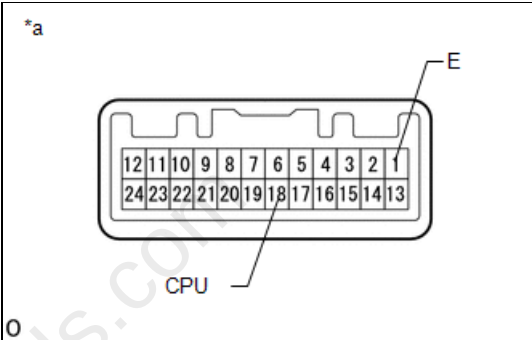

Text in Illustration

*a	Component without harness connected (Integration Control and Panel Assembly)
----	---

If the result is not as specified, replace the integration control and panel assembly.

3. INSTALL INTEGRATION CONTROL AND PANEL ASSEMBLY

(See page [INFO](#))