

Last Modified: 12-21-2017	6.8:8.0.48	Doc ID: RM100000000T30N
Model Year Start: 2016	Model: LX570	Prod Date Range: [09/2015 -]
Title: JF2A TRANSFER / 4WD / AWD: TRANSFER CASE FRONT OIL SEAL: REPLACEMENT; 2016 - 2018 MY LX570 [09/2015 -]		

REPLACEMENT

PROCEDURE

1. DRAIN TRANSFER OIL

INFO

2. REMOVE FRONT PROPELLER SHAFT ASSEMBLY

(See page [INFO](#))

3. REMOVE FRONT OUTPUT SHAFT COMPANION FLANGE SUB-ASSEMBLY

INFO

4. REMOVE FRONT TRANSFER CASE OIL SEAL

(a) Using SST, remove the front transfer case oil seal.


SST: 09308-10010

SST: 09950-40011

09957-04010

NOTICE:

- Be careful not to damage the front transfer case oil seal and front transfer case contact surface.
- Apply grease to the tip of SST center bolt before use.

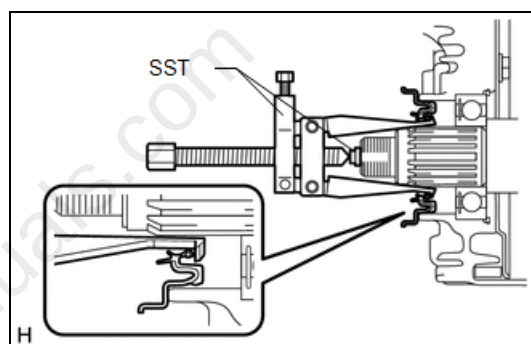

5. INSTALL FRONT TRANSFER CASE OIL SEAL


(a) Apply transfer oil to the spline of the driven sprocket.

(b) Using SST and a hammer, tap in a new front transfer case oil seal.

SST: 09613-26010

NOTICE:

The front transfer case oil seal should be installed completely.

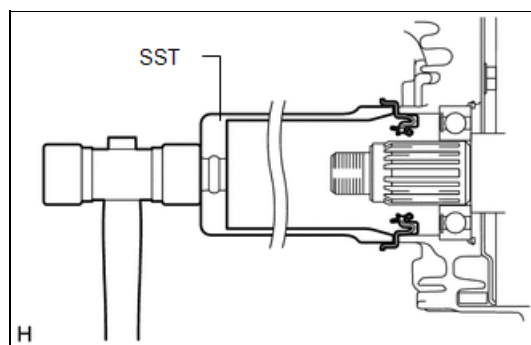

6. INSTALL FRONT OUTPUT SHAFT COMPANION FLANGE SUB-ASSEMBLY

INFO

7. INSTALL FRONT PROPELLER SHAFT ASSEMBLY

(See page [INFO](#))

8. ADD TRANSFER OIL

INFO

9. CHECK FOR TRANSFER OIL LEAK