

Last Modified: 12-21-2017	6.8:8.0.48	Doc ID: RM100000000T30P
Model Year Start: 2016	Model: LX570	Prod Date Range: [09/2015 -]
Title: JF2A TRANSFER / 4WD / AWD: TRANSFER CASE REAR OIL SEAL: REPLACEMENT; 2016 - 2018 MY LX570 [09/2015 -]		

REPLACEMENT

PROCEDURE

1. REMOVE PROPELLER SHAFT ASSEMBLY

- (a) Remove the propeller shaft assembly (See page [INFO](#)).

2. REMOVE REAR OUTPUT SHAFT COMPANION FLANGE SUB-ASSEMBLY

[INFO](#)


3. REMOVE TRANSFER CASE REAR OIL SEAL

- (a) Using SST, tap out the oil seal.

SST: 09308-00010

NOTICE:

Be careful not to damage the oil seal and rear transfer case contact surface.

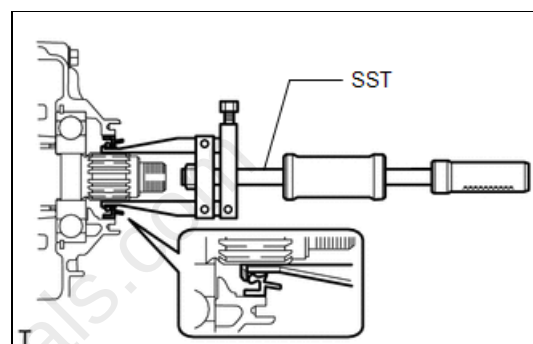

4. INSTALL TRANSFER CASE REAR OIL SEAL


- (a) Apply transfer oil to the spline of the output shaft.

- (b) Using SST and a hammer, tap in a new oil seal until its surface is flush with the housing upper surface.

SST: 09649-17010

SST: 09950-70010

09951-07150

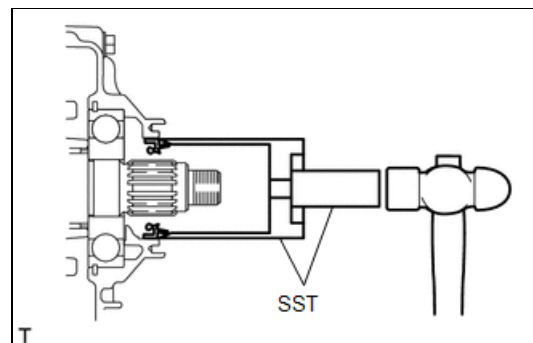

5. INSTALL REAR OUTPUT SHAFT COMPANION FLANGE SUB-ASSEMBLY

[INFO](#)

6. INSTALL PROPELLER SHAFT ASSEMBLY

- (a) Install the propeller shaft assembly (See page [INFO](#)).