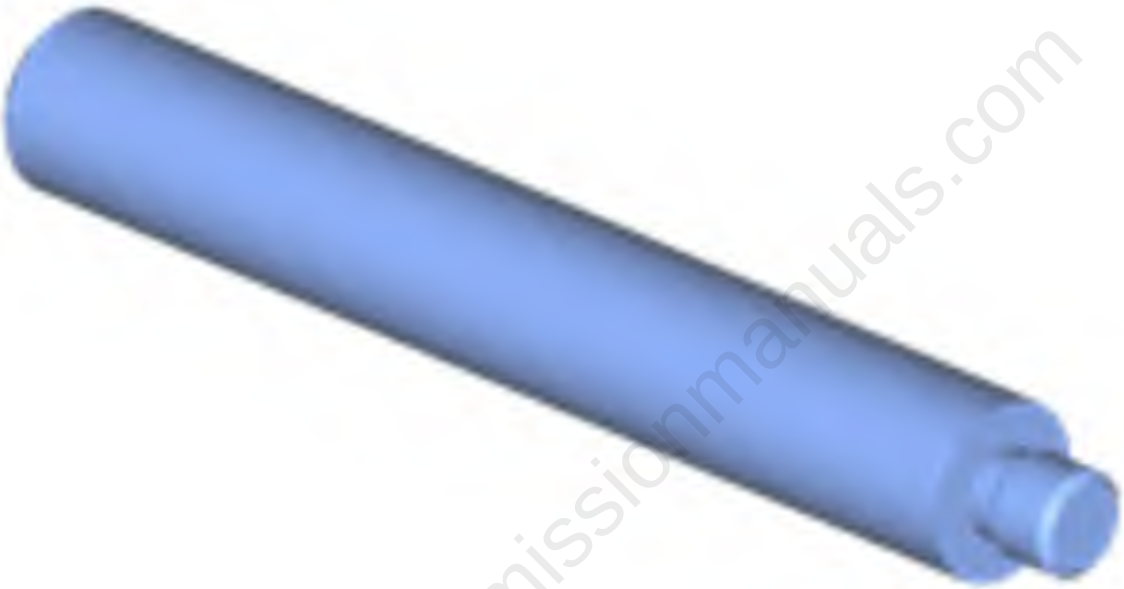
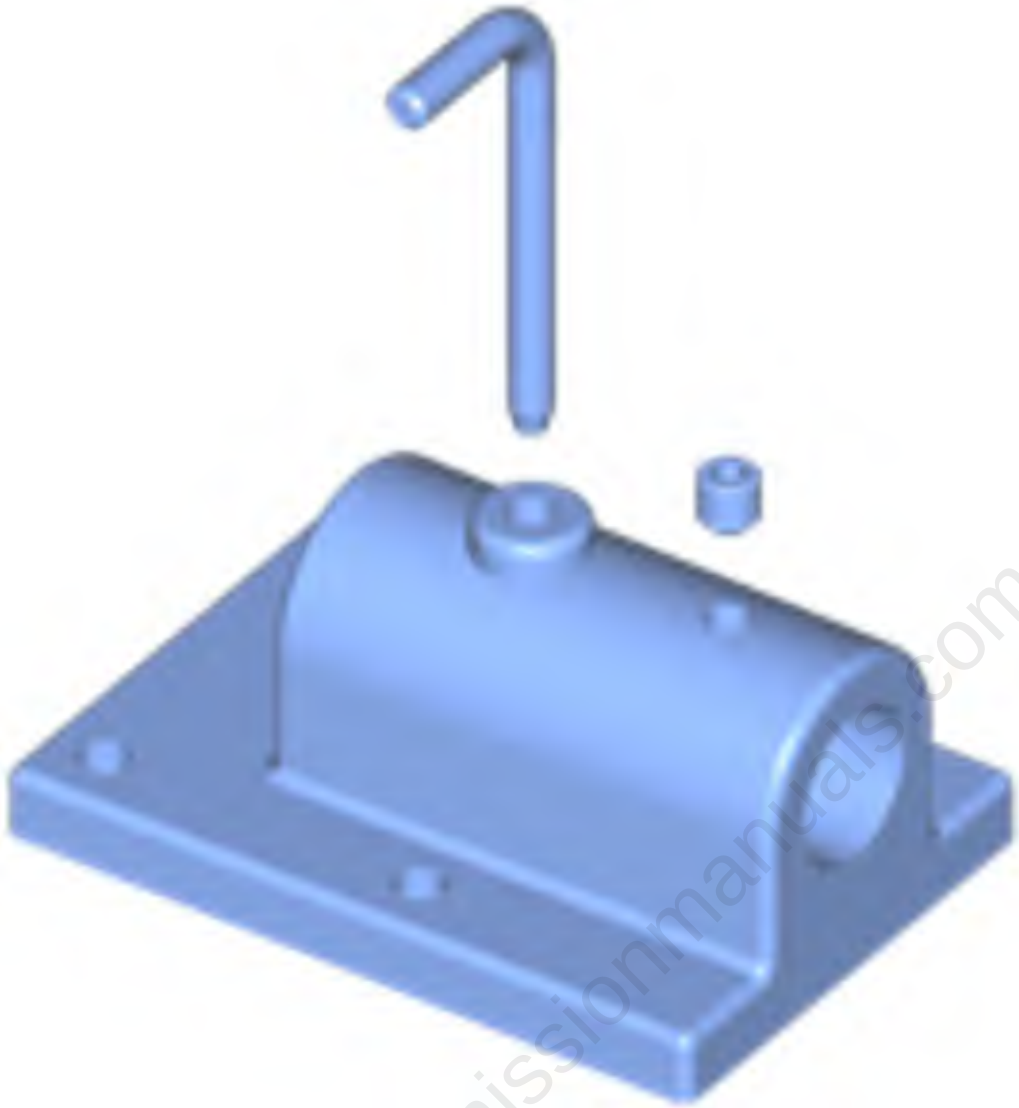
SPECIAL TOOLS AND EQUIPMENT

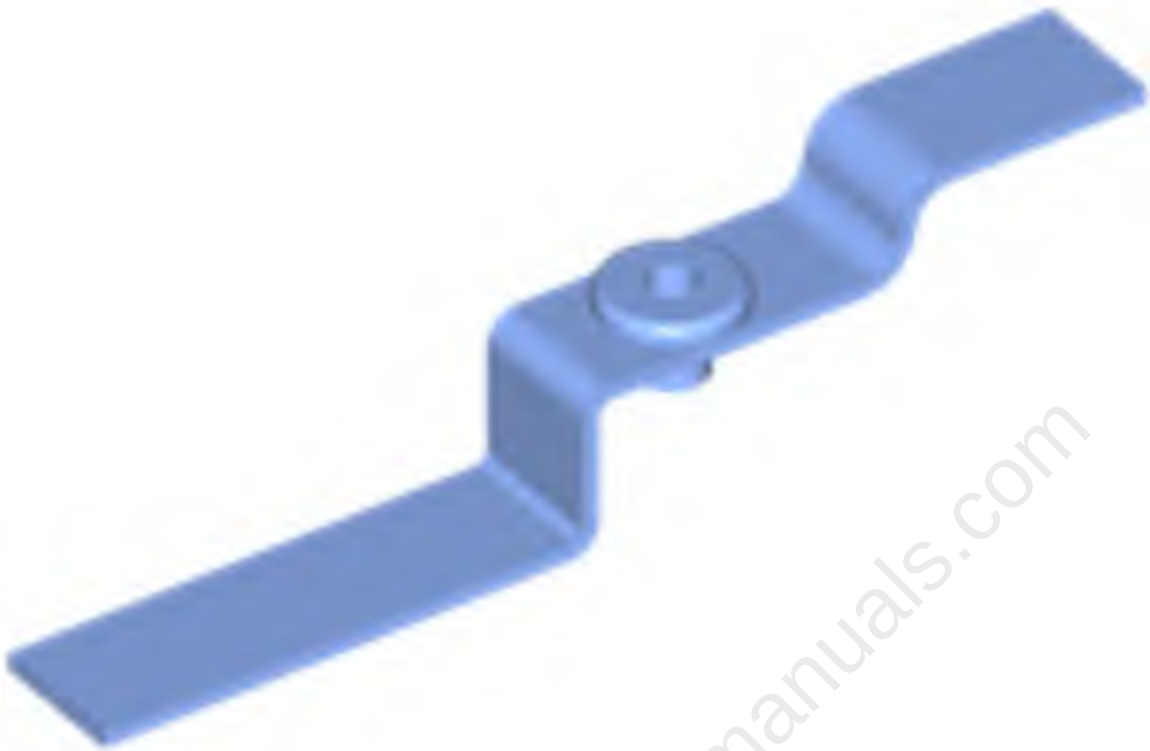
SPECIAL TOOLS

Illustration	Tool Number/Description
	DT-8092 GE-8092 J-8092 Driver Handle

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-03289-20 J-3289-20 Holding Fixture (Base)

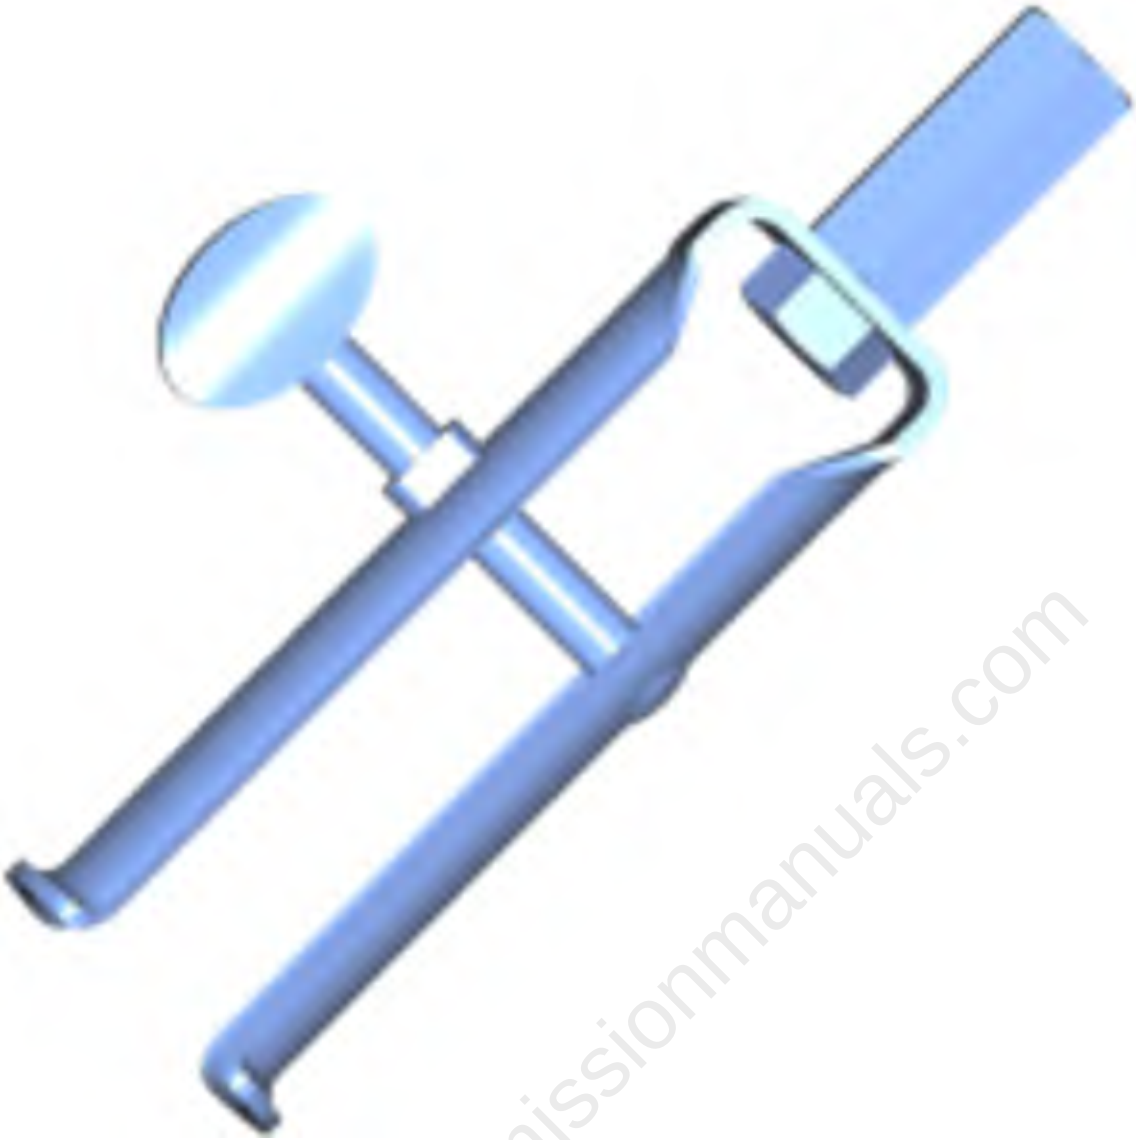
transmissionmanuals.com

Illustration	Tool Number/Description
	DT-21366 J-21366 Converter Holding Strap

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-22828 J-22828 Input and Countershaft Race Installer

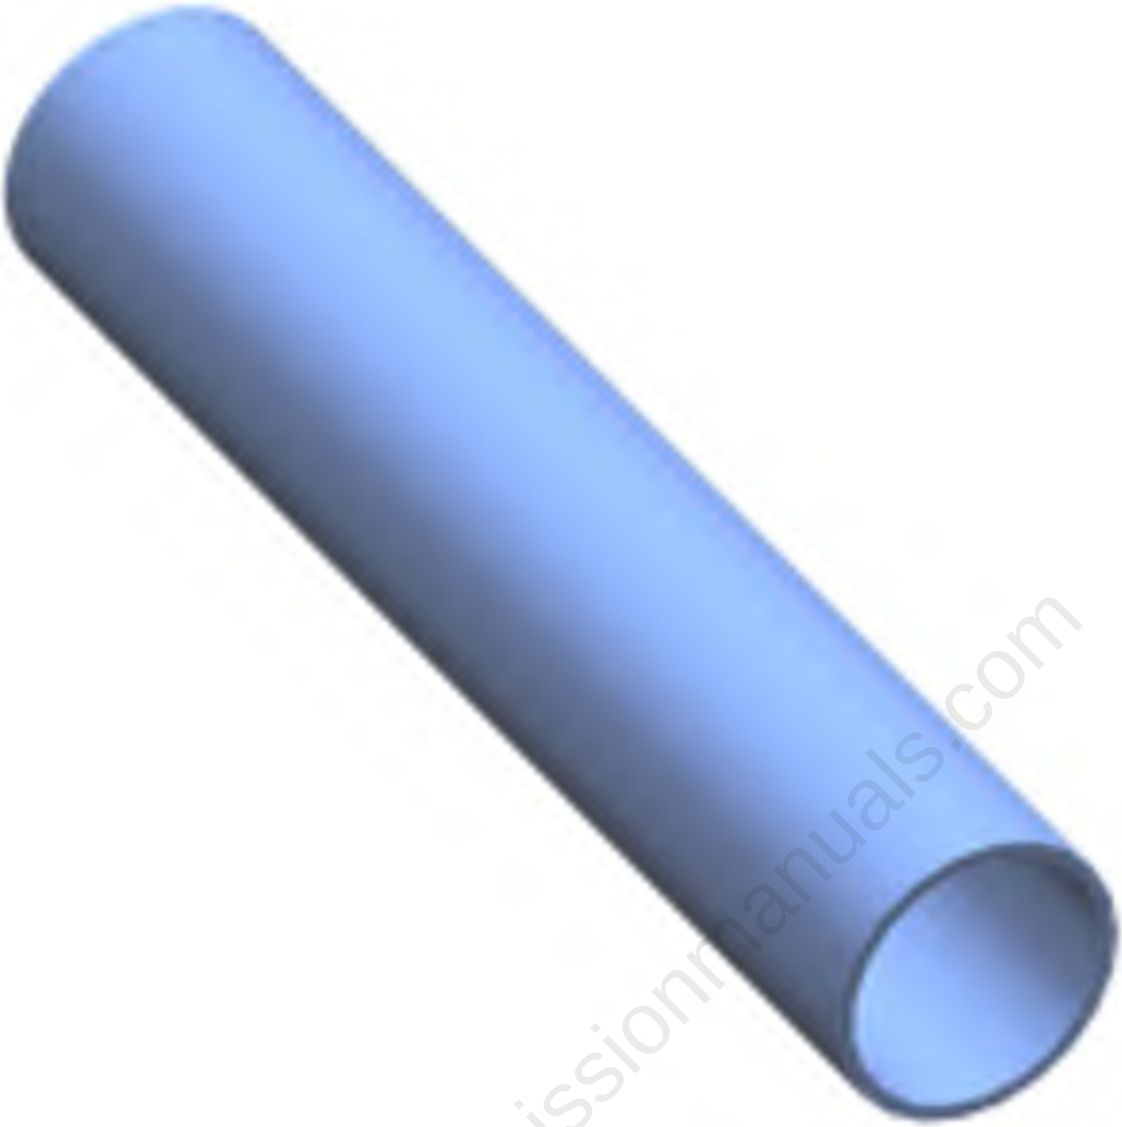
transmissionmanuals.com

Illustration	Tool Number/Description
	DT-26941 J-26941 Bushing and Bearing Remover

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-35512 J-35512 Bearing Installer

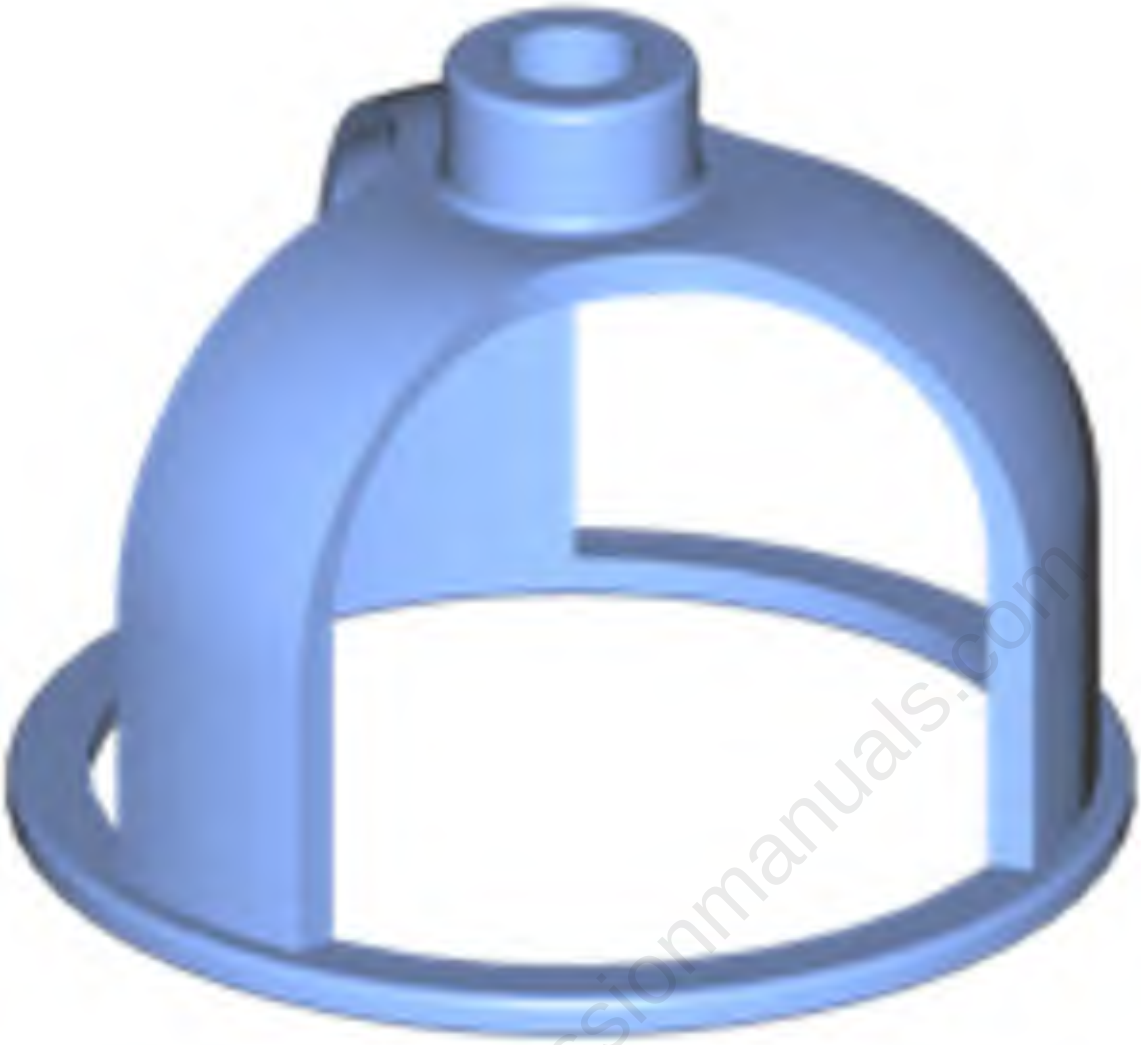
transmissionmanuals.com

Illustration	Tool Number/Description
	J-41736 Bearing Installer

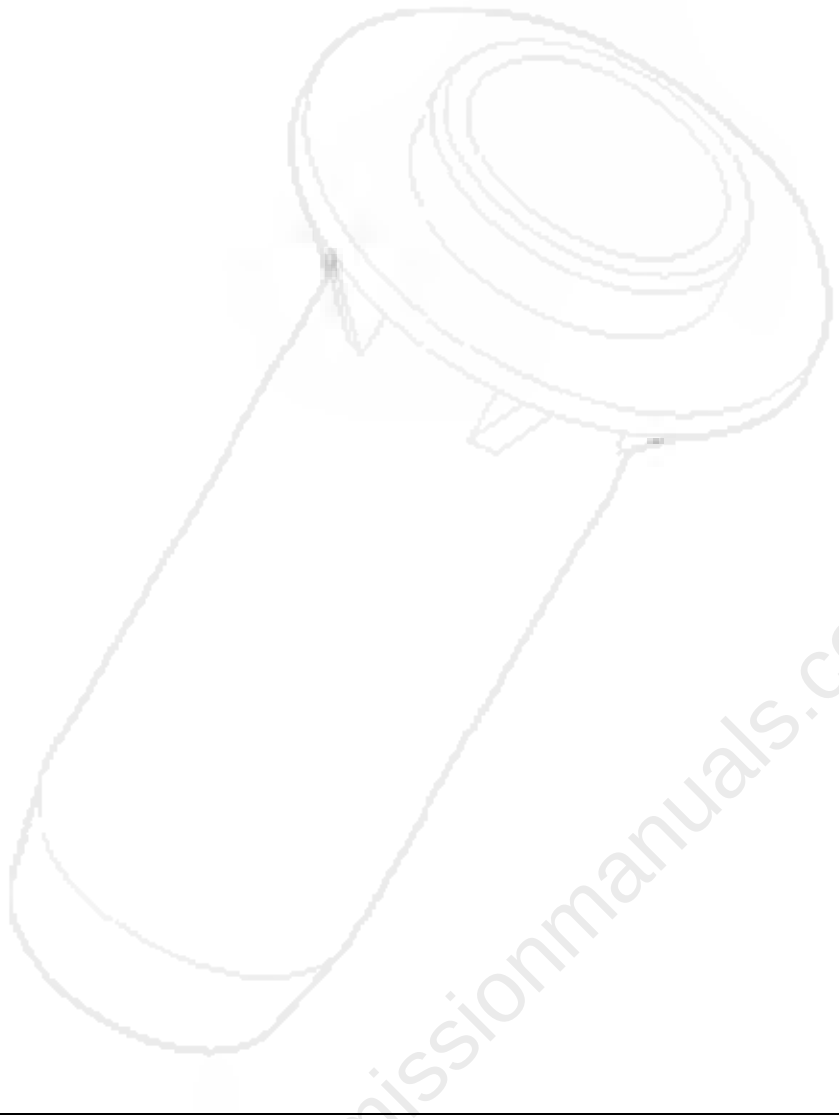
transmissionmanuals.com

Illustration	Tool Number/Description
	DT-37212 J-37212 Front Output Shaft Seal Installer

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-38734 J-38734 Intermediate Spring Compressor Adapter

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-43772 J-43772 Torque Converter Seal Installer

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-45000 J-45000 Seal Remover

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-45012 J-45012 Holding Fixture

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-45096 J-45096 Transmission Oil Cooling System Flush and Flow Test Tool

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-45096-30 J-45096-30 Transmission Cooler Flusher Adapters

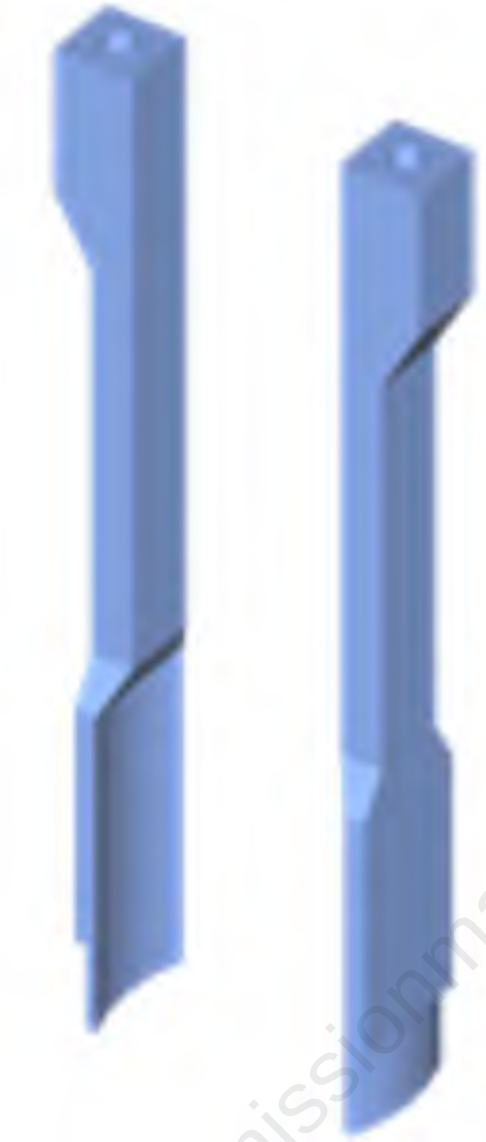
transmissionmanuals.com

Illustration	Tool Number/Description
	DT-45096-40 J-45096-40 Transflow Oil Fill Adapter

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-45124 J-45124 Removal Bridge

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-45124-9 J-45124-9 Puller Leg

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-45201 J-45201 Cooler Line Seal Remover

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-47693-2 Compressor

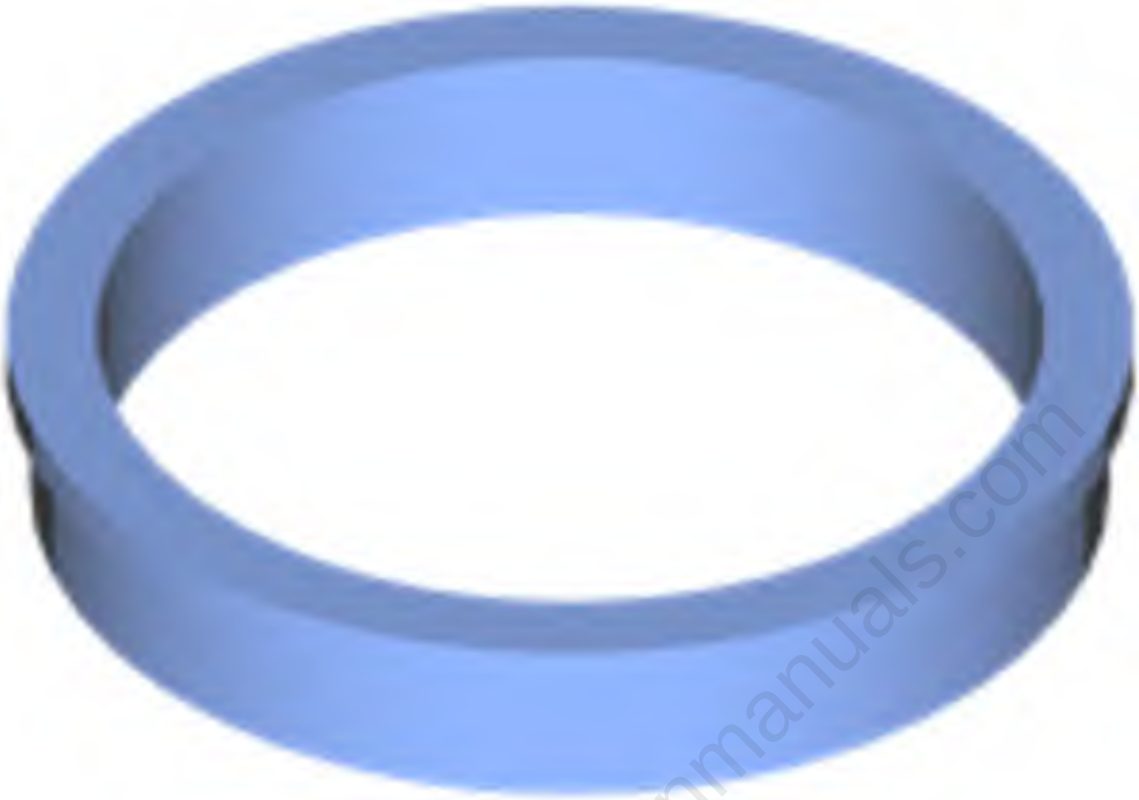
transmissionmanuals.com

Illustration	Tool Number/Description
	DT-47770 Seal Installer

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-47865 Bearing Remover

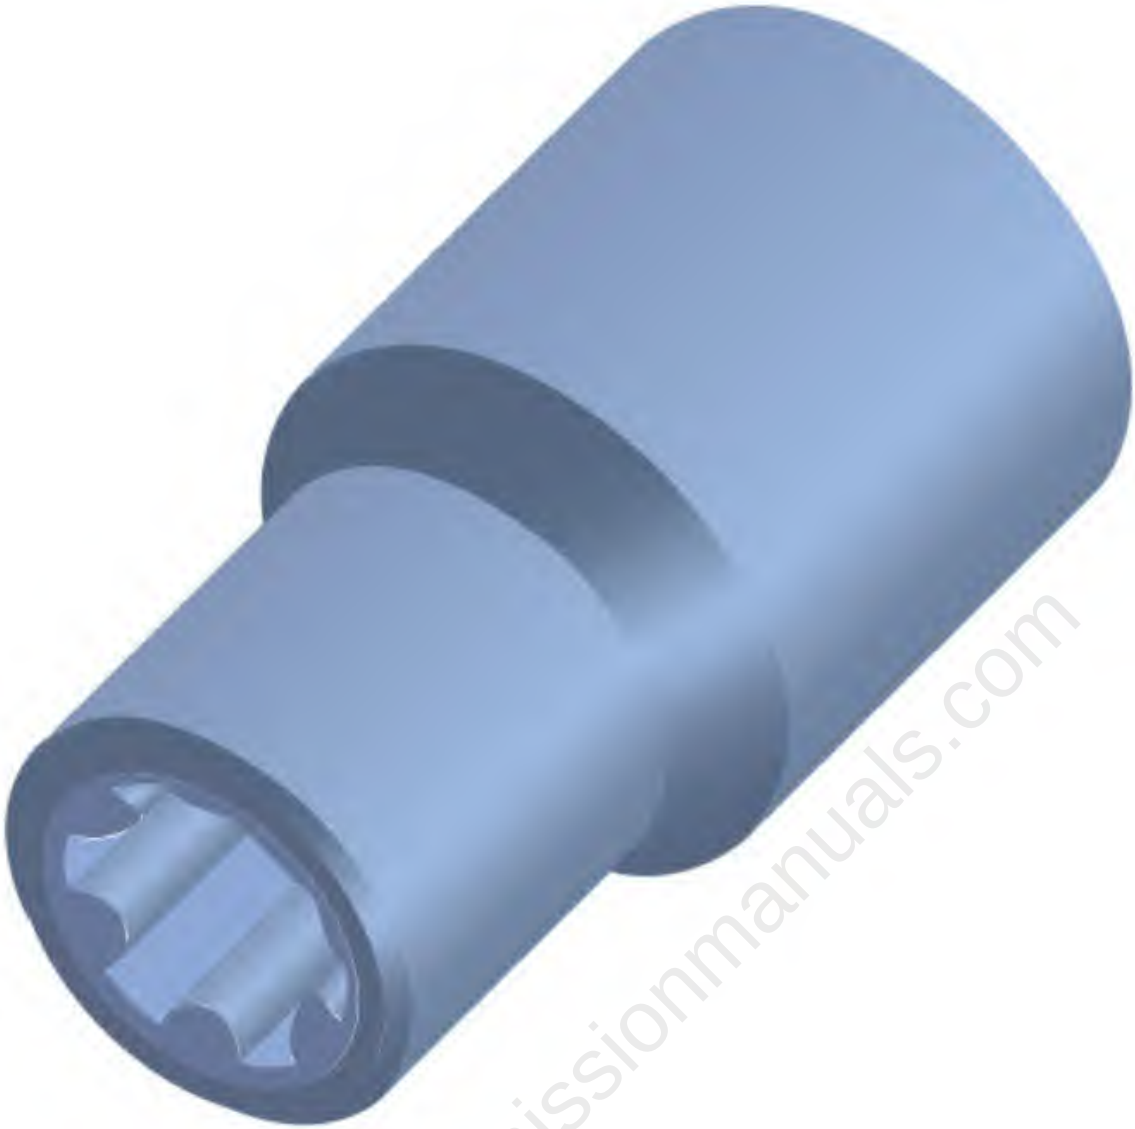
transmissionmanuals.com

Illustration	Tool Number/Description
	DT-47868-4 Clutch Travel Weight Adapter

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-48056 Spring Compressor Bridge

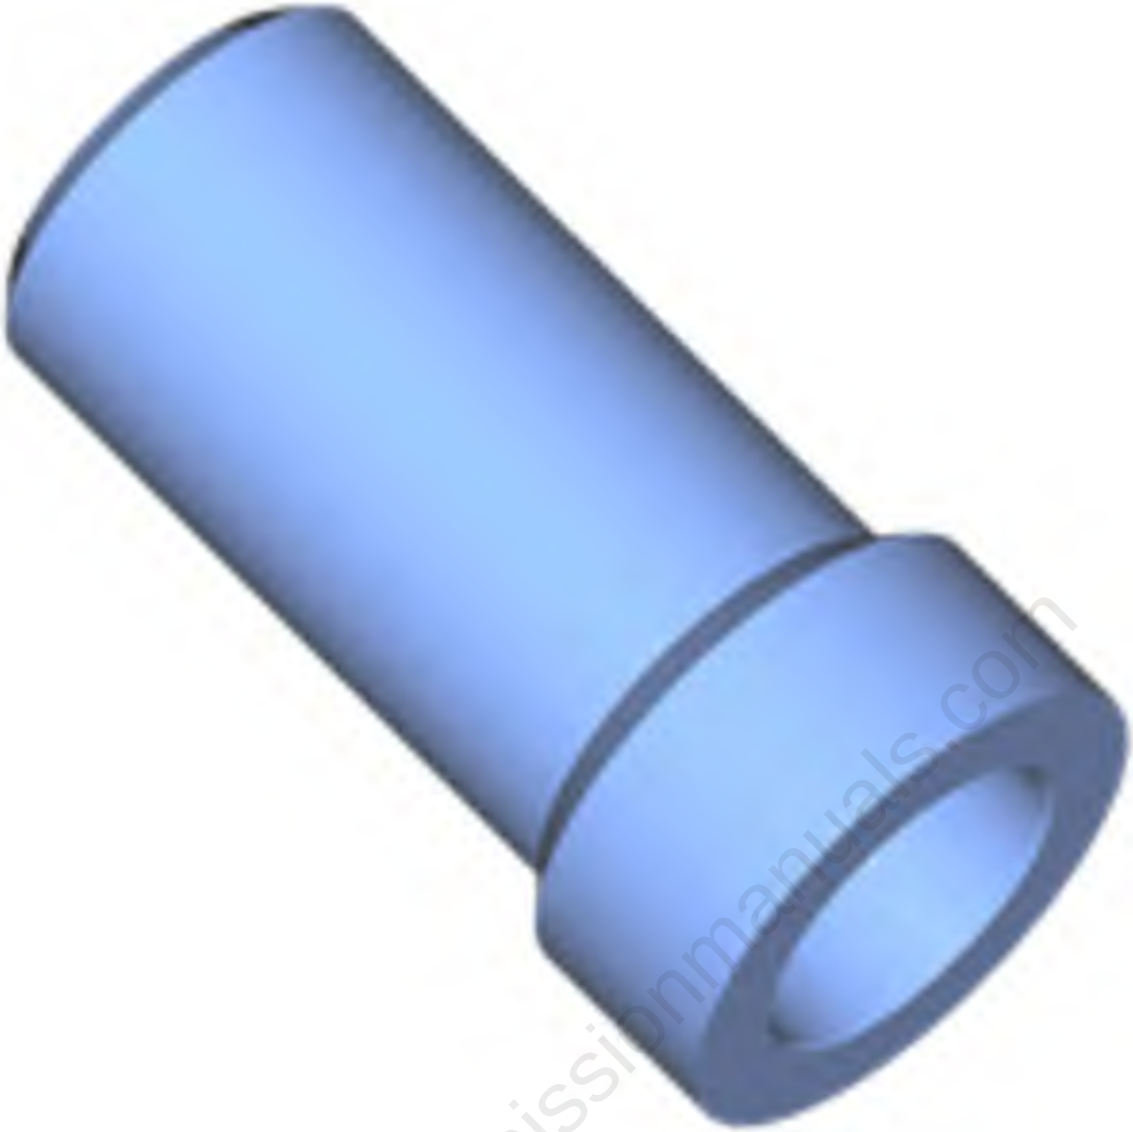
transmissionmanuals.com

Illustration	Tool Number/Description
	DT-48285 Valve Body Torx Plus Socket

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-48989 Holding Fixture

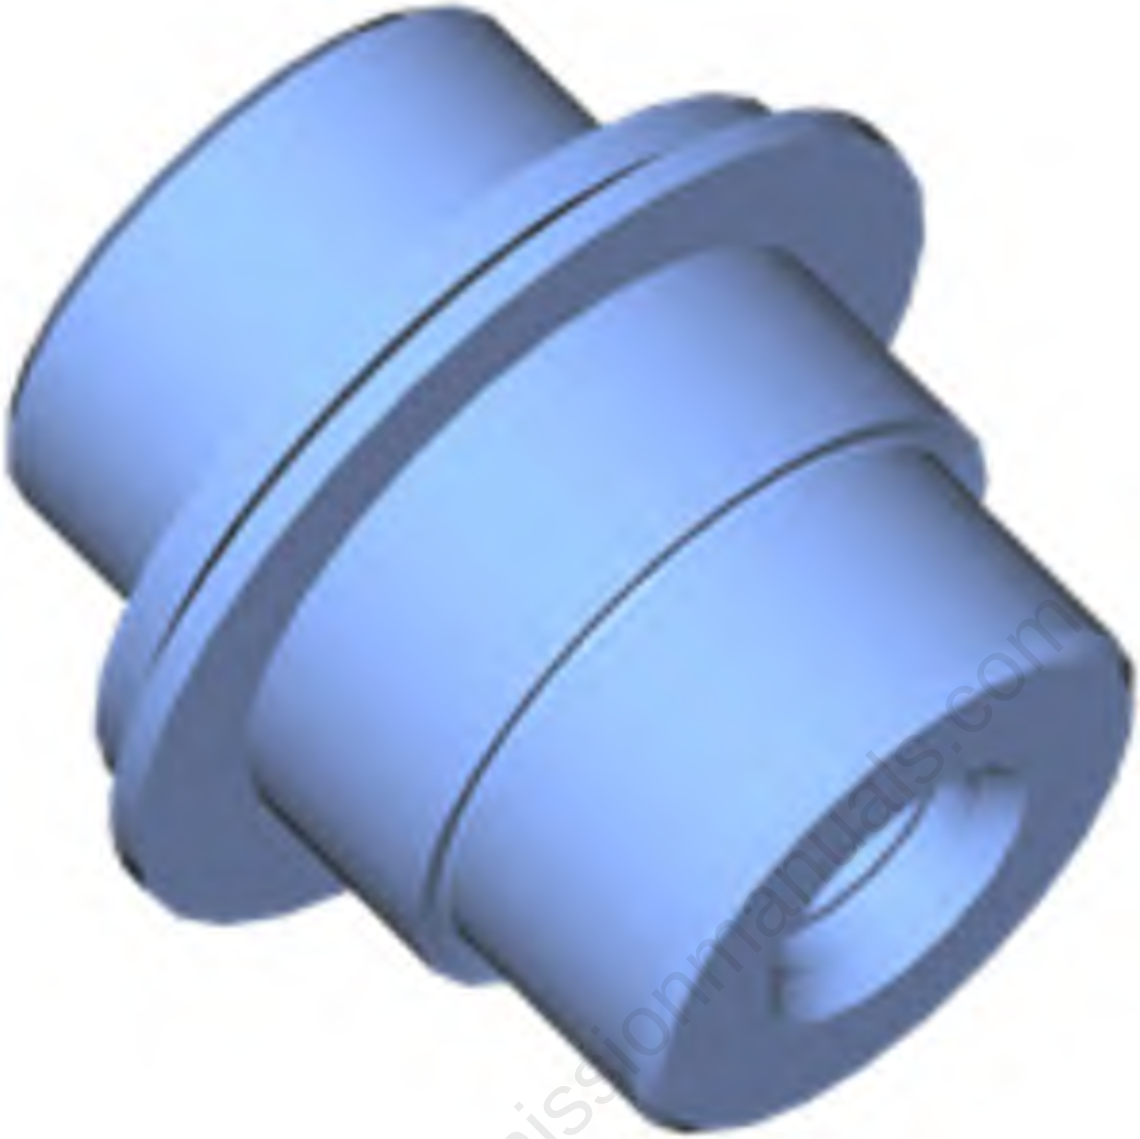
transmissionmanuals.com

Illustration	Tool Number/Description
	DT-50648 Case Seal Installer

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-50896 Seal Installer

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-50897 Bearing Installer

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-50900 Clutch Travel Support Fixture

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-50902 Adjustable Clutch Spring Compressor

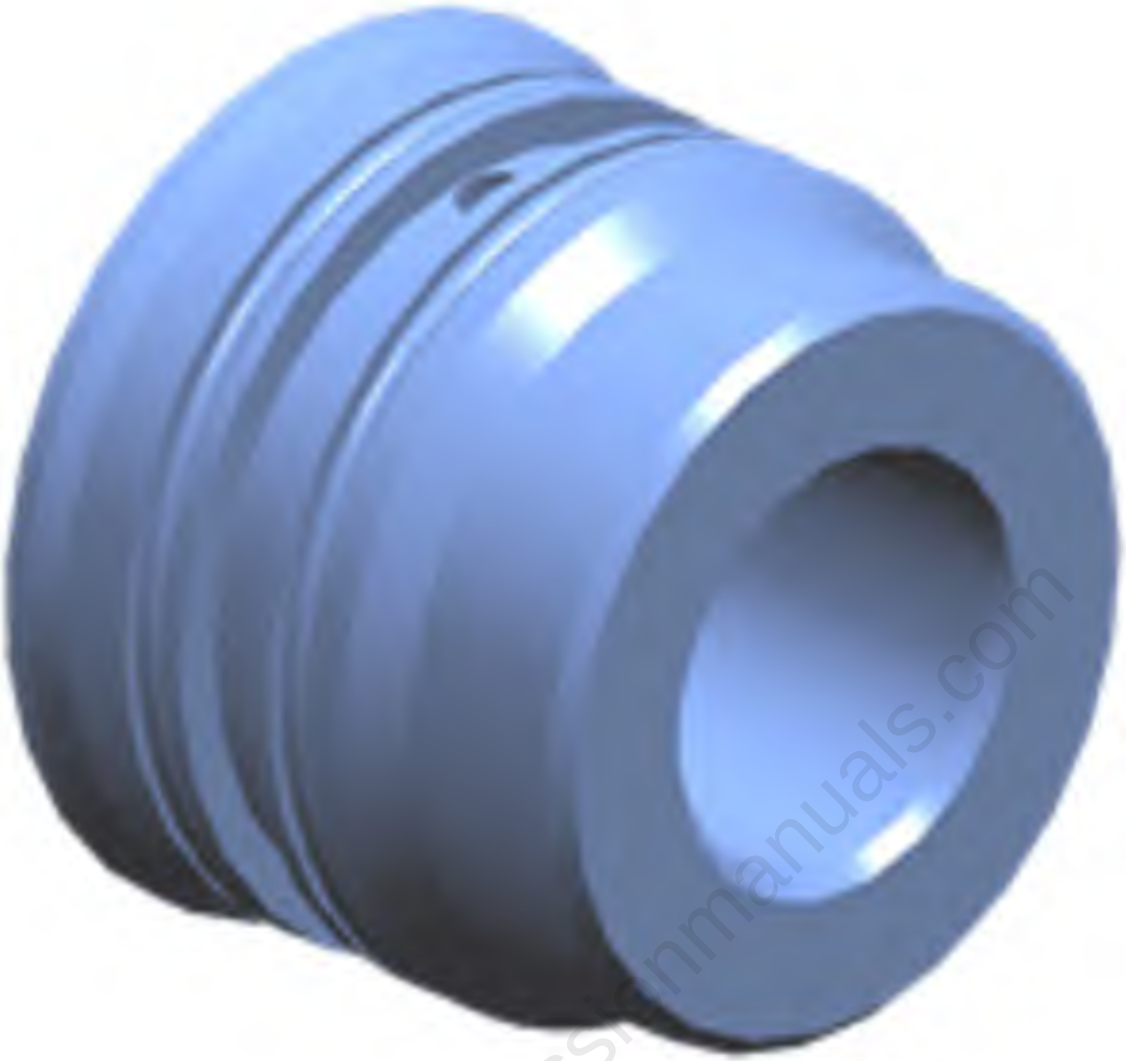
transmissionmanuals.com

Illustration	Tool Number/Description
	DT-50903 Clutch Travel Load Gauge

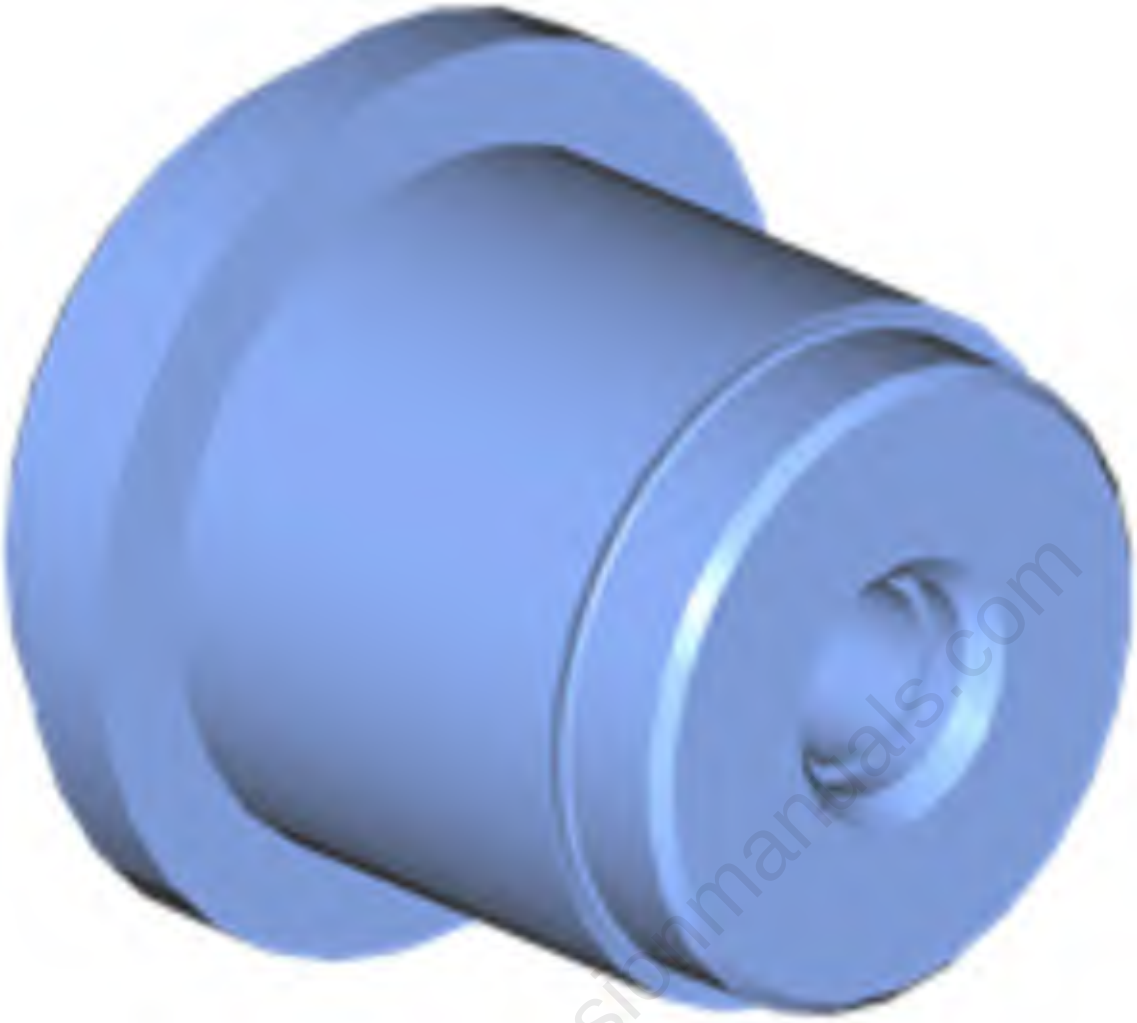
transmissionmanuals.com

Illustration	Tool Number/Description
	DT-50905 Clutch Air Travel Adapter

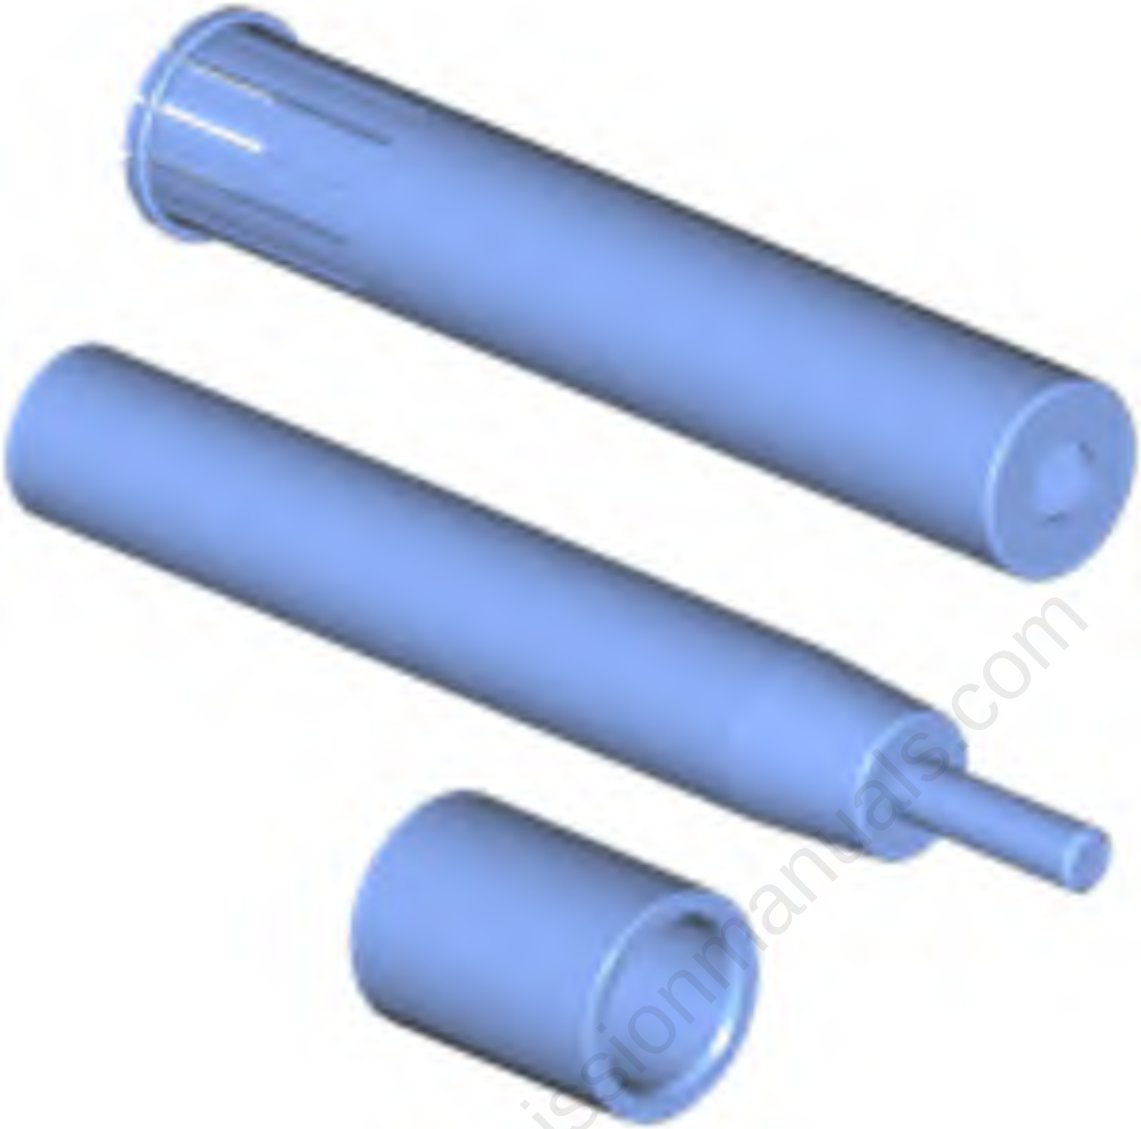
transmissionmanuals.com

Illustration	Tool Number/Description
	DT-50905-3 Clutch Air Travel Fixture Adapter

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-50906 Bearing Installer

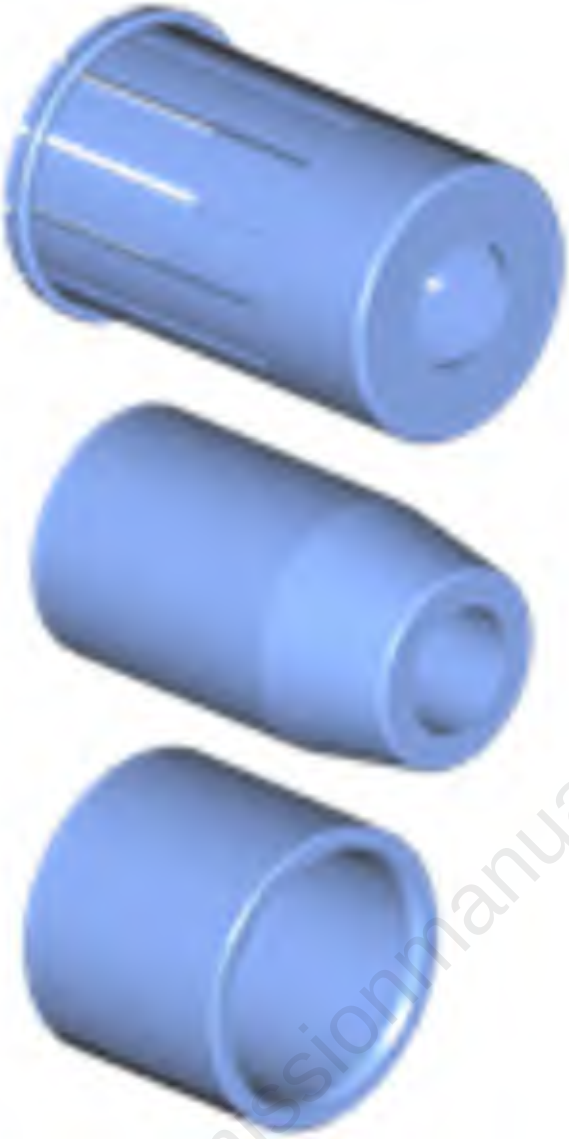
transmissionmanuals.com

Illustration	Tool Number/Description
	DT-50910 Seal Installer

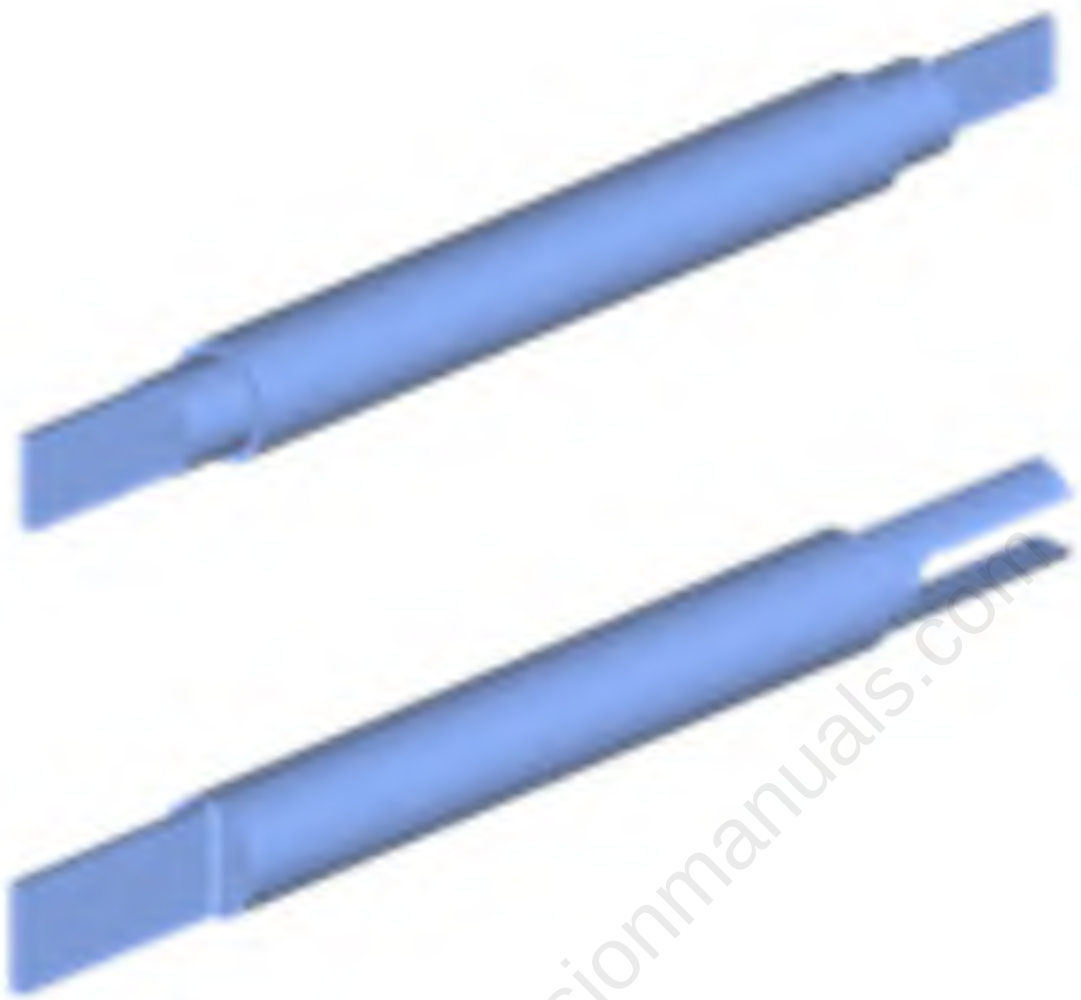
transmissionmanuals.com

Illustration	Tool Number/Description
	DT-50911 Seal Installer

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-50912 Seal Installer

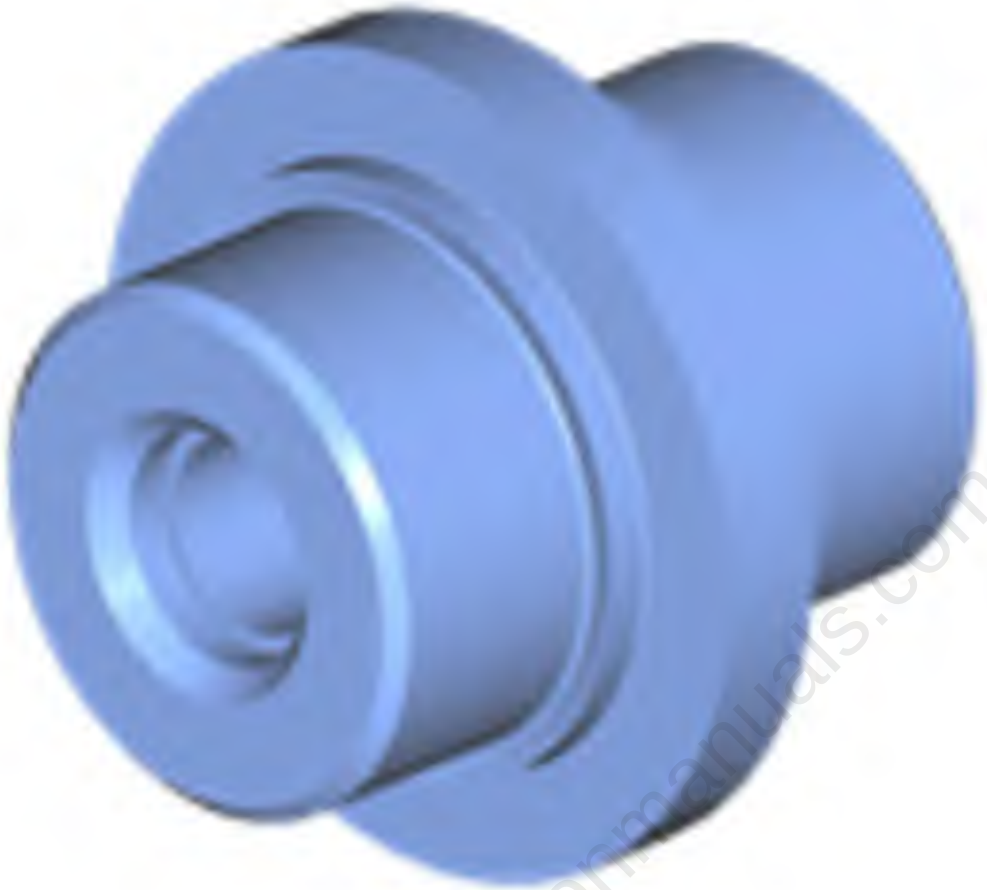
transmissionmanuals.com

Illustration	Tool Number/Description
	DT-50914 Solenoid Valve Retainer Remover/Installer

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-50921 Output Carrier/Shaft Lifting Tool

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-51087 Bearing Installer

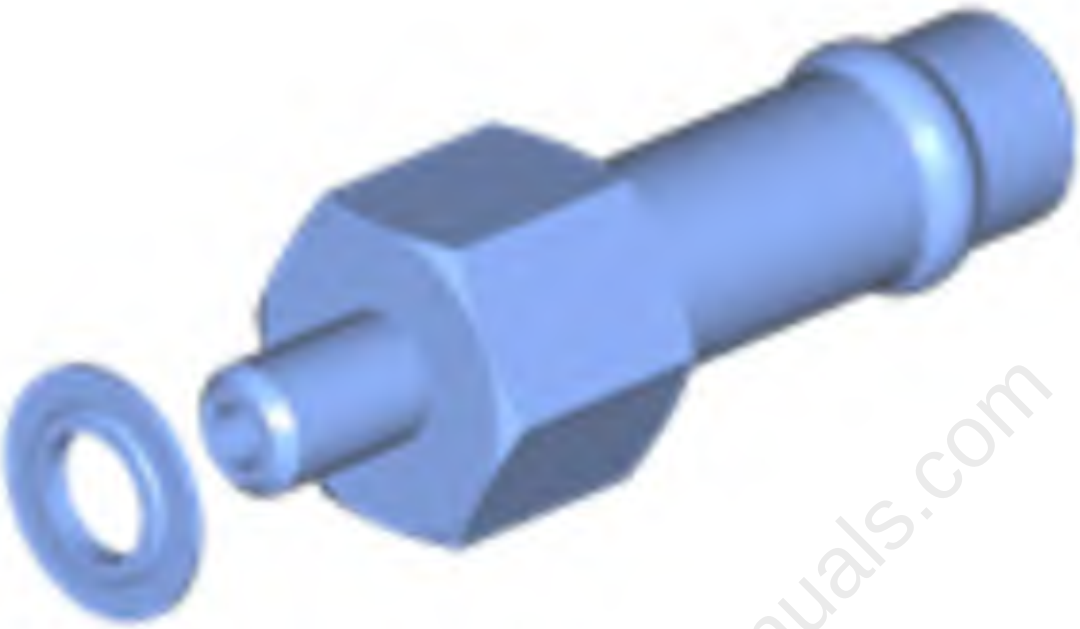
transmissionmanuals.com

Illustration	Tool Number/Description
	DT-51088 Seal Installer

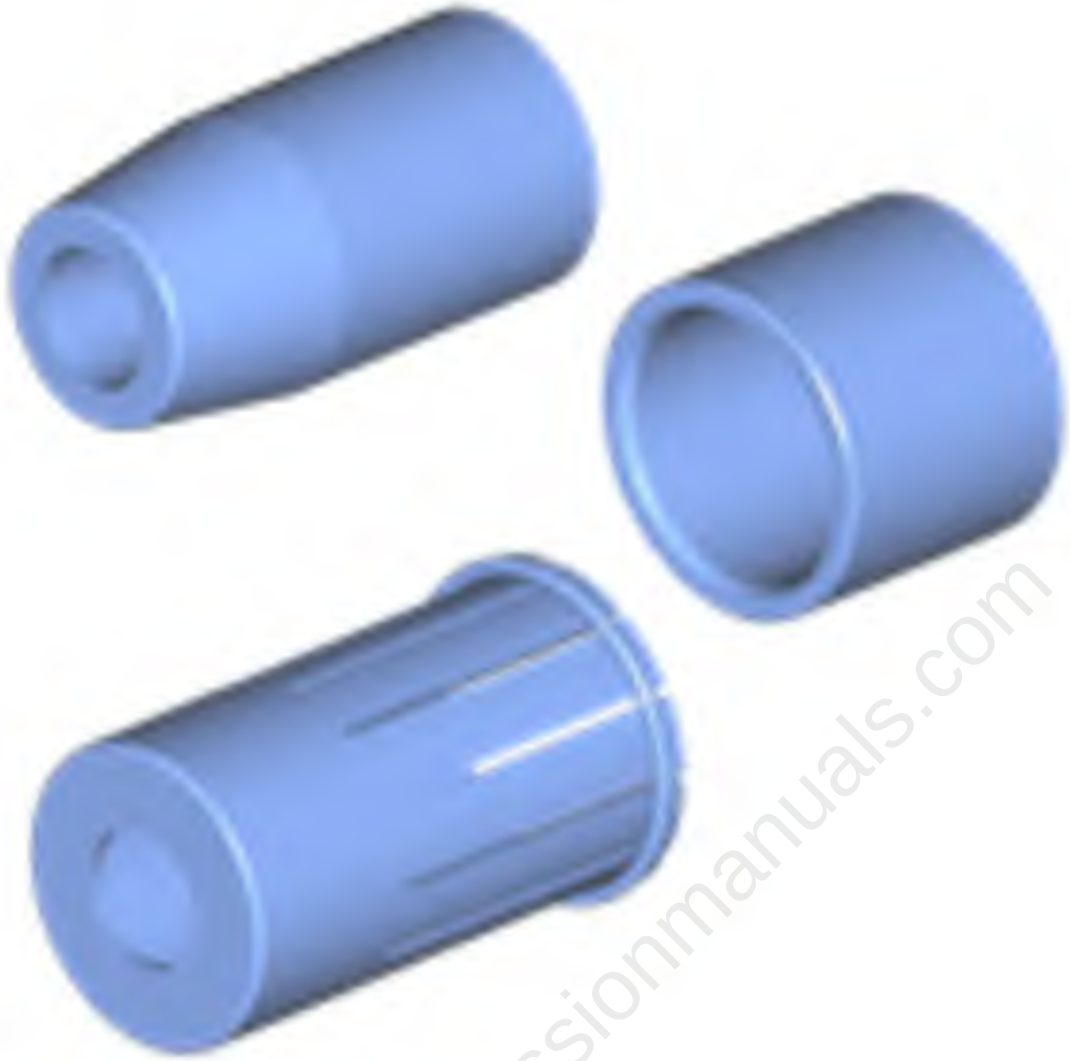
transmissionmanuals.com

Illustration	Tool Number/Description
	DT-51089 Bearing Installer

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-51190 Fluid Fill Pan Adapter

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-51196 Seal Installer

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-51328 Clutch Compressor and Air Travel Check Rod Extension

transmissionmanuals.com

Illustration	Tool Number/Description
	EL-38522 J-38522 Variable Signal Generator

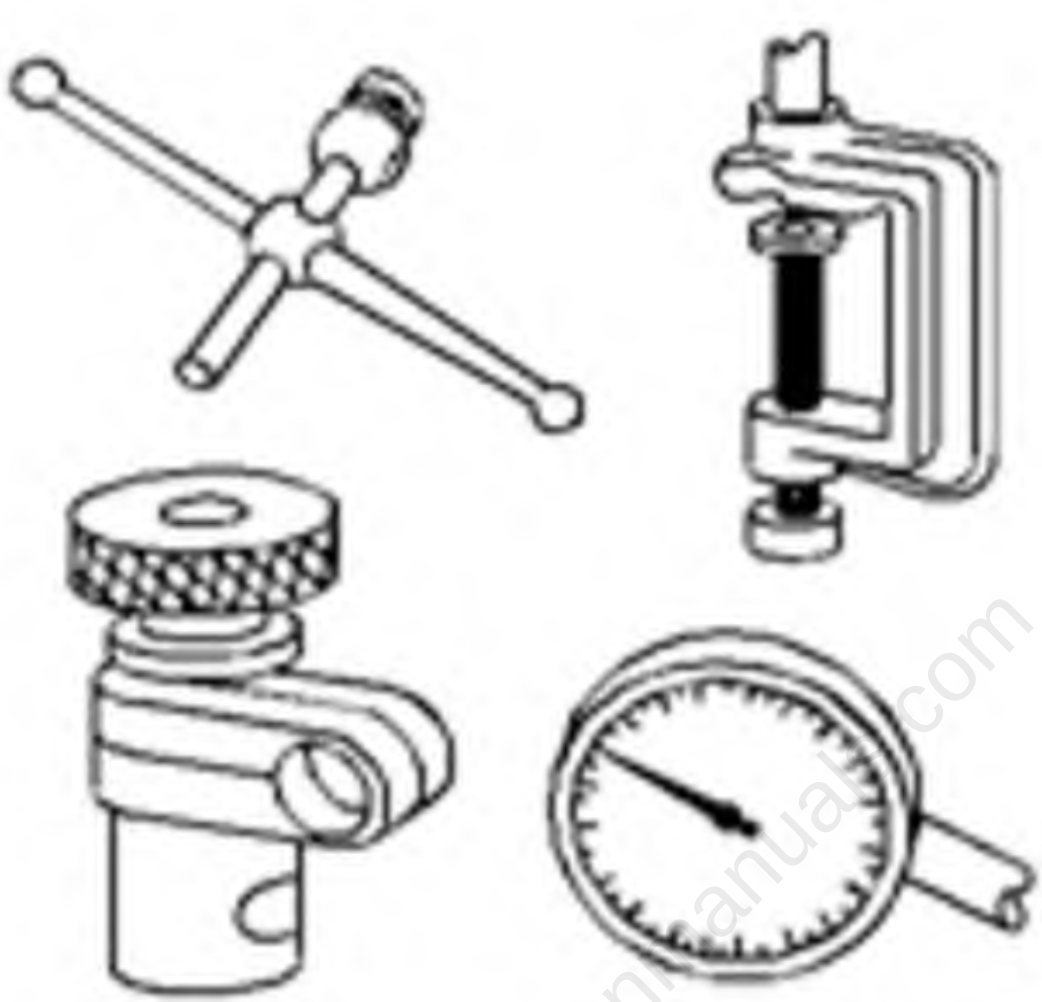
transmissionmanuals.com

Illustration	Tool Number/Description
	EN-38416-B J-38416-B Harmonic Balancer Remover

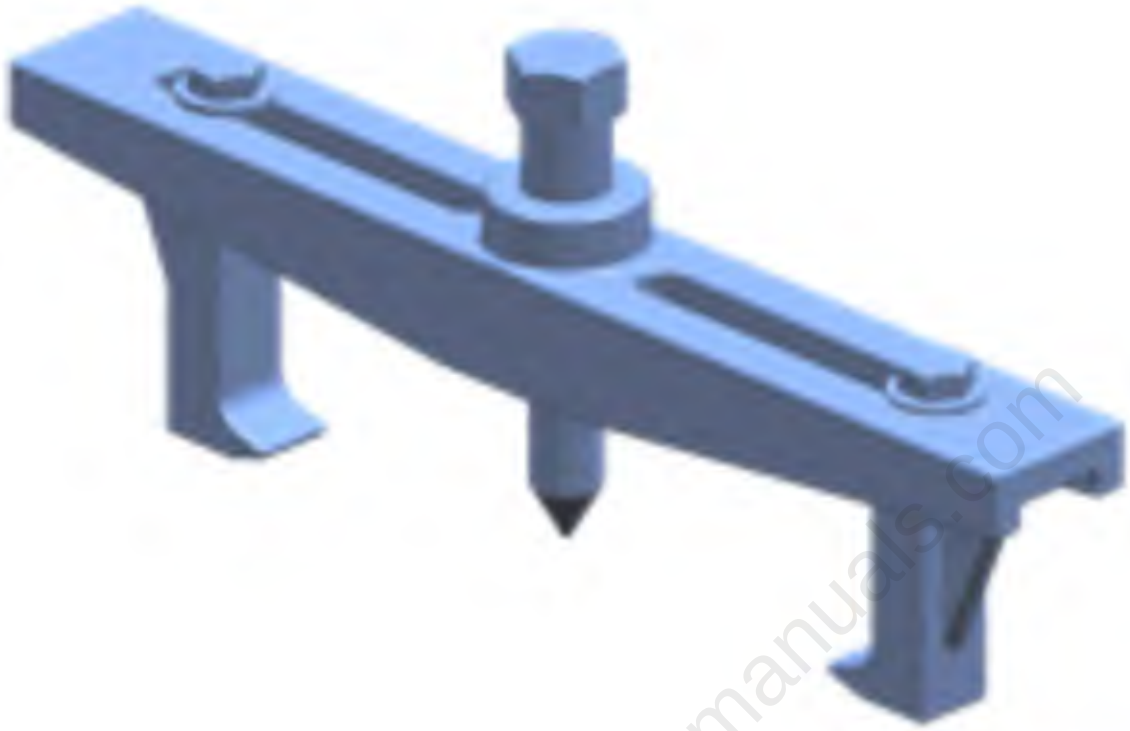
transmissionmanuals.com

Illustration	Tool Number/Description
	GE-6125-B J-6125-B Slide Hammer with Adapters

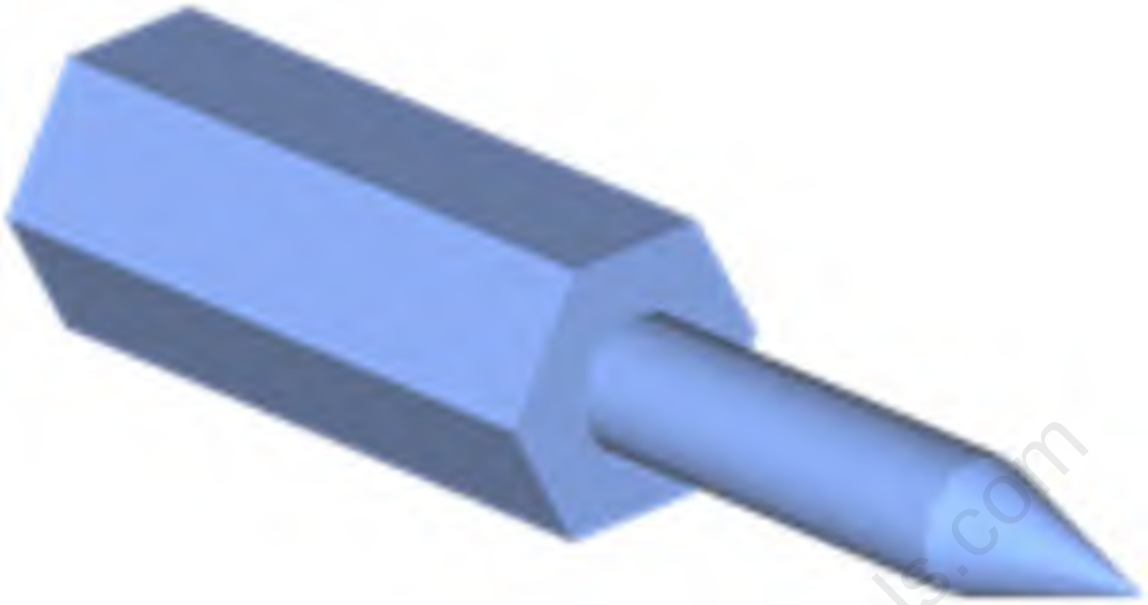
transmissionmanuals.com

Illustration	Tool Number/Description
	GE-8001 J-8001 Dial Indicator Set

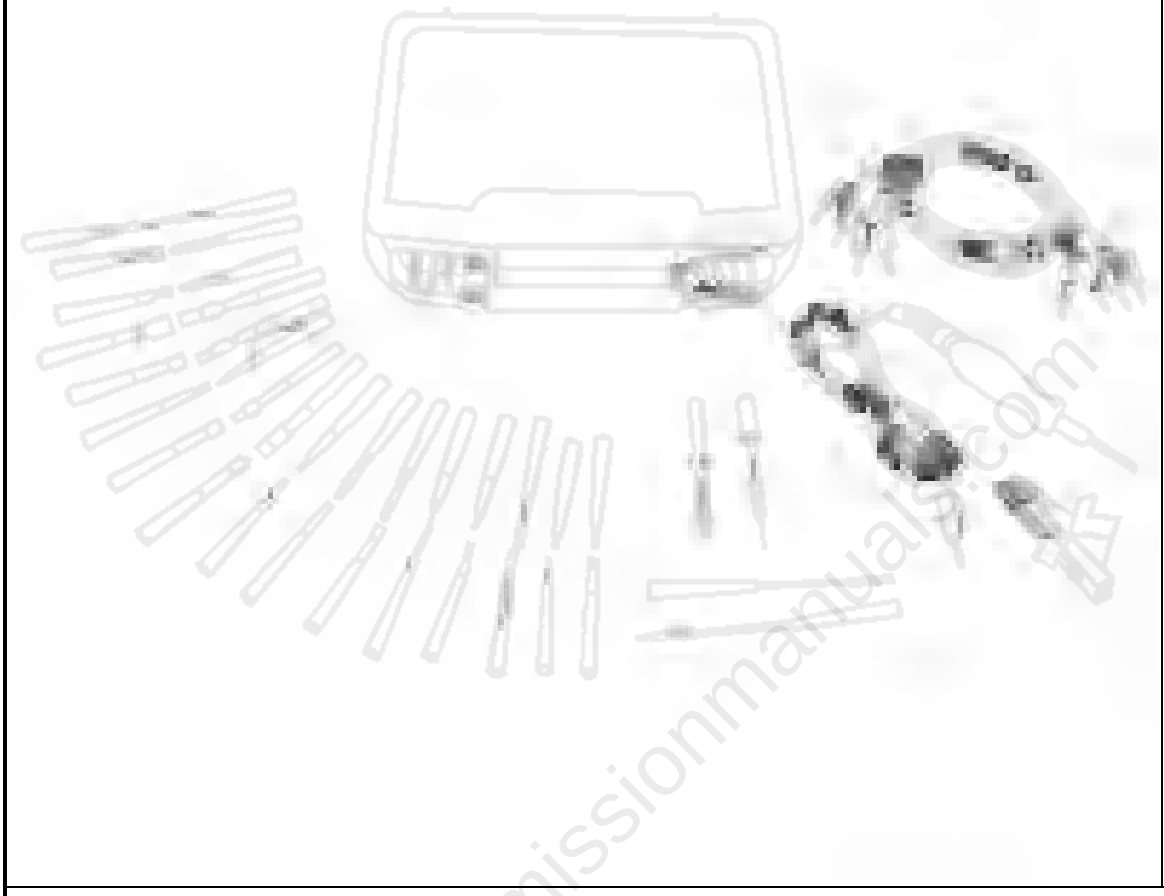
transmissionmanuals.com

Illustration	Tool Number/Description
	GE-8433 J-8433 Puller Bar

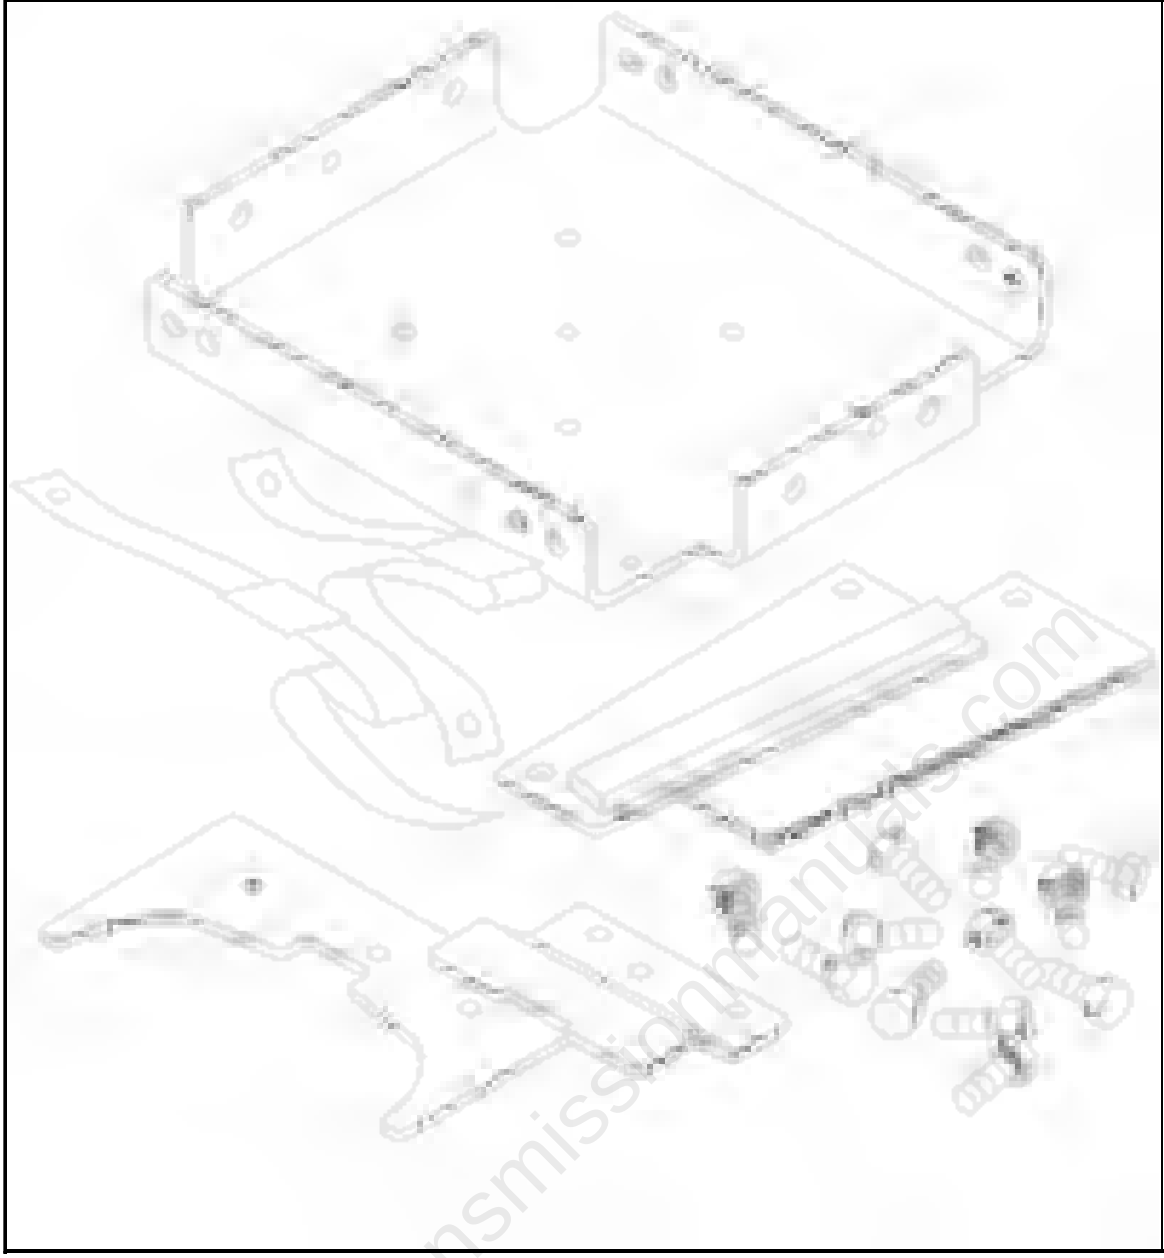
transmissionmanuals.com

Illustration	Tool Number/Description
	GE-36825-A J-36825-A Output Shaft Oil Seal Remover

transmissionmanuals.com

Illustration	Tool Number/Description
	J-35616 GM-Approved Terminal Test Kit

transmissionmanuals.com

Illustration	Tool Number/Description
	J-42055 Drivetrain Support Fixture

transmissionmanuals.com