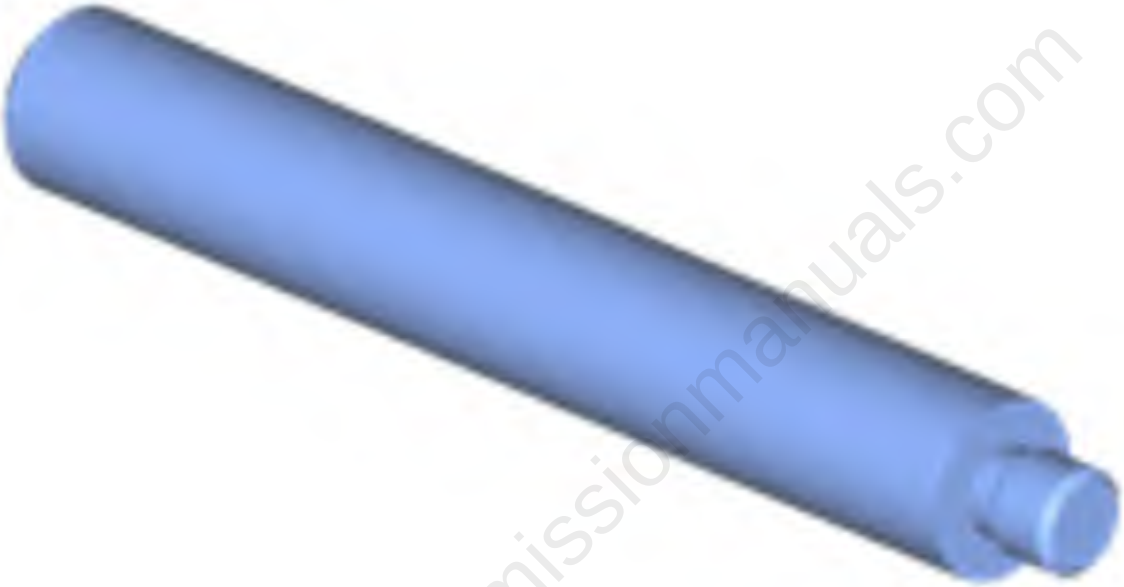
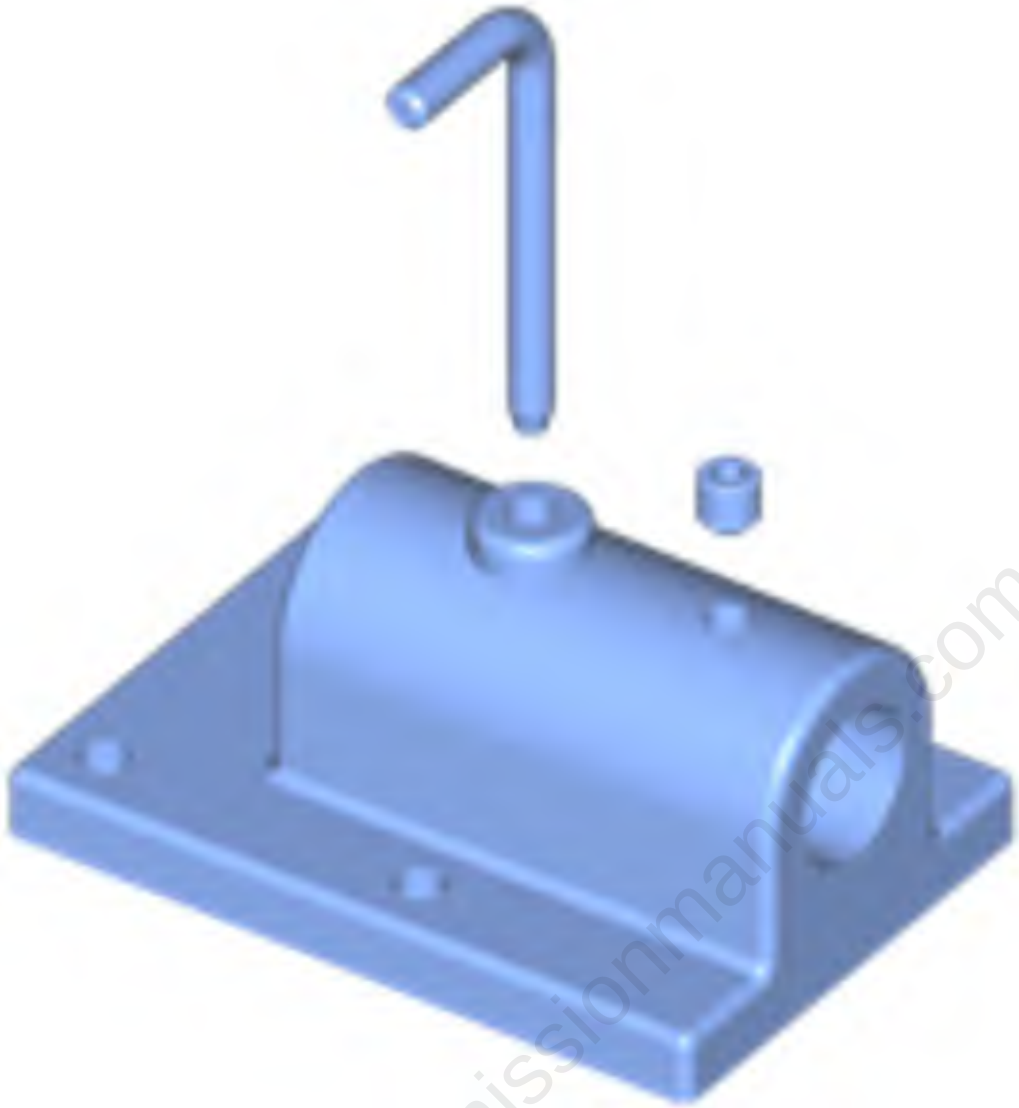
SPECIAL TOOLS AND EQUIPMENT

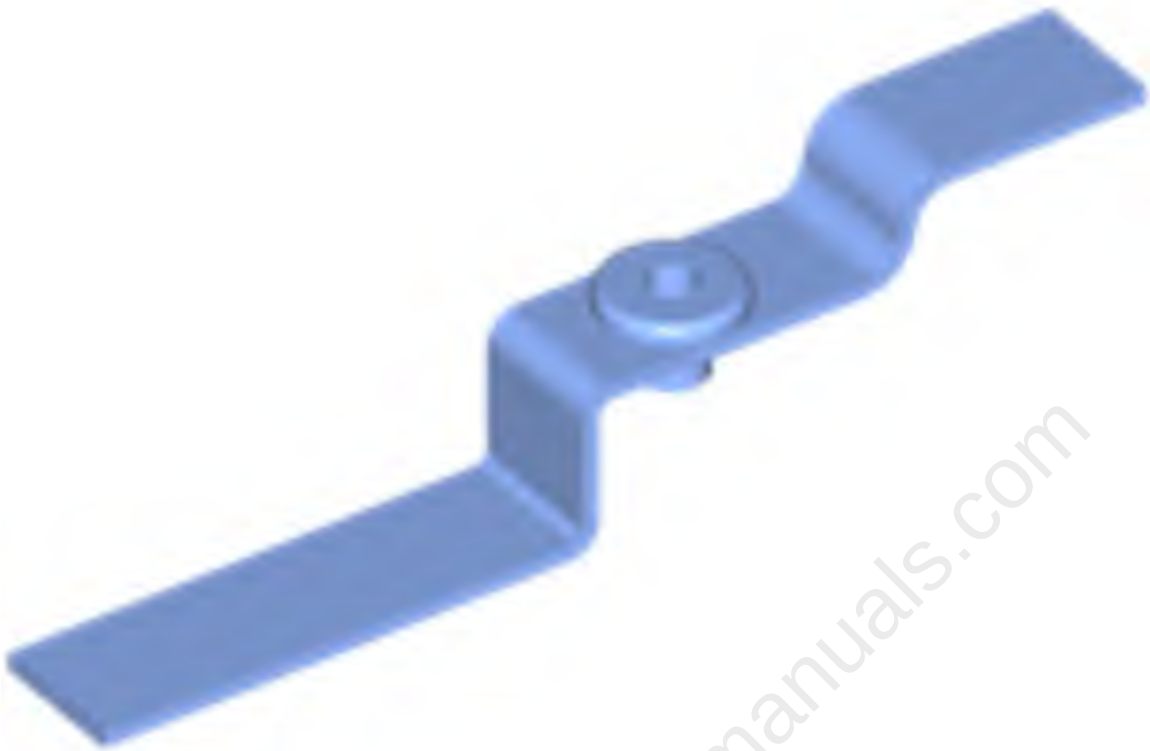
SPECIAL TOOLS

Illustration	Tool Number/Description
	DT-8092 GE-8092 J-8092 Driver Handle

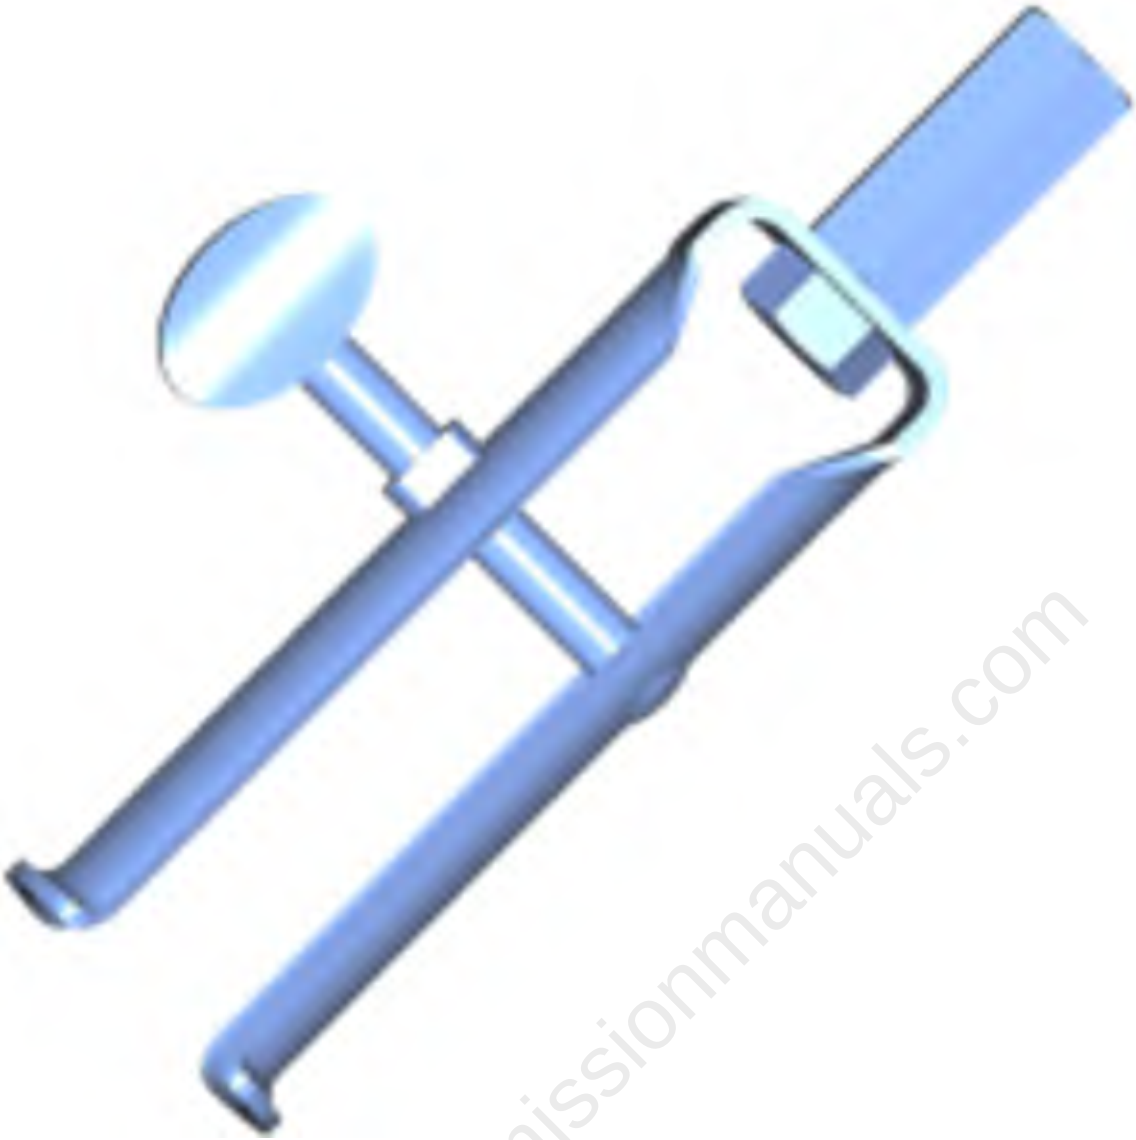
transmissionmanuals.com

Illustration	Tool Number/Description
	DT-03289-20 J-3289-20 Holding Fixture (Base)

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-21366 J-21366 Converter Holding Strap

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-26941 J-26941 Bushing and Bearing Remover

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-36850 Transjel Lubricant

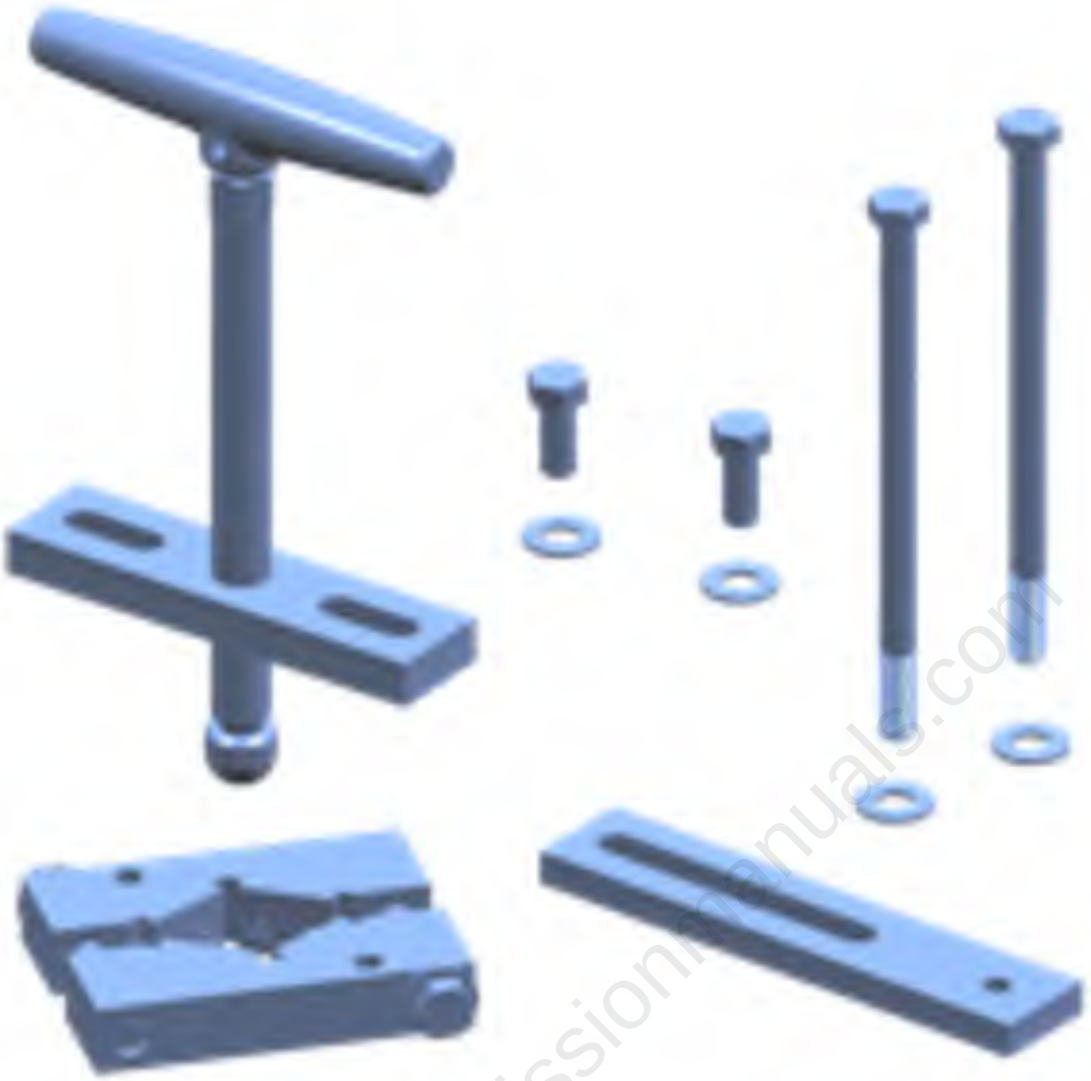
transmissionmanuals.com

Illustration	Tool Number/Description
	DT-38416-B Harmonic Balancer Remover

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-45000 J-45000 Seal Remover

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-45053 Universal Clamp Press

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-45096 J-45096 Transmission Oil Cooling System Flush and Flow Test Tool

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-45096-30 J-45096-30 Transmission Cooler Flusher Adapters

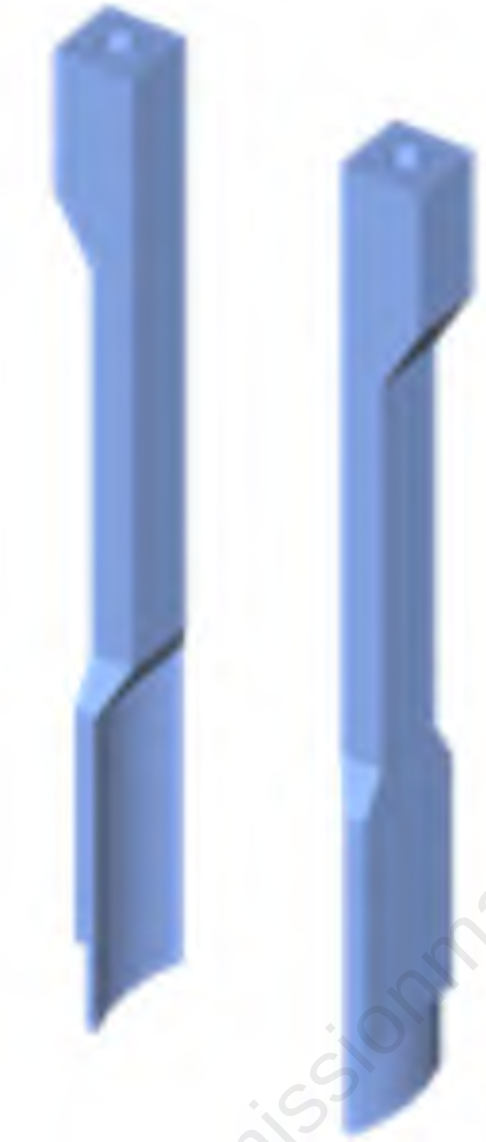
transmissionmanuals.com

Illustration	Tool Number/Description
	DT-45096-40 J-45096-40 Transflow Oil Fill Adapter

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-45124 J-45124 Removal Bridge

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-45124-9 J-45124-9 Puller Leg

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-45201 J-45201 Cooler Line Seal Remover

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-46409 Torque Converter Lifting Handles

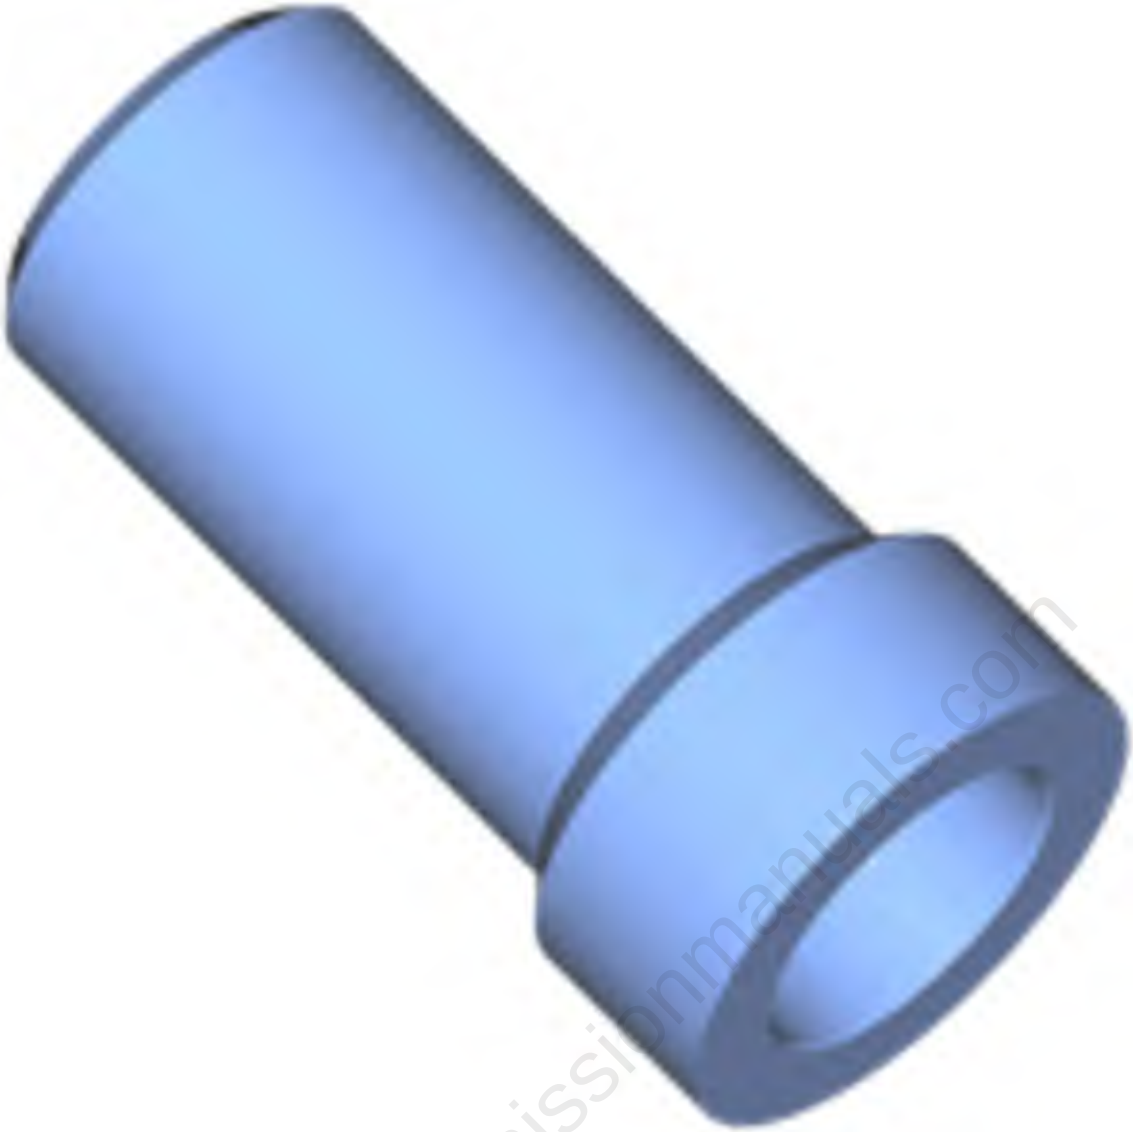
transmissionmanuals.com

Illustration	Tool Number/Description
	DT-47770 Seal Installer

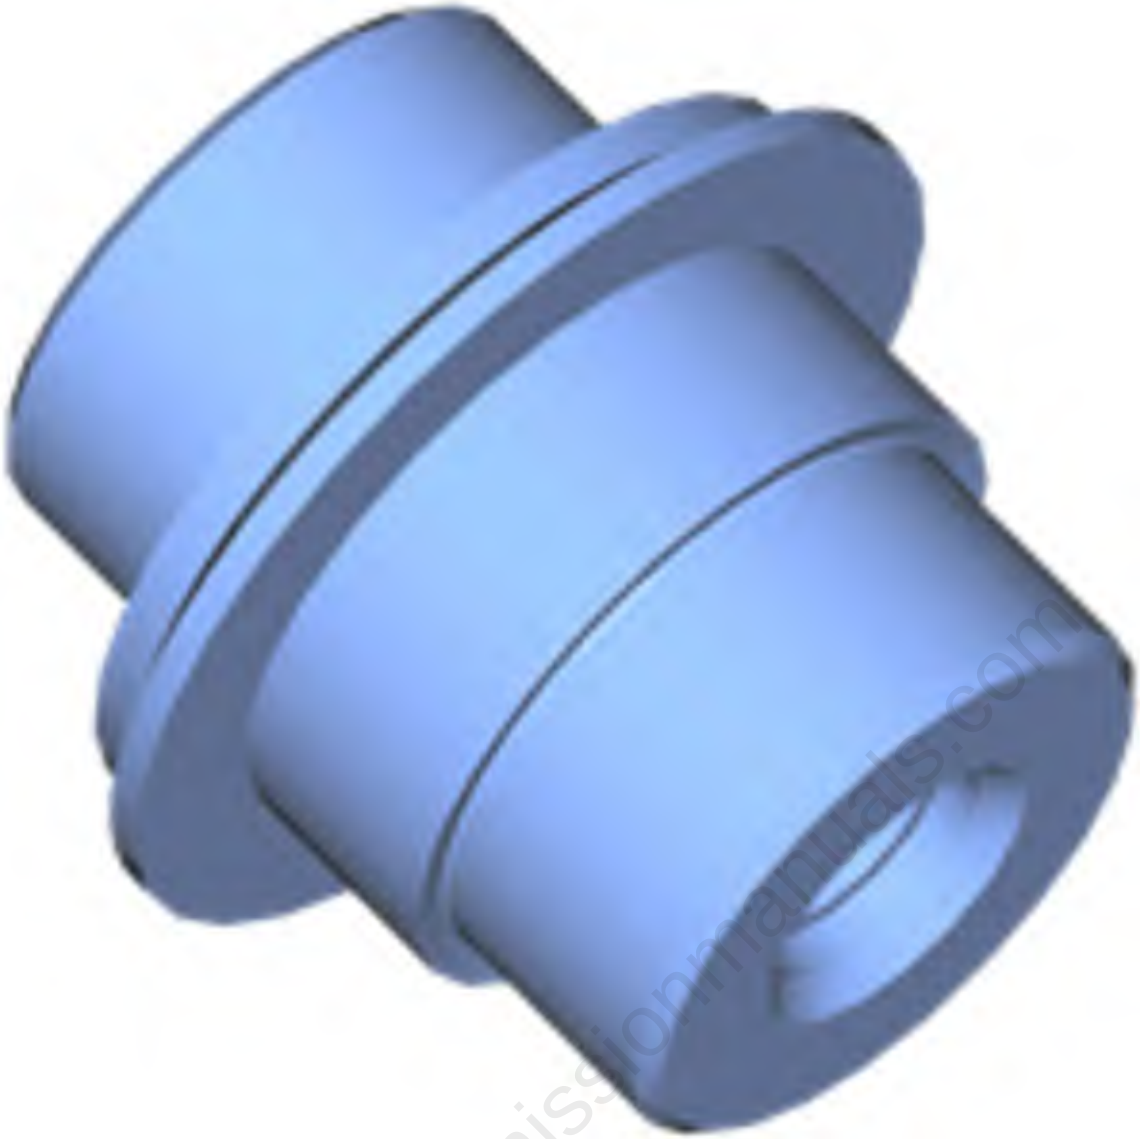
transmissionmanuals.com

Illustration	Tool Number/Description
	DT-48989 Holding Fixture

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-50648 Case Seal Installer

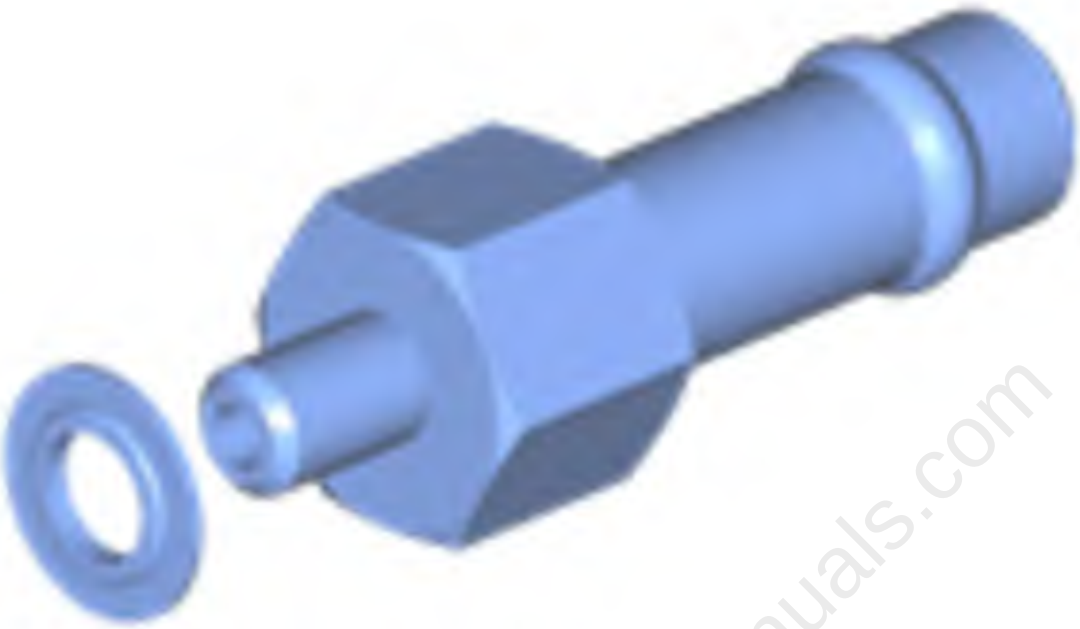
transmissionmanuals.com

Illustration	Tool Number/Description
	DT-50897 Bearing Installer

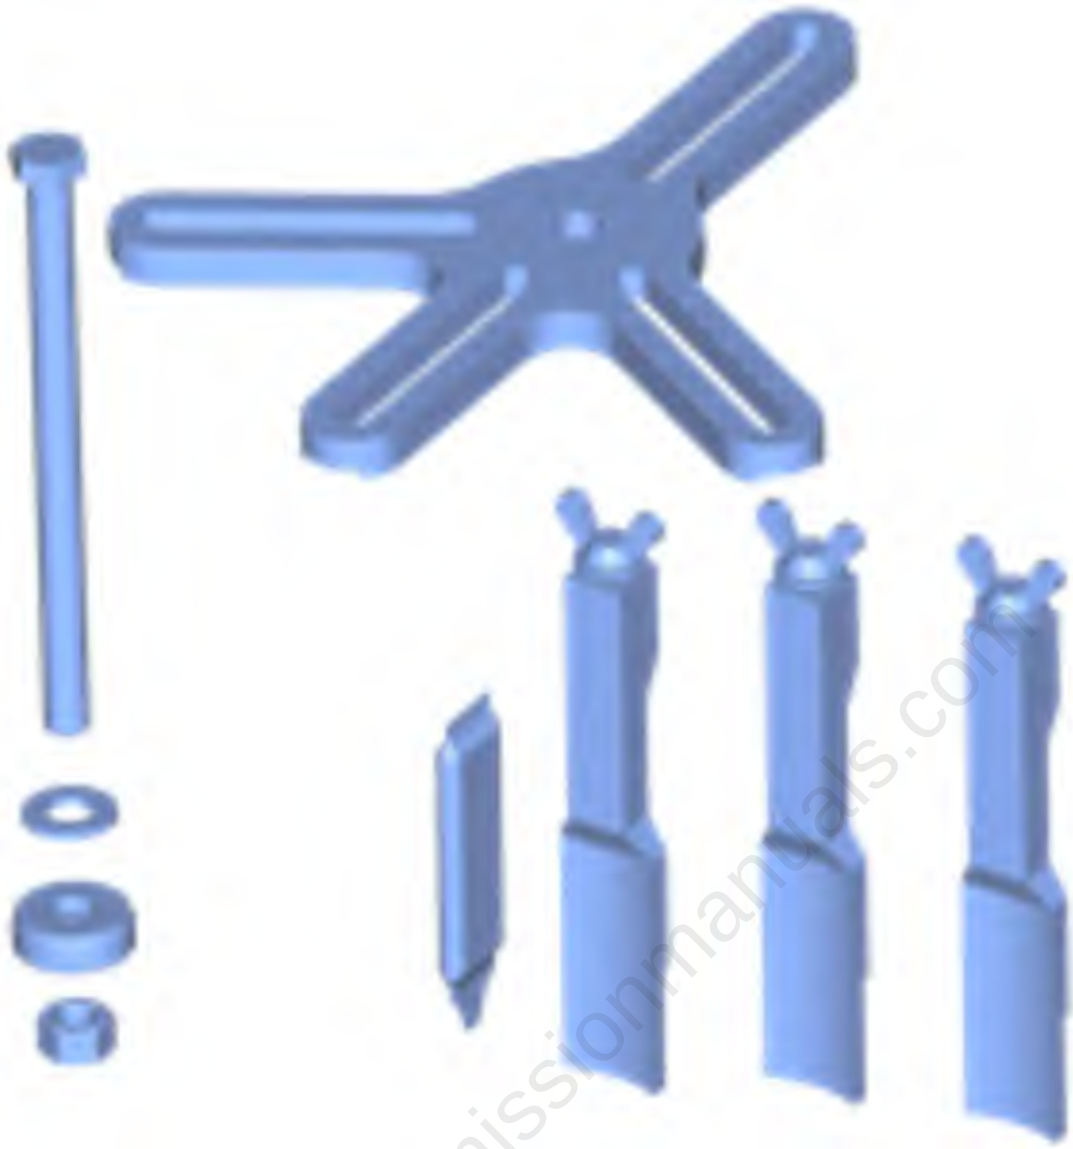
transmissionmanuals.com

Illustration	Tool Number/Description
	DT-50921 Output Carrier Lifter

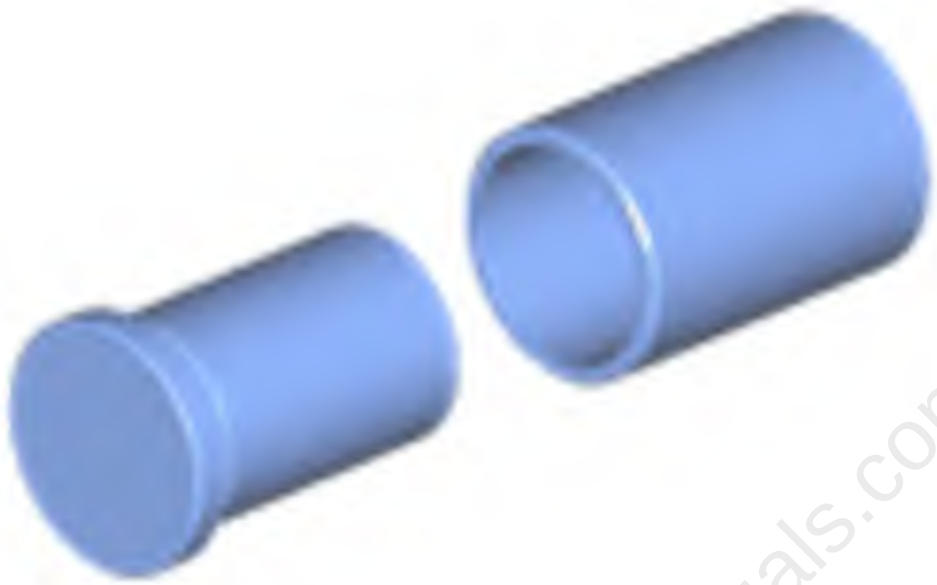
transmissionmanuals.com

Illustration	Tool Number/Description
	DT-51190 Fluid Fill Pan Adapter

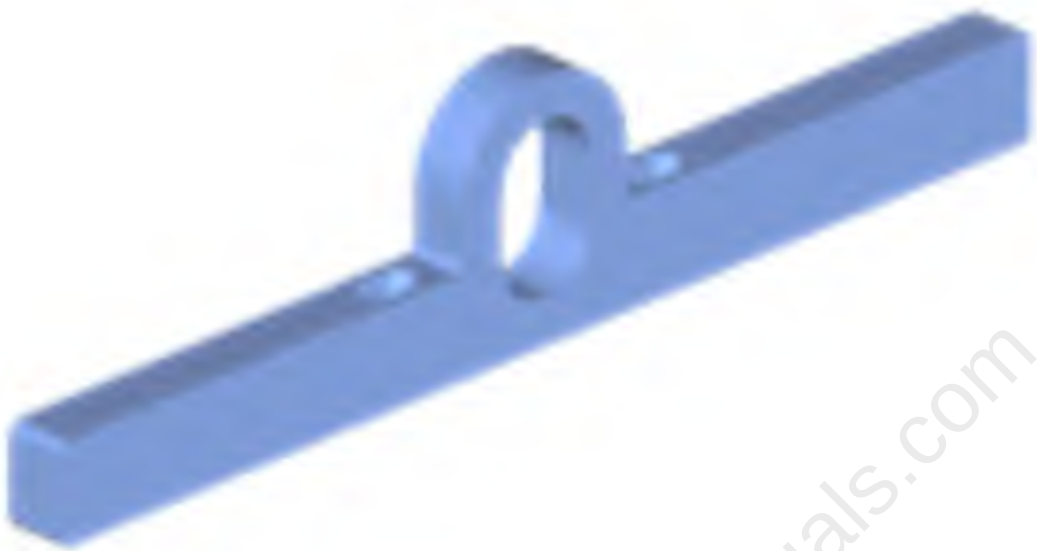
transmissionmanuals.com

Illustration	Tool Number/Description
	DT-51892 Press Tool

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-52089 Wiring Harness Connector Remover

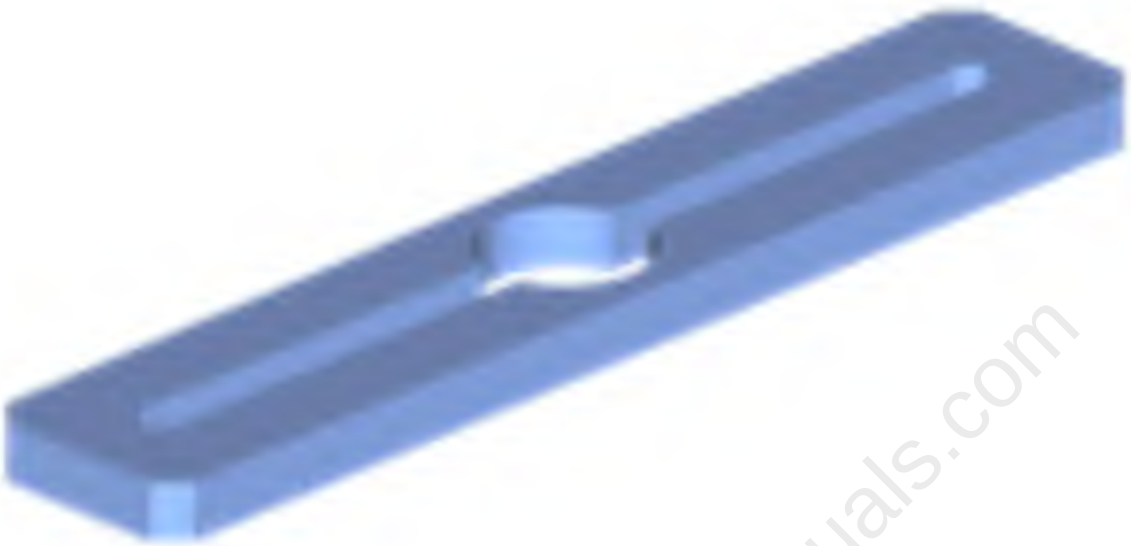
transmissionmanuals.com

Illustration	Tool Number/Description
	DT-52090 Rotating Shell Assembly Lift Adapter Bar

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-52696 One-Way Clutch Aligner

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-52697 End Play Gauge Plate

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-52698 Piston Return Spring Compressor

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-52699 Turbine Shaft Seal Sizer

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-52701 Turbine Shaft Small Seal Installer

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-52702 Turbine Shaft Large Seal Installer

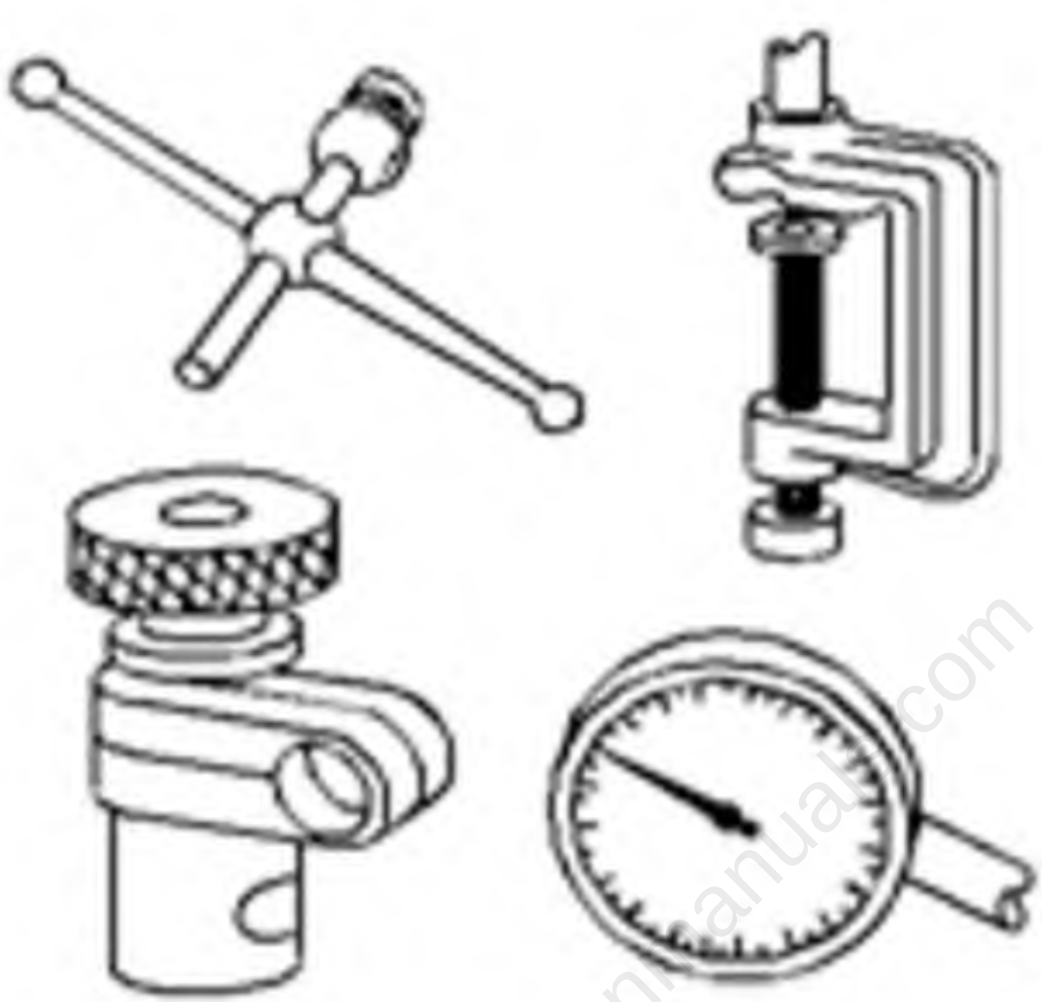
transmissionmanuals.com

Illustration	Tool Number/Description
	DT-52703 Direct Overdrive Sun Gear Shaft Seal Installer

transmissionmanuals.com

Illustration	Tool Number/Description
	DT-52704 Torque Converter Fluid Seal Installer

transmissionmanuals.com

Illustration	Tool Number/Description
	GE-8001 J-8001 Dial Indicator Set

transmissionmanuals.com

Illustration	Tool Number/Description
	J-38869 Seal Installer

transmissionmanuals.com

Illustration	Tool Number/Description
	J-45012 Holding Fixture

transmissionmanuals.com