
INSPECTION


1. Turn ignition switch OFF.
2. Remove the air cleaner.
   (Refer to Engine Mechanical System - "Air cleaner")
3. Disconnect the solenoid valve connector (A).

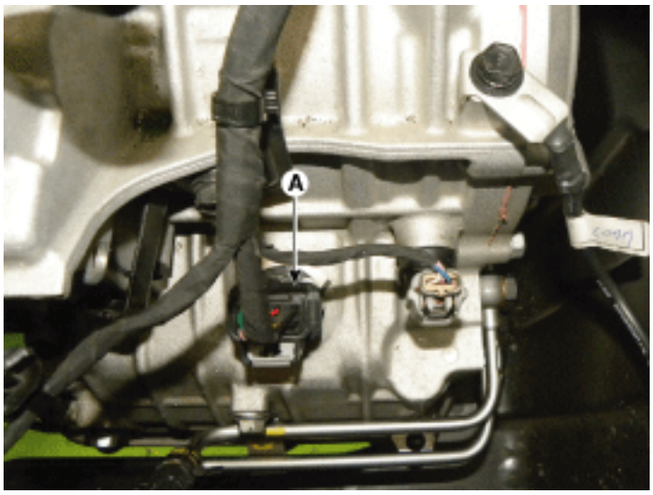

4. Measure resistance between signal terminal and ground terminal.
5. Check that the resistance is within the specification.


REMOVAL

1. Remove the valve body assembly.
   (Refer to Hydraulic System - "Valve Body")
2. Remove the main harness (A) from the solenoid valve.

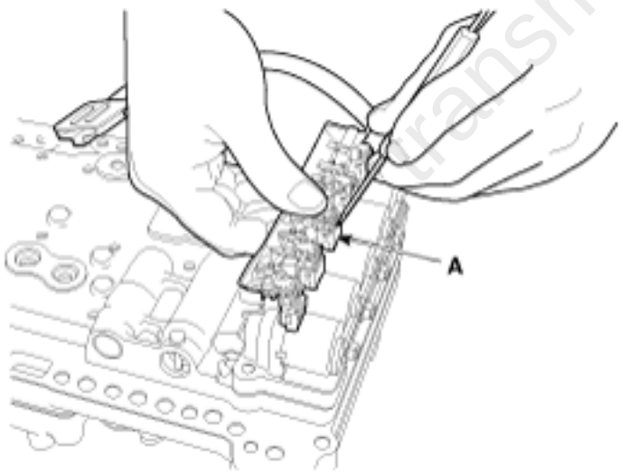


3. Remove the solenoid valve assembly (A) from the valve body.

transmissionmanuals.com

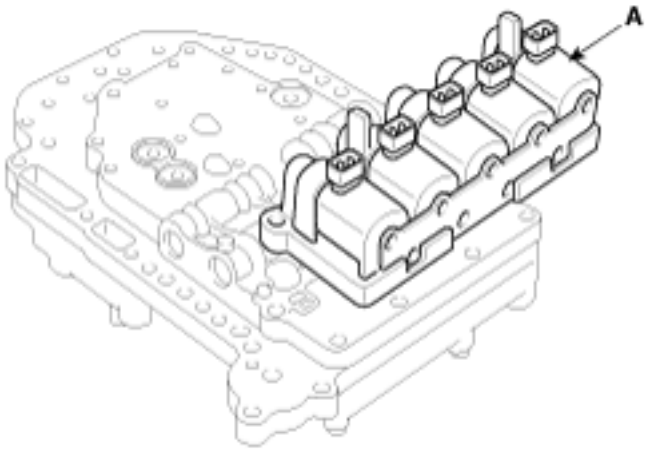

4. Remove the damper clutch control solenoid valve (B) after removing the bracket (A).

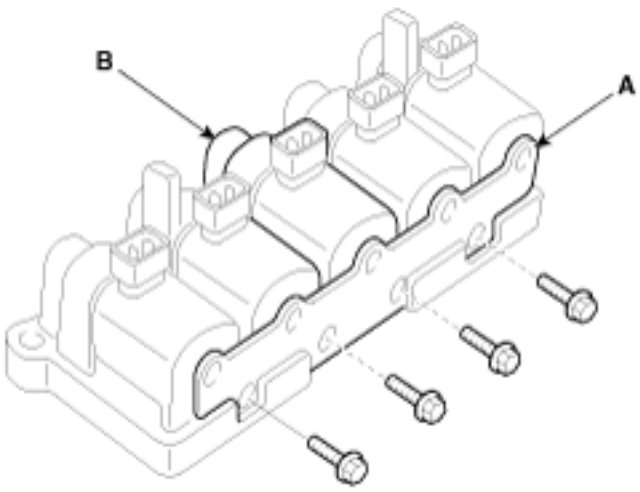

INSTALLATION

1. Install in the reverse order of removal.

transmissionmanuals.com