
CIRCUIT DIAGRAM

[Circuit Diagram]

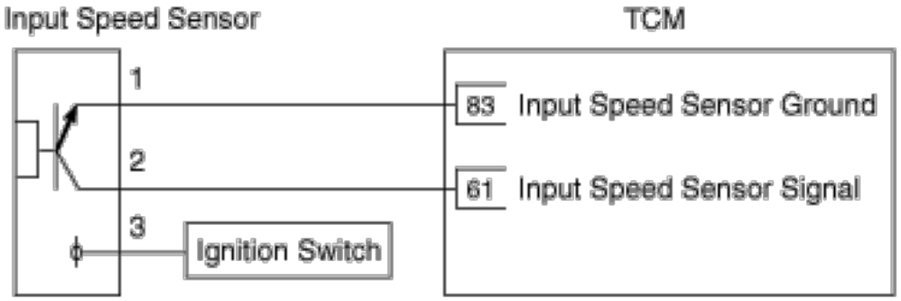


[Connection Information]

Terminal	Connected to	Function
1	TCM (83)	Ground
2	TCM (61)	Signal
3	Ignition Switch	Power

[Harness Connector]



Input Speed Sensor Connector

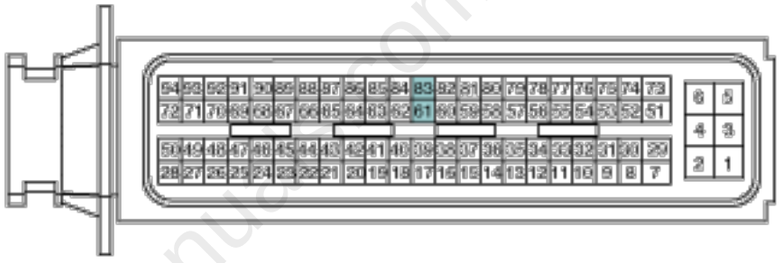

TCM Connector

transmissionmanuals.com