
DESCRIPTION

Component Location: Line pressure control solenoid valve is attached to the valve body.

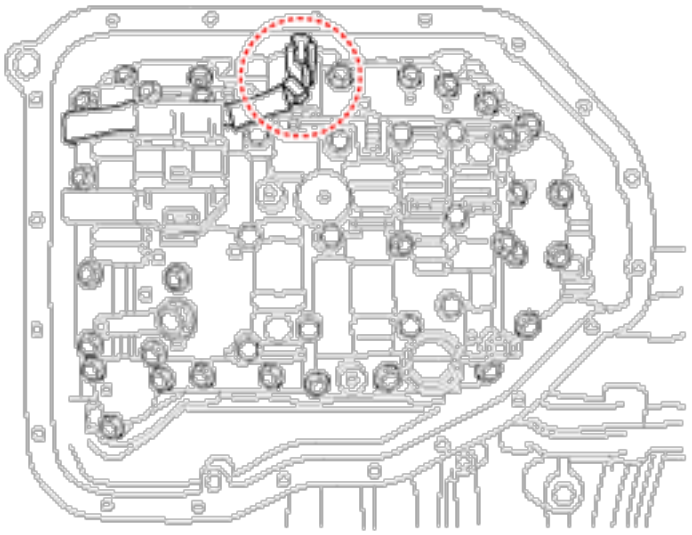

Functions

- Line pressure control solenoid valve directly controls the hydraulic pressure inside the line pressure.
- The amount of oil flow is determined by current signal for maintaining constant line pressure.

transmissionmanuals.com