
INSPECTION

1. Turn ignition switch OFF.
2. Remove the air cleaner.
   (Refer to Engine Mechanical System - "Air cleaner")
3. Disconnect the solenoid valve connector (A).

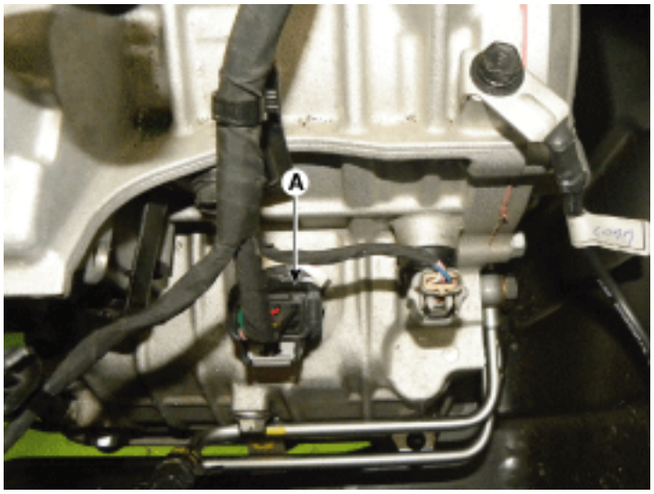

4. Measure resistance between signal terminal and ground terminal.
5. Check that the resistance is within the specification.

transmissionmanuals.com