
CIRCUIT DIAGRAM

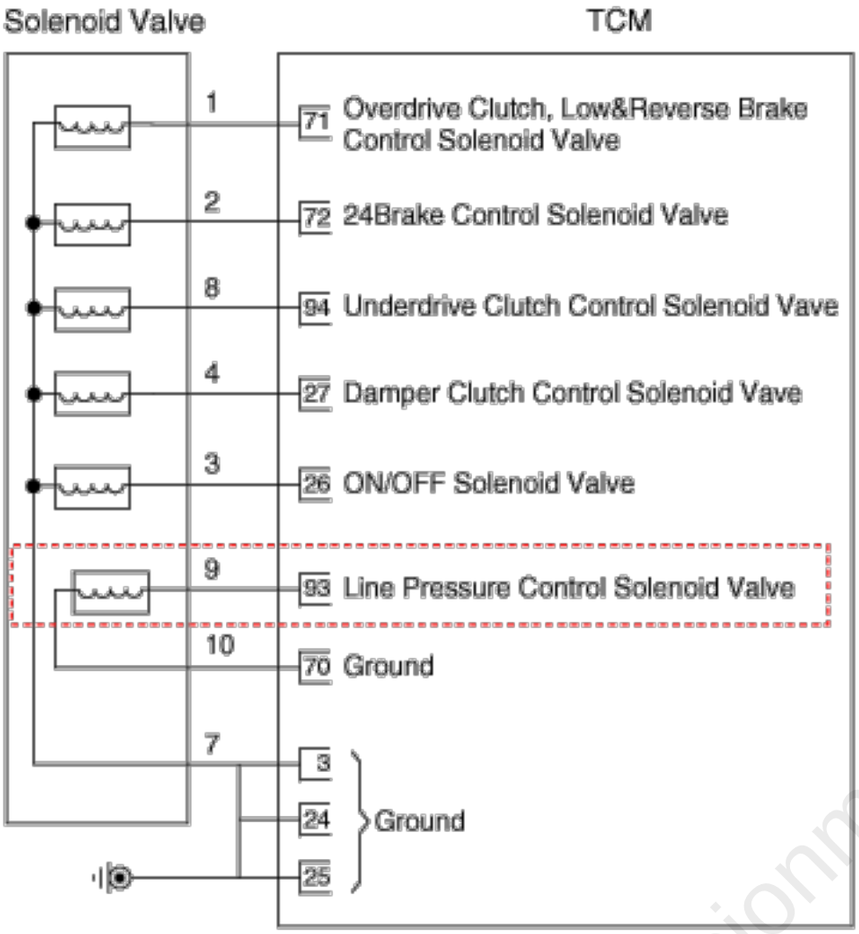


[Connection Information]

Terminal	Connected to	Function
1	TCM (71)	Overdrive Clutch, Low&Reverse Brake Control Solenoid Valve
2	TCM (72)	24Brake Control Solenoid Valve
3	TCM (26)	ON/OFF Solenoid Valve
4	TCM (27)	Damper Clutch Control Solenoid Vave
7	TCM (3)	Ground
8	TCM (94)	Underdrive Clutch Control Solenoid Vave
9	TCM (93)	Line Pressure Control Solenoid Valve
10	TCM (70)	Ground

[Harness Connector]



Solenoid Valve

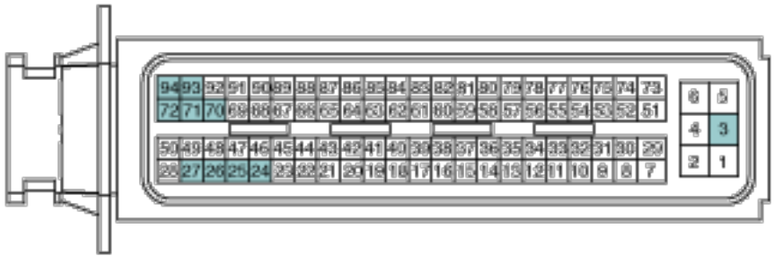

TCM Connector

transmissionmanuals.com