
INSPECTION

1. Check signal waveform of output speed sensor using the GDS


Specification : Refer to "Signal Wave Form" section.

REMOVAL

1. Disconnect the negative (-) battery cable.
2. Disconnect the input speed sensor connector (A).

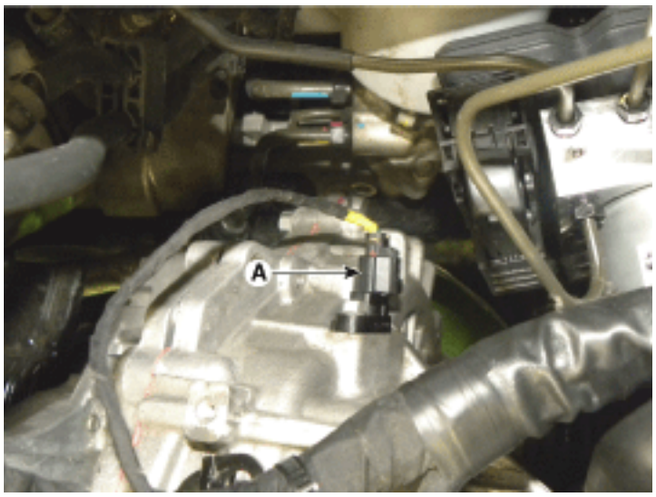

3. Remove the output speed sensor (A).

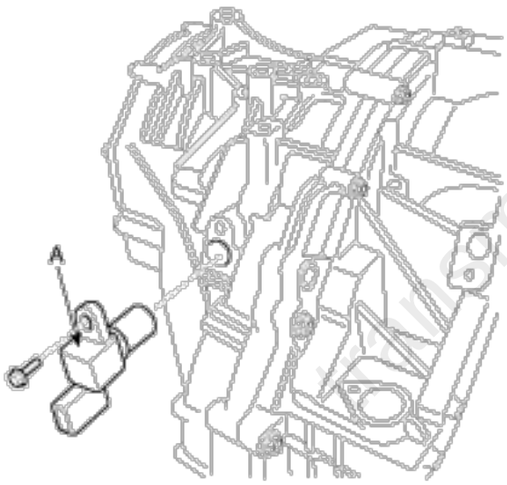

NOTICE

Do not allow dust or other foreign particles to enter the transaxle after removing the output speed sensor.

INSTALLATION


1. Install the new O-ring to the output speed sensor.
2. Install the output speed sensor (A).

Tightening torque :
9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lb-ft)

transmissionmanuals.com

NOTICE

While installing the output speed sensor, do not allow dust or other foreign particles to enter the transaxle.

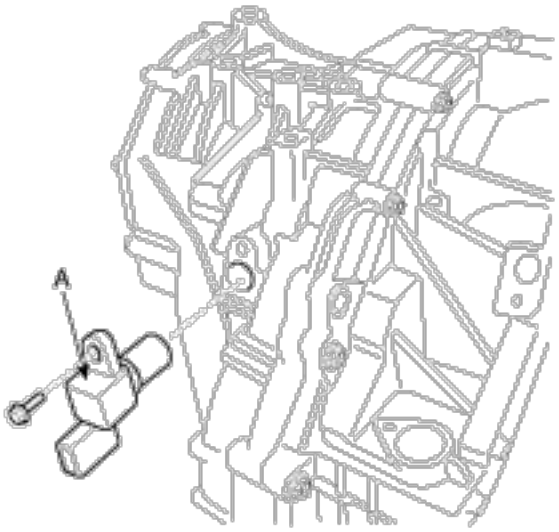

3. Connect the output speed sensor connector (A).



4. Connect the negative (-) battery cable.

transmissionmanuals.com