
CIRCUIT DIAGRAM

[Circuit Diagram]

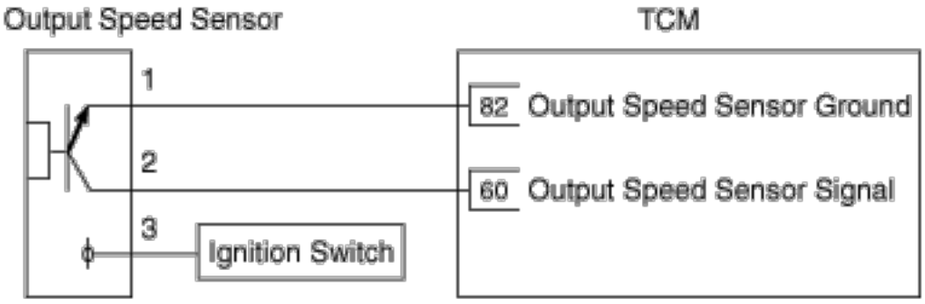


[Connection Information]

Terminal	Connected to	Function
1	TCM (82)	Ground
2	TCM (60)	Signal
3	Ignition Switch	Power

[Harness Connector]



Output Speed Sensor Connector

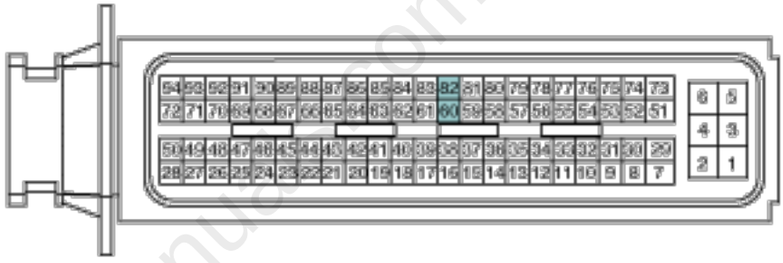

TCM Connector

transmissionmanuals.com