
TCM CONNECTOR AND TERMINAL FUNCTION

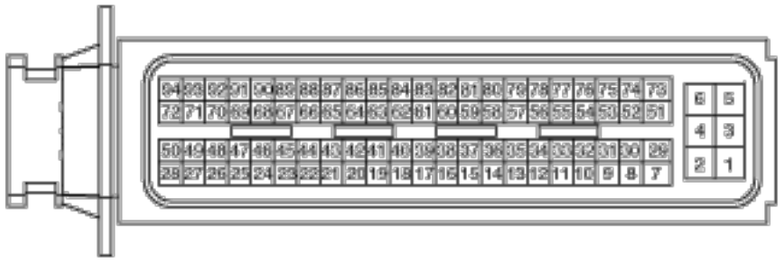


TCM Connector

Pin	Description	Pin	Description
1	Ground output stages(ECU)	48	Gear information to meter cluster
2	-	49	Output vehicle speed
3	Ground electronic	50	-
4	Voltage supply for transmission (Output stages #1)	51	-
5	Voltage supply for transmission (Output stages #2)	52	-
6	-	53	-
7	-	54	-
8	-	55	-
9	-	56	-
10	-	57	Oil temperature sensor (+)
11	-	58	
12	-	59	
13	-	60	Output speed sensor signal
14	-	61	Input speed sensor signal
15	-	62	
16	-	63	
17	-	64	
18	-	65	OD off request form ACC
19	-	66	Lever position D
20	-	67	Lever position P
21	-	68	Inhibitor switch L
22	-	69	
23	-	70	Ground transmission #3
24	Ground transmission #1	71	PCSV-A (Overdrive, Low & Reverse brake control valve)
25	Ground transmission #2	72	PCSV-B(24 brake control valve)
26	ON/OFF solenoid valve	73	-

transmissionmanuals.com

27	PCSV-D (Damper clutch control solenoid valve)	74	-
28	-	75	-
29	-	76	-
30	-	77	-
31	-	78	-
32	-	79	-
33	-	80	Oil temperature sensor (-)
34	-	81	-
35	-	82	Output speed sensor ground
36	-	83	Input speed sensor ground
37	-	84	-
38	-	85	-
39	-	86	-
40	-	87	-
41	-	88	Lever position R
42	-	89	Inhibitor switch 2
43	-	90	Inhibitor switch 3
44	-	91	Lever position N
45	-	92	Ground transmission #4
46	-	93	VFS valve (Line pressure control solenoid valve)
47	Low gear information to ACC	94	PCSV-C(Underdrive clutch control valve)

transmissionmanuals.com

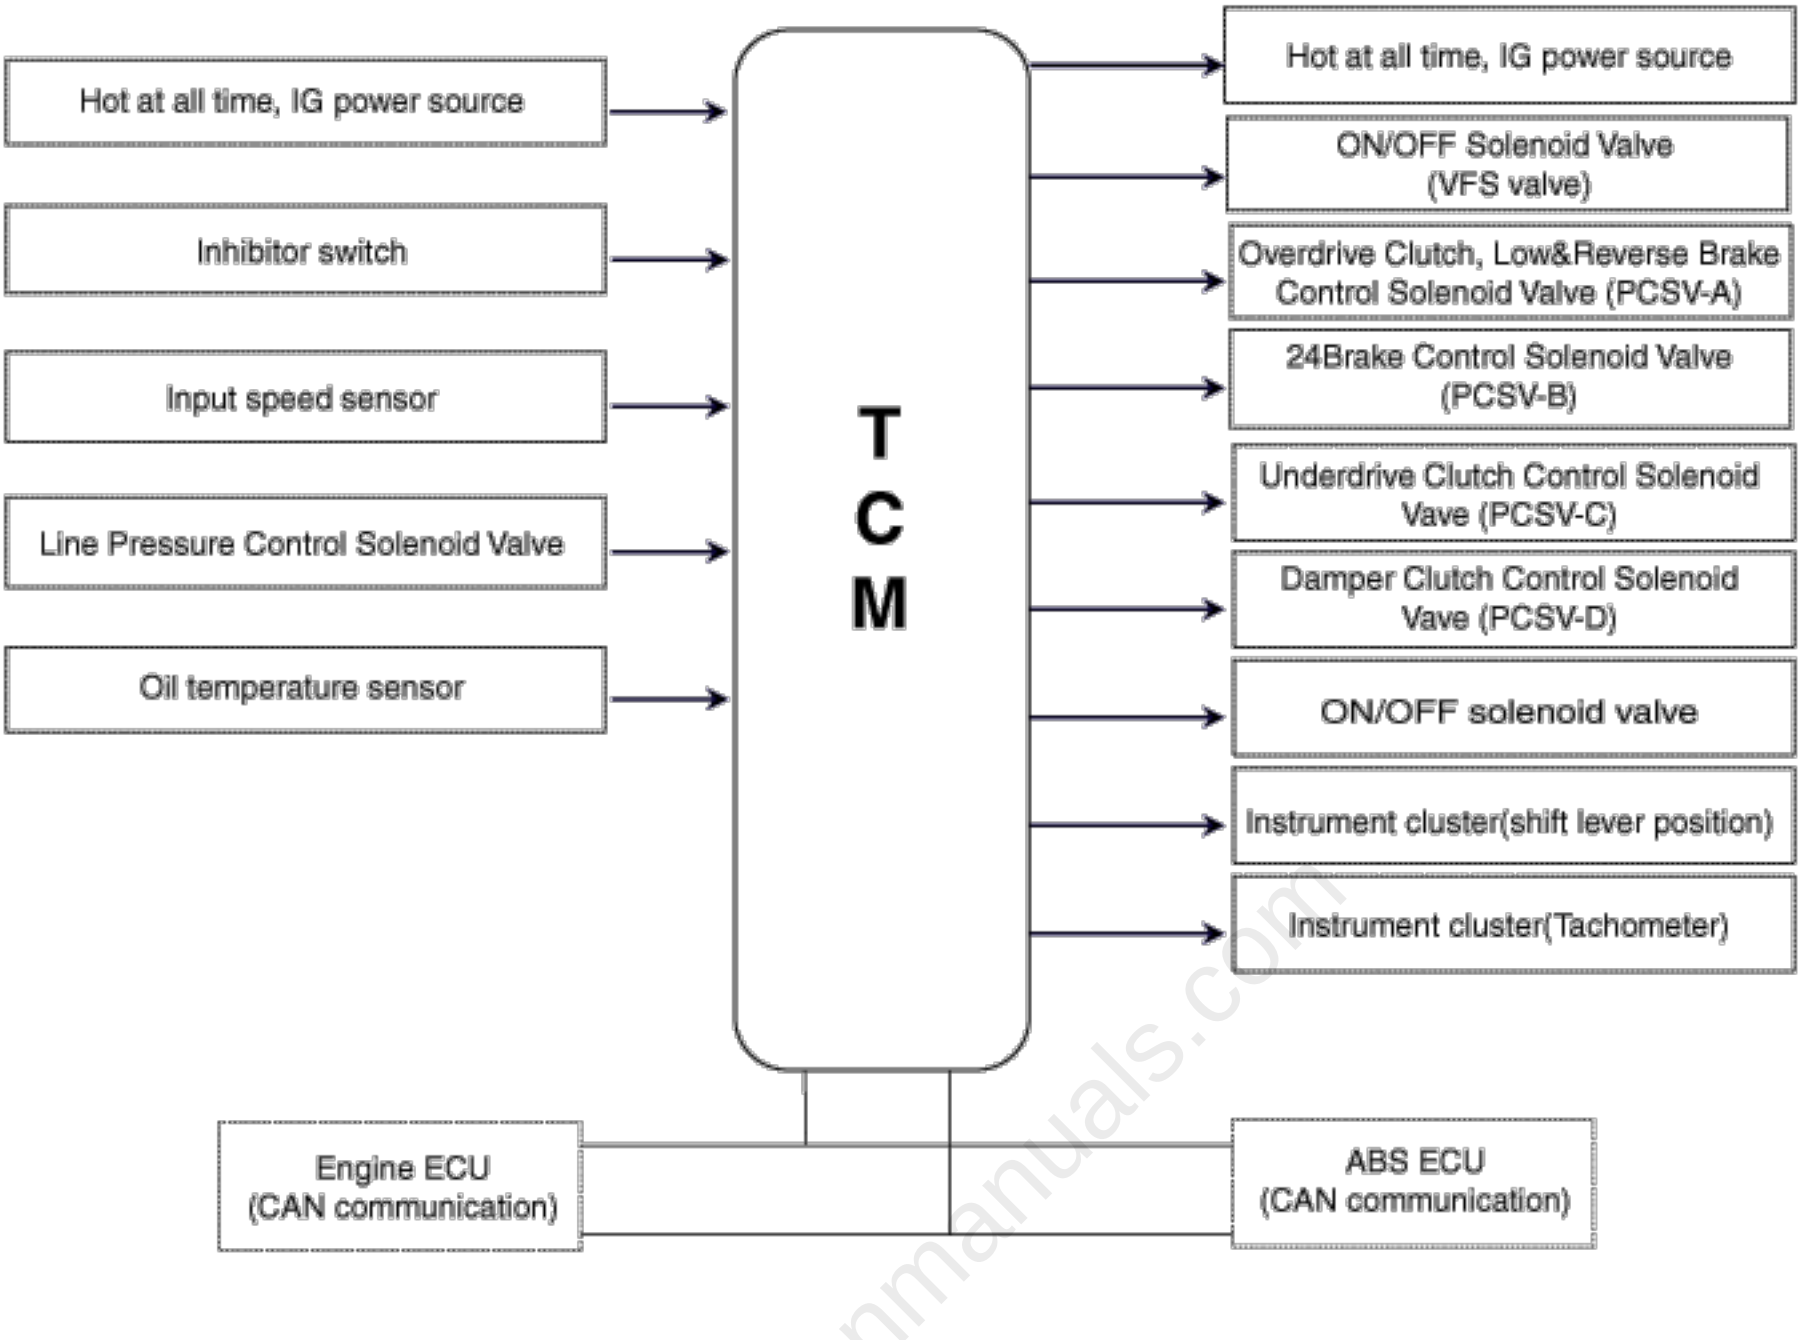

transmissionmanuals.com