
DESCRIPTION

Component Location: Installed on the valve body.

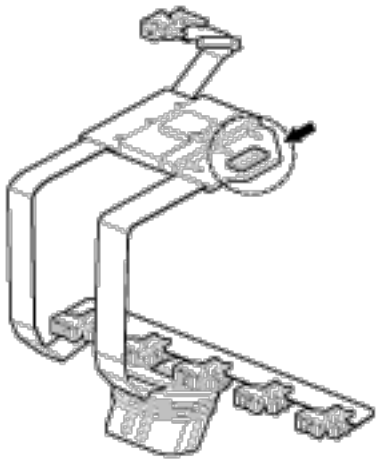

Oil Temperature Sensor

Functions

- Detect the temperature of ATF through the thermistor which is exposed outside.
- When shifting the range, it is used as the oil pressure control information.

transmissionmanuals.com