
COMPONENTS

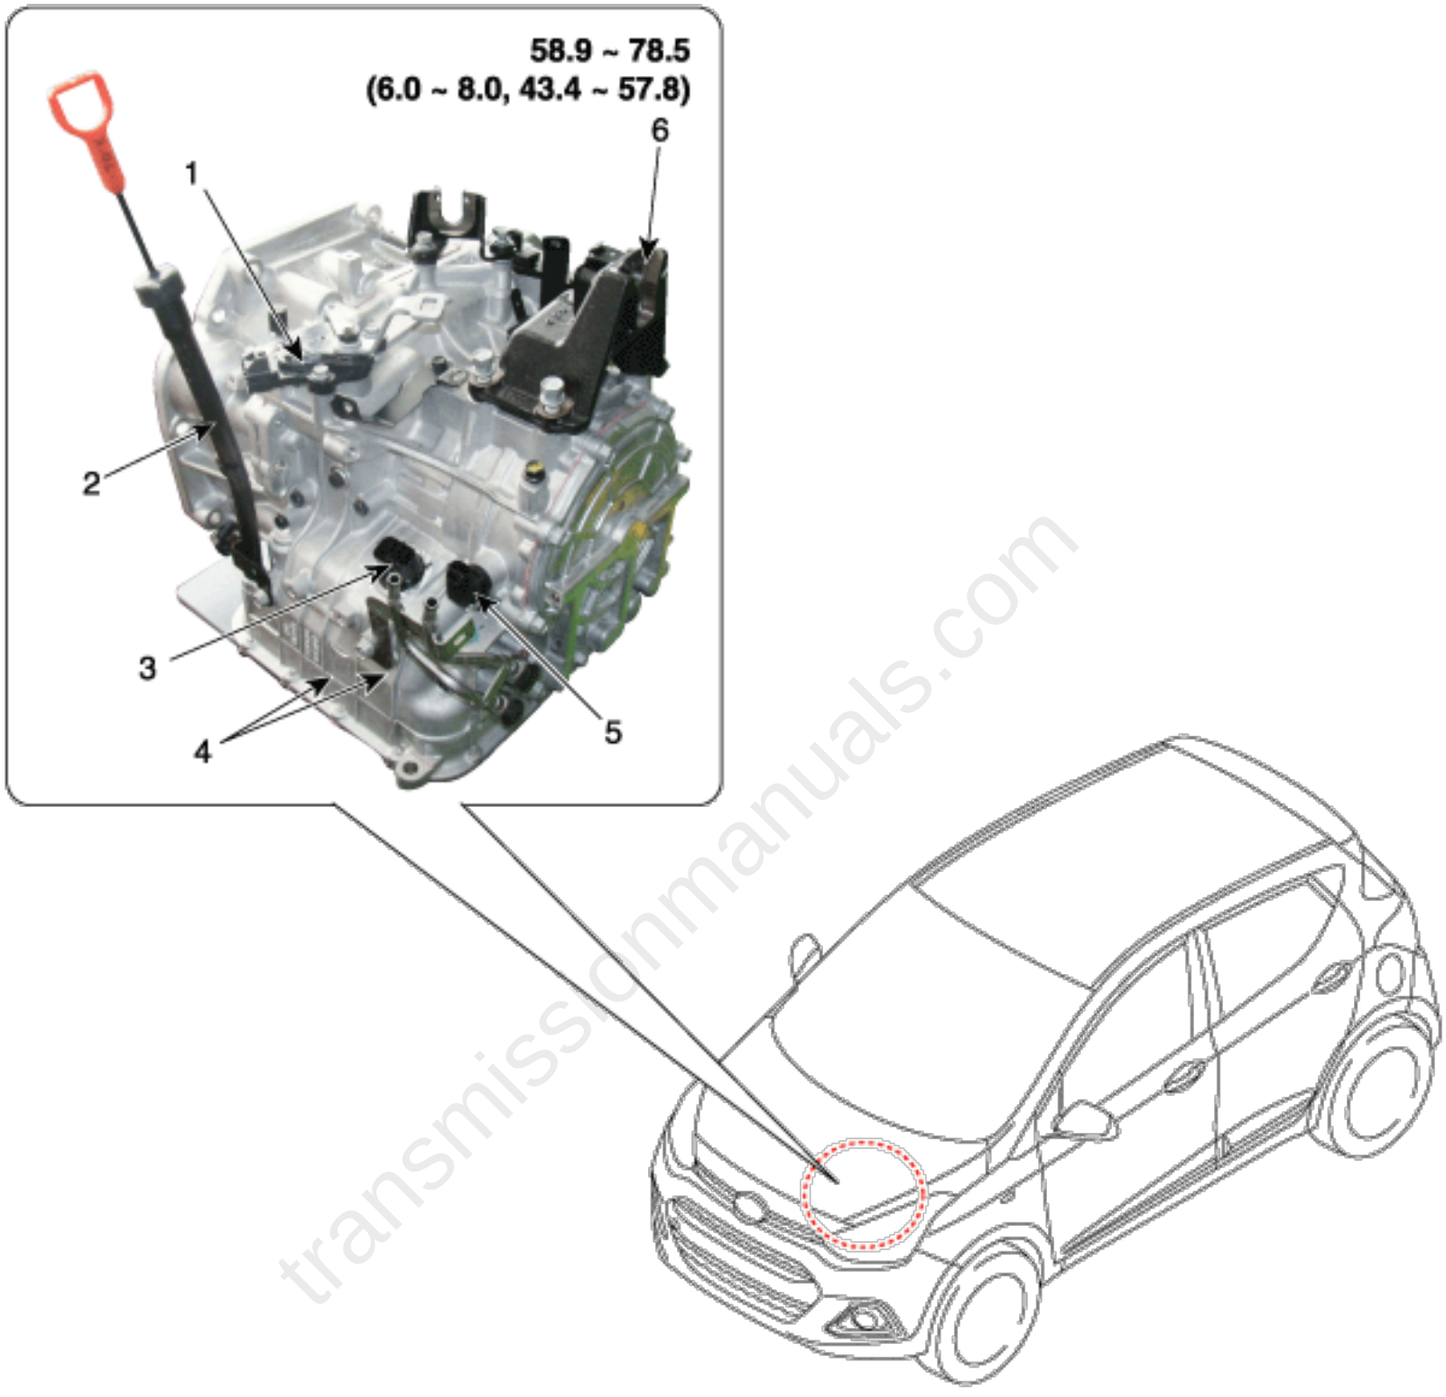

transmissionmanuals.com

Tightening torque: **N.m (kgf.m, lb-ft)**

1. Inhibitor switch	4. Feed tube
2. Oil level gauge	5. Input speed sensor
3. Solenoid valve connector	6. Transaxle support bracket