
REMOVAL

1. Remove the air cleaner assembly.
   (Refer to Engine Mechanical System - "Air cleaner")


2. Remove the battery and battery tray.
   (Refer to Engine Electrical System - "Battery")

3. Remove the shift cable.
   (1) Loosen the nut (A).

   Tightening torque:
   9.8 ~ 14.7 N.m (1.0 ~ 1.5 kgf.m, 7.2 ~ 10.8 lb-ft)

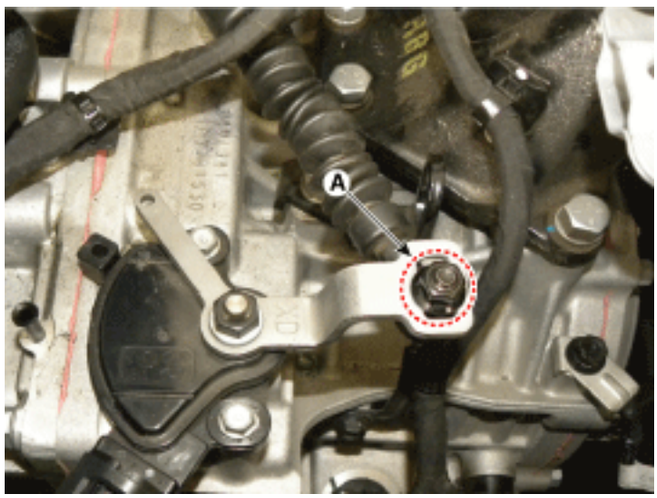

   (2) Disconnect the shift cable (B) from the shift cable bracket (A).

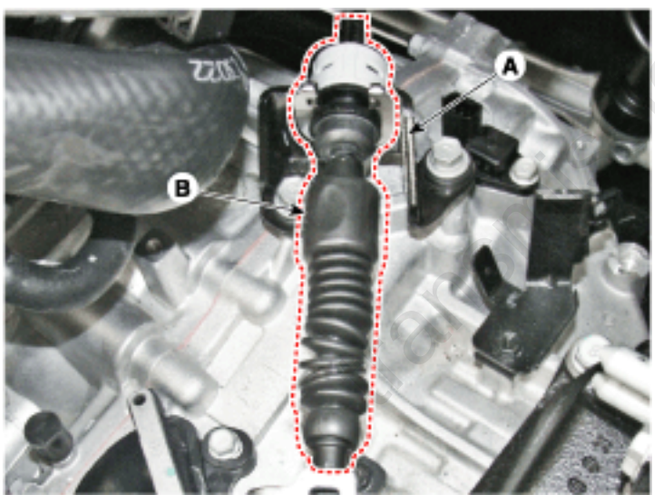


NOTICE

- Do not reuse the clip (A).


4. Remove the floor console.
   (Refer to Body - "Floor console")

5. Remove the shift cable (A) from the shift lever.

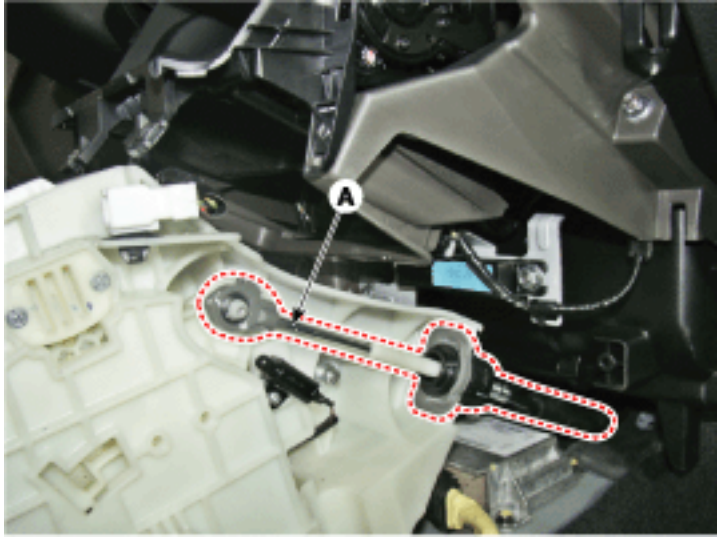

6. Remove the retainer after loosen the nut (A).

Tightening torque:
9.8 ~ 14.7 N.m (1.0 ~ 1.5 kgf.m, 7.2 ~ 10.8 lb-ft)

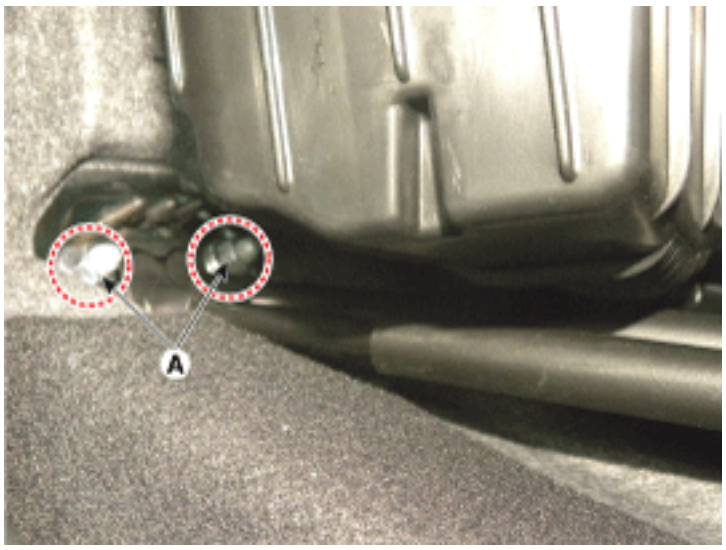

transmissionmanuals.com

INSTALLATION

1. Install in the reverse order of removal.


> **NOTICE**
>
> Set shift lever and inhibitor switch manual control lever to "N" position.

ADJUSTMENT

Adjusting method for shift cable

1. Set room side shift lever and T/M side manual control lever to "N" position.
2. Connect room side shift lever and shift cable.
3. Push cable to "F" direction shown to eliminate FREE PLAY.
4. Tighten adjusting nut (A).

Tightening torque:
9.8 ~ 14.7 N.m (1.0 ~ 1.5 kgf.m, 7.2 ~ 10.8 lb-ft)

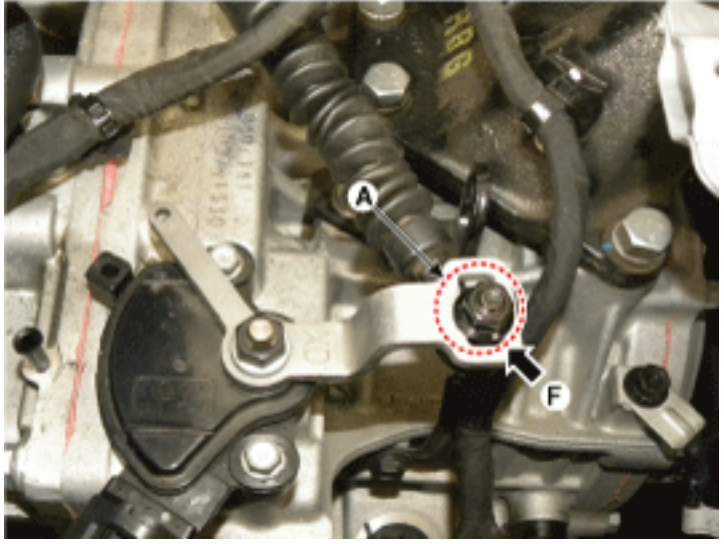

5. After adjusting according check to be sure that this part operates surely at each range of T/M side corresponding to each position of shift lever.

transmissionmanuals.com