

REMOVAL

1. Pull the knob (A) in the direction of "F" and remove it, and then remove the console upper cover.

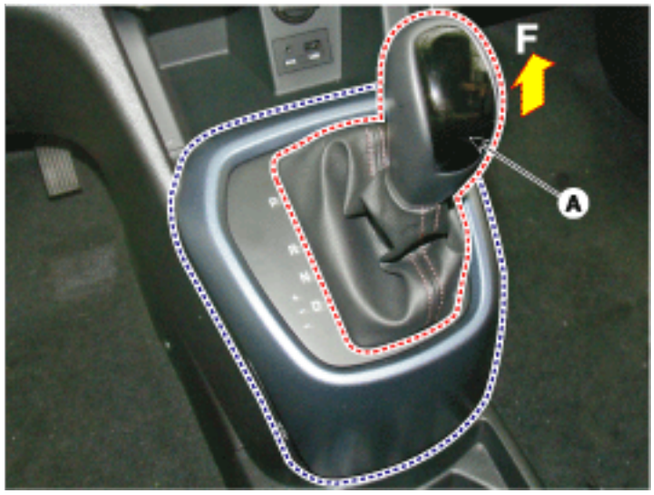


2. Rrmove the knob from the console upper cover after press the lock.

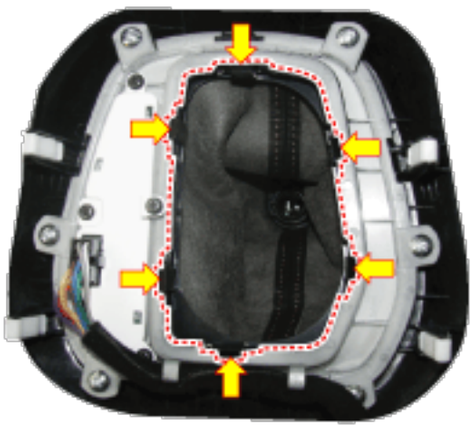


3. Remove the floor console.
   (Refer to Body - "Floor console")

4. Disconnect the manual mode switch connector (A).

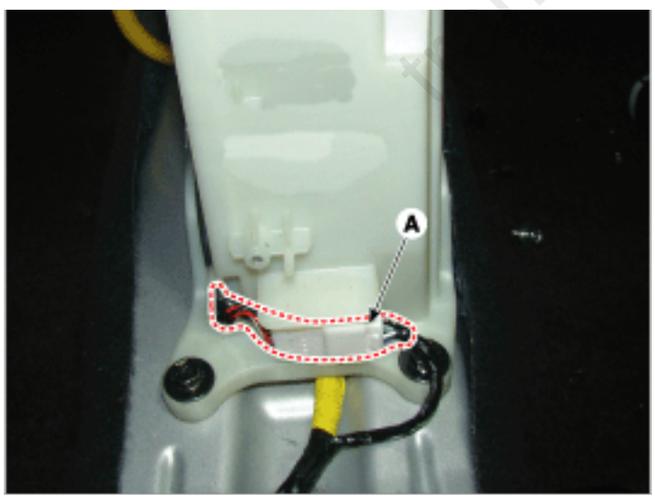


5. Remove the shift cable (A) from the shift lever.

transmissionmanuals.com

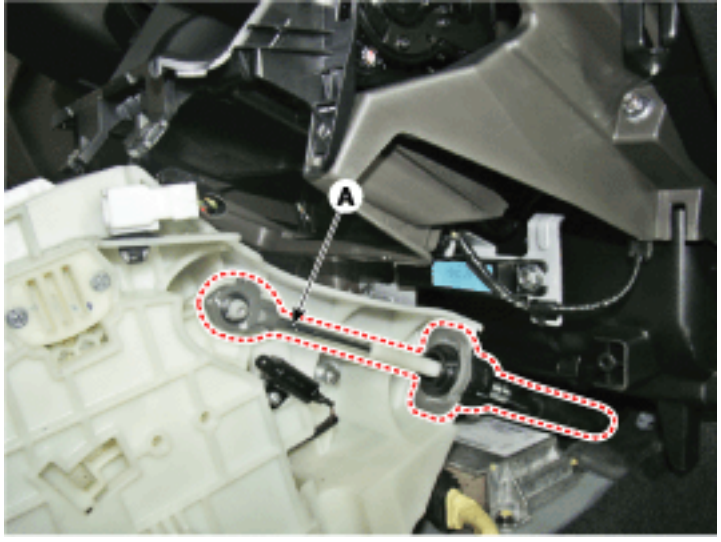


6. Remove the shift lock cable from the shift lever after loosening a nut (A).

Tightening torque:
9.8 ~ 14.7 N.m (1.0 ~ 1.5 kgf.m, 7.2 ~ 10.8 lb-ft)

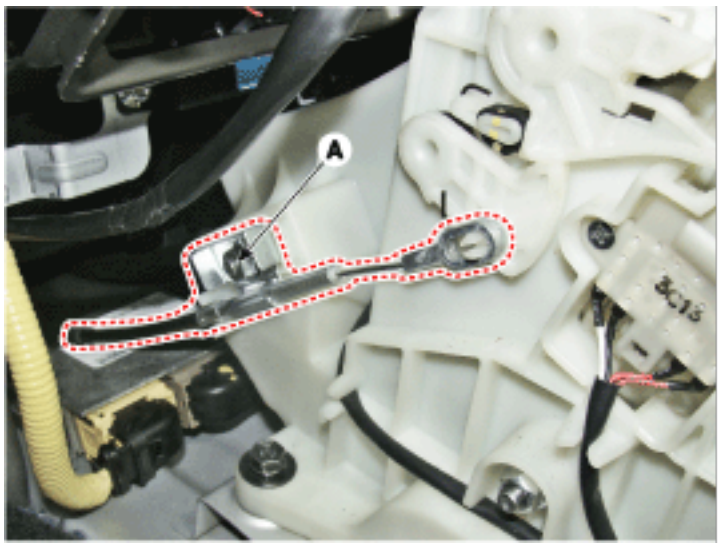

7. Remove the shift lever assembly (A) by loosening the bolts.

Tightening torque:
9.8 ~ 14.7 N.m (1.0 ~ 1.5 kgf.m, 7.2 ~ 10.8 lb-ft)

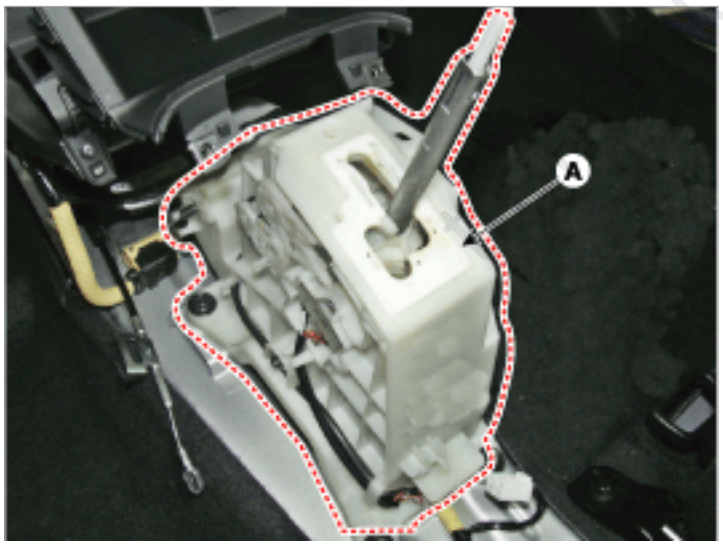

INSTALLATION

1. Install in the reverse order of removal.

NOTICE

- When installing, set shift lever and inhibitor switch manual control lever to "N" position.
- Adjust the shift lock cable.
  (Refer to Automatic Transaxle Control System - "Shift Lock Cable")

transmissionmanuals.com