
Description

Ignition lock switch is mounted on the clutch pedal.
Ignition lock switch is operated when you press the clutch pedal.
If the clutch pedal is not pressed down, the engine is not started.

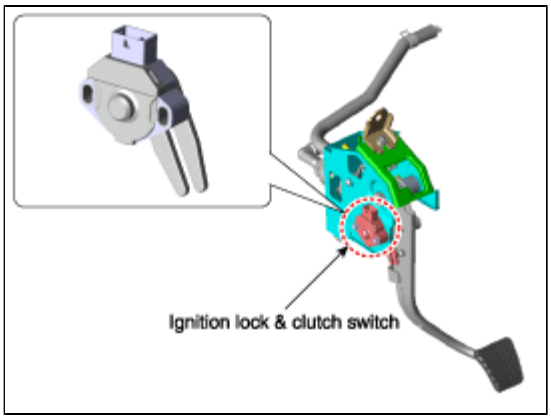

Rate this Document

- Document Type : SHOP
- Document Rating :

Please rate the above contents on a scale of 1 to 5.

Little Value 1 2 3 4 5 Excellent Value

transmissionmanuals.com