
Removal


1. Remove the battery and battery tray.
   (Refer to Engine Electrical System - "Battery")
2. Remove the engine control module (ECM).
   (Refer to Engine Control System - "ECM")
3. Disconnect the clutch tube (A).
4. Remove the clutch regulator (B) from the clutch master cylinder, after removing the snap pin (C).

Tightening torque :
12.6 - 16.7 N.m (1.3 - 1.7 kgf.m, 9.4 - 12.3 Ib-ft)

⚠ CAUTION

â Do not spill brake fluid on the vehicle it may damage the paint if brake fluid does contact the paint, wash it ¢ off immediately with water.

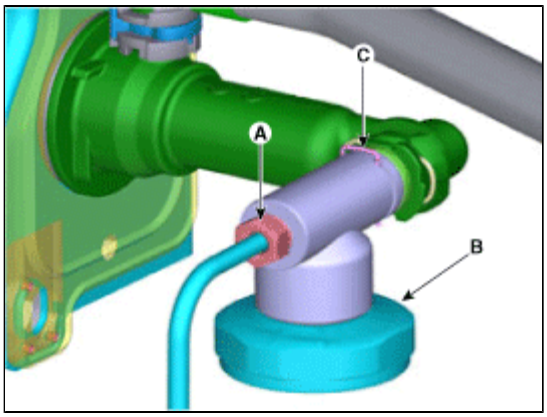

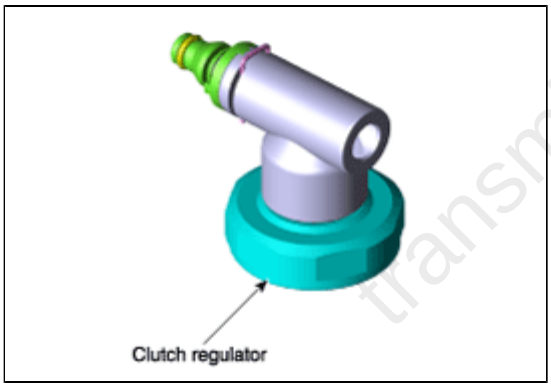

transmissionmanuals.com

Installation

1. To install, reverse the removal procedure.
2. Perform bleeding air procedure in the clutch system.
   (Refer to Clutch System - "Repair procedures")

Rate this Document
□ Document Type : SHOP
□ Document Rating :

Please rate the above contents on a scale of 1 to 5.

Little Value 1 2 3 4 5 Excellent Value

transmissionmanuals.com