
Removal


1. Disconnect the push rod (A) from the clutch pedal.

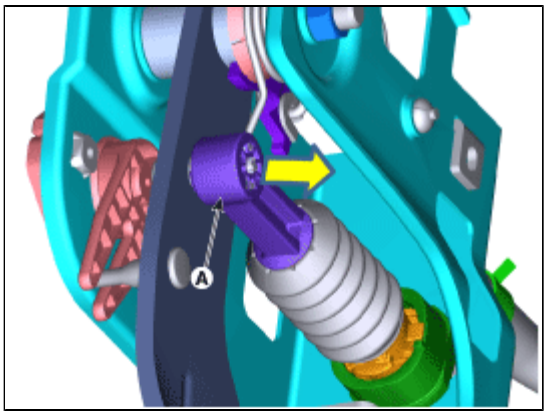


2. Remove the air cleaner assembly and air duct.
   (Refer to Engine Mechanical System - "Air Cleaner")
3. Remove the battery and battery tray.
   (Refer to Engine Electrical System - "Battery")
4. Remove the engine control module (ECM).
   (Refer to Engine Control System - "ECM")
5. Disconnect the clutch regulator (B) after removing the snap pin (A).
6. Disconnect the reservoir hose (D) after removing the pin (C).

⚠ CAUTION

â Do not spill brake fluid on the vehicle it may damage the paint if brake fluid does contact the paint, wash it ¢ off immediately with water.

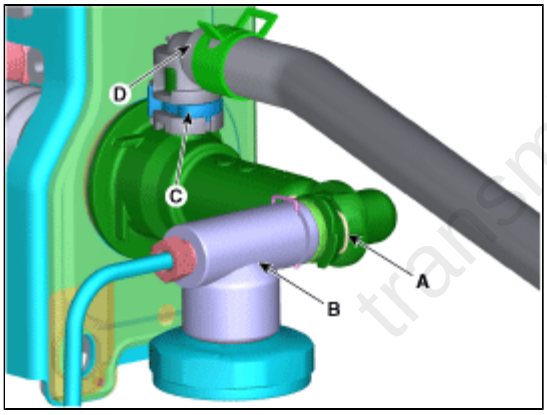

7. Remove the master cylinder (A) by turning it clockwise.

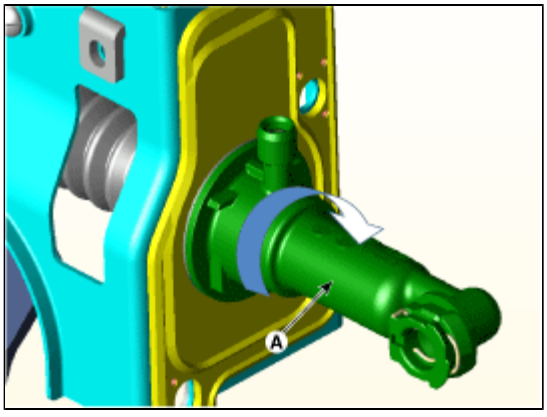

transmissionmanuals.com

Installation

1. To install, reverse the removal procedure.
2. Perform bleeding air procedure in the clutch system.
   (Refer to Clutch System - "Repair procedures")

Rate this Document

- Document Type : SHOP
- Document Rating :

Please rate the above contents on a scale of 1 to 5.

Little Value 1 2 3 4 5 Excellent Value

transmissionmanuals.com