
Components Location

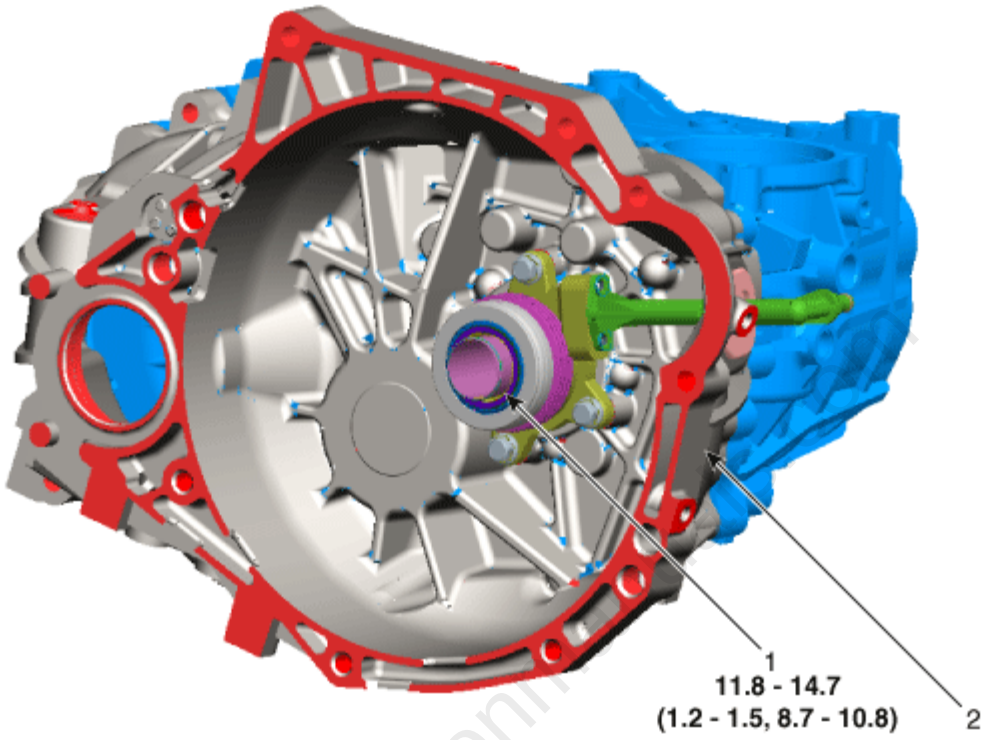

Tightening torque : N.m (kgf.m, lb-ft)

1. Concentric slave cylinder assembly
2. Manual transaxle

transmissionmanuals

Rate this Document
- Document Type : SHOP
- Document Rating :

Please rate the above contents on a scale of 1 to 5.

Little Value 1 2 3 4 5 Excellent Value