
Removal

1. Remove the transaxle assembly.
   (Refer to Manual Transaxle System - " Manual Transaxle")
2. Remove the concentric slave cylinder assembly from the transaxle case by removing bolts (A).

Tightening torque:
11.8 - 14.7 N.m (1.2 - 1.5 kgf.m, 8.7 - 10.8 lb-ft)

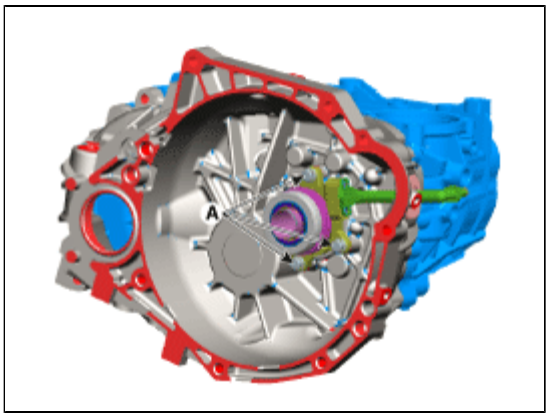

Installation

NOTICE

â Install the concentric slave cylinder bolts. Not to be bent or twisted, Tighten them in diagonal directions.
¢

â When it is assembled, it must be free from invasive foreign matters and oil leakage.
¢

â Do not let grease or oil contaminate the bearing or activating area of the Concentric Slave Cylinder.
¢ (Abnormal slip may cause noise/abrasion while driving.)

1. To install, reverse the removal procedure.
2. Perform bleeding air procedure in the clutch system.
   (Refer to Clutch System - "Repair procedures")

Rate this Document
□ Document Type : SHOP
□ Document Rating :

Please rate the above contents on a scale of 1 to 5.

Little Value 1 2 3 4 5 Excellent Value

transmissionmanuals.com